



5" HD Remote Access PAN & TILT MONITOR

LF3925HD
LF3925HD-2



User Guide

This guide contains important information.
Please keep it for future reference.

Contents

Important Safety Instructions.....	3
Setup.....	4
What's Included?	4
Overview	5
Parent unit Icons	9
Connect, Charge, and Power On the Baby Monitor	13
Two Ways to Connect Your Baby Monitor.....	18
Wi-Fi and Mobile App Set-up	20
Test the best Location for the Baby Unit	21
Protect Your Privacy and Online Security	22
Basic Operation	23
Use the Menu	23
Talk to Your Baby via the Baby Unit.....	24
Zoom, Pan and Tilt the Camera.....	25
Adjust Parent unit Speaker Volume	27
Turn on/off the Parent unit Screen.....	27
Adjust Parent unit Screen Brightness	28
Adjust Baby Unit Speaker Volume	28
Advanced Operation	29
Monitoring Modes (LF3925HD-2 only).....	29
Night Vision.....	30
Night Light.....	31
Lullaby	33
Set Screen off Timer	35
Motion Detection.....	36
Comfort Zone for Your Baby	38
Alert Tone Settings.....	39
RESET	40
Help & Info	40
Wall Mount (Optional)	41
Additional Information	44
General Product Care	44
Storage	44
Adult Supervision.....	44
Technical Specifications.....	44
Customer service and product warranty	45
Disposal of Batteries and Product	46

Important Safety Instructions

The applied nameplate is located at the bottom of the Baby Unit's base.

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Follow all warnings and instructions marked on the product.
2. Adult setup is required.
3. **CAUTION:** Do not install the Baby Unit at a height above 2 metres.
4. This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
5. This product is not intended for use as a medical monitor.
6. Do not use this product near water, for example, near to a bath, sink, swimming pool or shower.
7. **CAUTION:** Use only the internal, non-user replaceable battery fitted to the Parent unit. There may be a risk of explosion if a wrong type of battery is used for the Parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of batteries in fire or a hot oven, mechanically crushing or cutting the battery can result in an explosion. Subjecting products or batteries to an extremely high temperature environment can result in explosion or leakage of flammable liquids, or gas. Products or batteries subjected to extremely low air pressures may result in explosion or leakage of flammable liquids, or gas.
8. Use only the power adaptors included with this product. Incorrect power adaptor polarity or voltage can seriously damage the product.



Power adaptor information:

Parent Unit output: 5V DC 2A;
VTech Telecommunications Ltd.;
Model: VT07EAU05200
-OR-
Shenzhen Aoda Power Technology Co., Ltd.
Model: A938-050200W-AU1

Baby Unit output: 5V DC 1.5A;
VTech Telecommunications Ltd.;
Model: VT07EAU05150
-OR-
Shenzhen Aoda Power Technology Co., Ltd.
Model: A938-050150W-AU1



Rechargeable battery information:

3.7V 5000mAh, 18.5Wh Lithium-ion battery;
Zhuhai Great Power Energy Co., Ltd.;
Model: GSP806090-5Ah-3.7V-1S1P
-OR-
3.85V 4900mAh, 18.87Wh Li-ion Polymer Battery
Guangdong Fenghua New Energy Co Ltd
Model: FHP466495-4.9Ah-3.85V-1S1P

9. The power adaptors are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
10. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
11. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
12. Do not modify the power adaptors or replace with other third-party adaptors.

13. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or electricity supply provider.
15. Do not overload wall outlets or use an extension cord.
16. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
17. This product should not be placed in any area where proper ventilation is not provided. Any slots or openings in the back or bottom of this product are provided for ventilation. To protect from overheating, openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat source.
18. Never insert any objects through any apertures or slots in the product as this can be dangerous and cause damage to the battery or other internal parts. Never spill any liquids on the product.
19. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorised service facility. Disassembling or removing parts of the product other than battery replacement via a battery door (if applicable) may expose dangerous voltages or other risks.
20. You should test the sound reception every time you turn on the units or move one of the components.
21. Periodically examine all components for damage.
22. There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless telephones, etc. To protect your privacy, make sure the product has never been used before purchase, reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you are not intending to use it for some time.
23. The small parts of this monitor can be swallowed by babies or small children. Keep these parts out of reach of children.
24. Children should be supervised to ensure that they do not play with the product.
25. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 
SAVE THESE INSTRUCTIONS

Cautions


1. Use and store the product at a temperature between 0°C and 40°C.
2. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
3. Batteries should not be exposed to excessive heat such as bright sunshine or fire.
4. Mishandling batteries can cause burn, fire or explosion hazards.
5.  **Warning**—Strangulation Hazard—Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 0.9m away). Do not remove warning label on the adaptor cord. 
6. Never place the Baby Unit inside the baby's cot or playpen. Never cover the Baby Unit or Parent unit with anything such as a towel or a blanket.
7. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

Setup

What's Included?

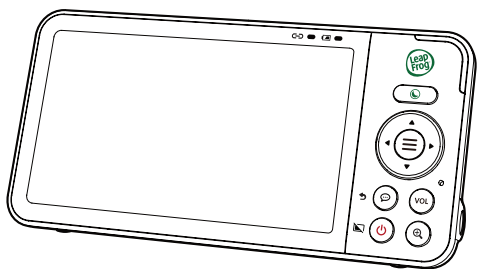


Parent unit

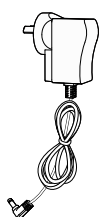 


Parent unit Adaptor



 
Learn to set up your units and have all detailed instructions on using your baby monitor.

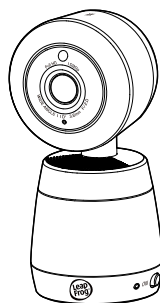


Baby Unit

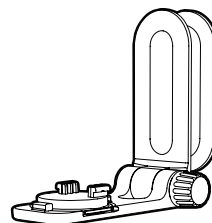 


Wall Mount Bracket

 

Baby Unit Adaptor

 


x 2

 

x 2


Overview

 Baby Unit

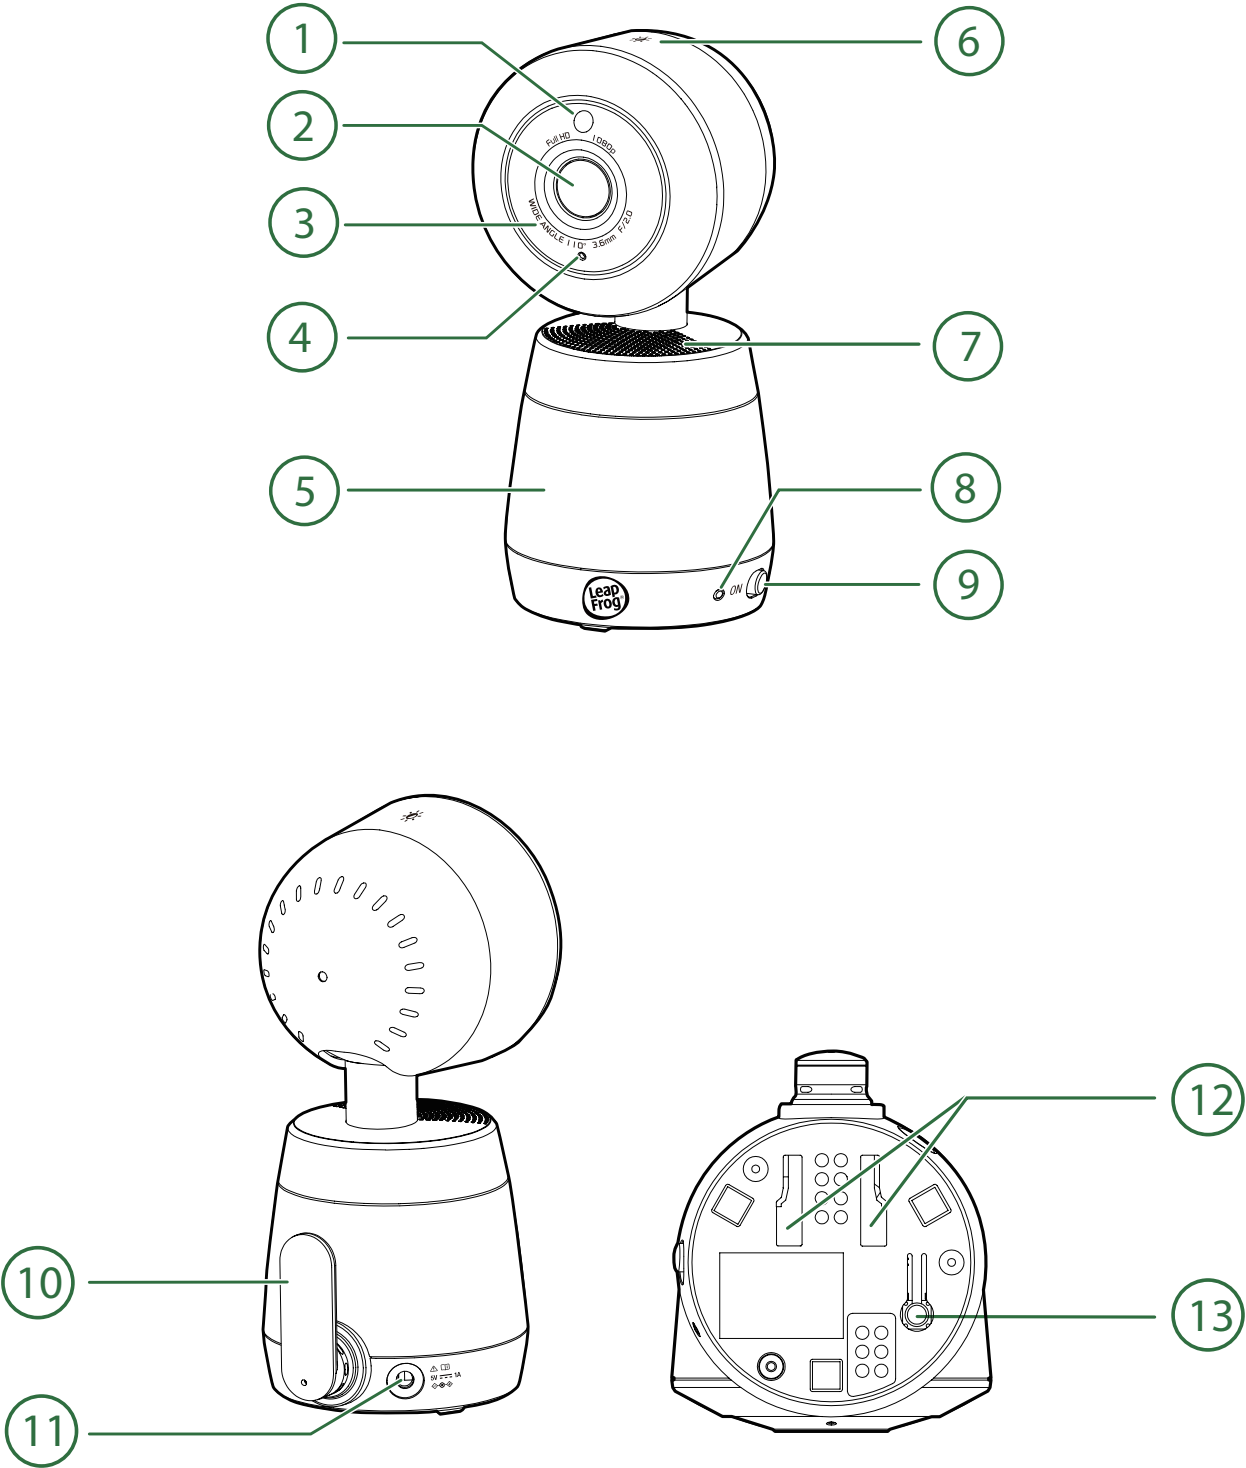


1	Light Sensor
2	Camera
3	Infrared LEDs • Allow you to see clearly in a dark environment.
4	Microphone
5	Night light
6	 Night light touch control • Single Tap: Turn on/off. • <u>Press and hold</u> (with the light turned on): Adjust night light brightness.
7	Speaker
8	POWER LED Light
9	On / Off switch
10	Antenna
11	Power Jack
12	Wall Mount Slots
13	PAIR button • To enter pairing mode, <u>press and hold</u> the PAIR button for three seconds until you hear a beep sound. Then follow the app instructions to connect the camera to a 2.4GHz Wi-Fi network. • To reset the Baby Unit, <u>press and hold</u> the PAIR button until you hear a beep sound. Release the PAIR button and then press and release a further five times until you hear another beep sound. The Baby Unit will emit another beep when the reset is complete. After the beep sound, the Baby Unit will reboot itself.


 
Parent unit

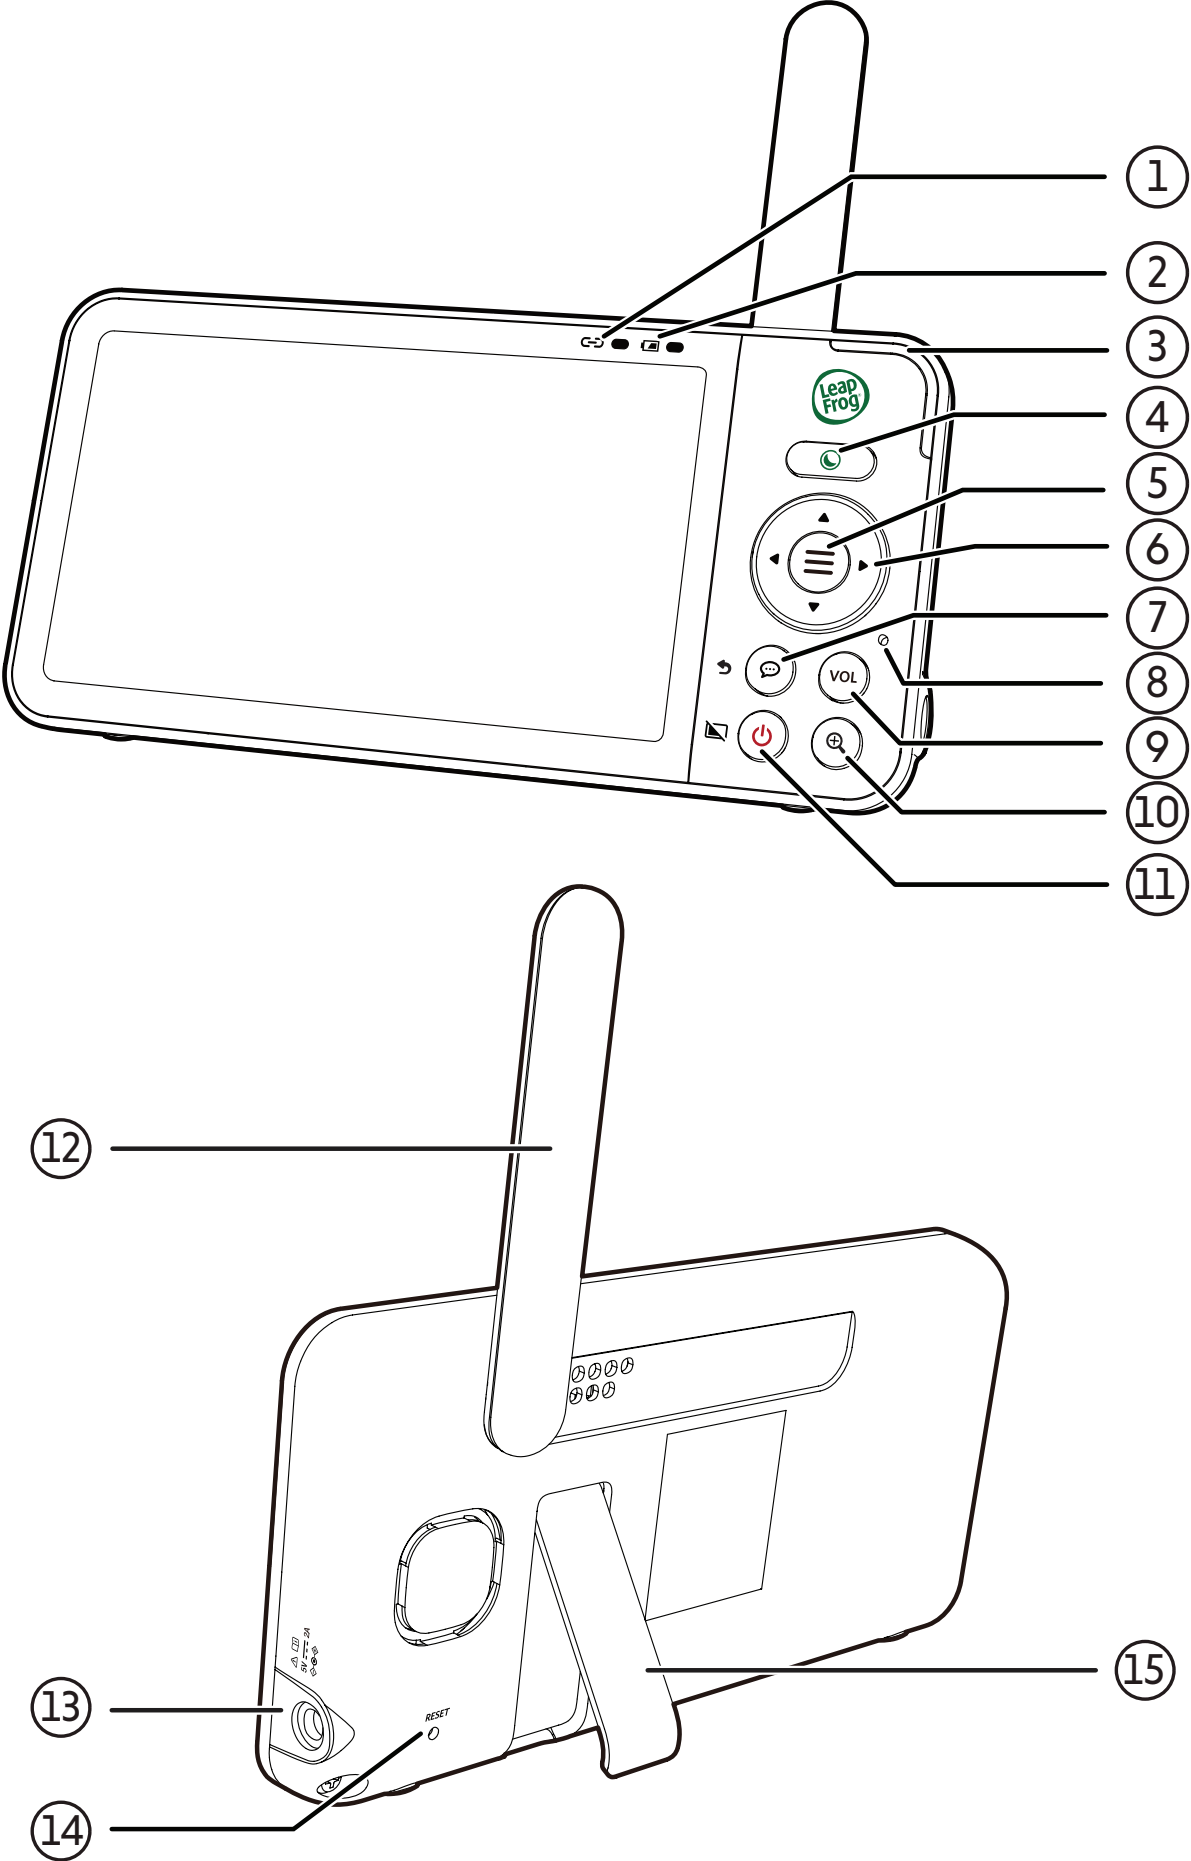

1	 LINK LED Indicator - On when the Parent unit is linked to the Baby Unit. - Flashes when the link to the Baby Unit is lost.
2	 Battery LED Indicator - On when the Parent unit is connected to AC power, and the battery is charging. - Flashes when the Parent unit battery is low and needs to be charged.
3	3-level sound indicator light
4	 Night Mode quick set key - Select  black-and-white night vision for extreme darkness or  colour night vision for dim environments (the use of the Baby Unit night light or other supplementary light sources is required). - To activate night light in colour night vision, press  to turn it on for 30 seconds, and press  or  to adjust its brightness.
5	 Menu / Select - Press to enter the main menu. - While in a menu, press to confirm a selection, or save a setting.
6	 Arrow Keys - Press the VOL key, then press, then press  or  to adjust the volume. - Navigate within the menus. - Pan and tilt the camera.
7	 Talk / Return <u>Press and hold</u> to talk to the Baby Unit. - While in a sub-menu, press to exit.
8	Microphone
9	VOL Volume View the volume adjustment bar.
10	 Zoom Press to zoom in/out to different levels.   
11	 Power / LCD off <u>Press and hold</u> to power on/off the Parent unit. - Press to turn on/off the LCD screen.
12	Antenna
13	Power Jack
14	RESET Force reboot the Parent unit.
15	Stand

 Parent unit Icons

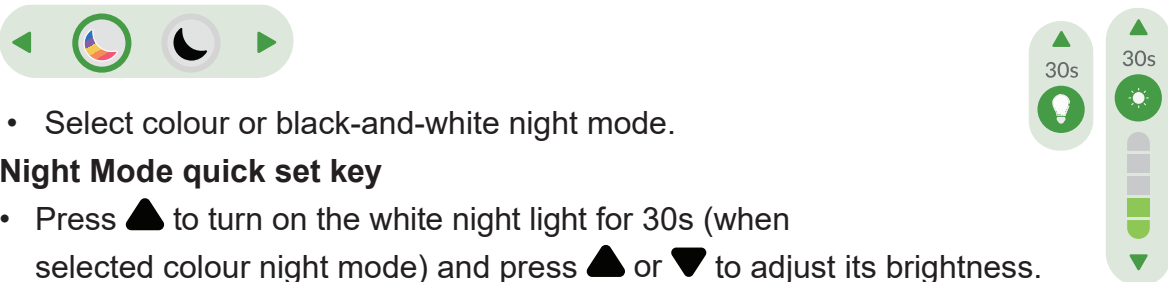Main Menu	Sub-menu	Options
Monitoring mode (For LF3925HD-2 only)		
		View Baby Units in Single mode.
		View Baby Units in Patrol mode.
		View Baby Units in Split screen.
Night light		
	 - Select colour or black-and-white night mode. Night Mode quick set key - Press  to turn on the white night light for 30s (when selected colour night mode) and press  or  to adjust its brightness.	
		On/Off
		Colour - Select a night light colour. - Customised colour is available if your baby monitor is paired with LeapFrog Baby Care+ App.
		Brightness  - Adjust night light brightness. - Set the brightness to Auto adaptive ambience.
		Timer  Set a Timer to turn the night light off after 15, 30 or 60 minutes, or always remain on.

  Lullaby		
		Play/Stop
		Library  • Select to play all melodies, or play one of the 5 melodies and 5 soothing sounds.
		Camera Volume  • Adjusts the Baby Unit speaker volume.
		Timer 15 min 30 min 60 min OFF • Set the timer to stop playing after 15, 30 or 60 minutes, or play non-stop.
General settings		
		Connect to Mobile App • Instructions for adding Baby Unit to mobile app.
		Screen Brightness  • Adjust parent unit screen brightness.
		Temperature Format • Set the temperature display format between Celsius or Fahrenheit.
		Screen off Timer 1 min 3 min 5 min Auto OFF • Turn the screen off timer OFF, or set the screen to turn off after 1, 3 or 5 minutes when no sound is detected. • Select Auto to set the Sound Sensitivity level for the screen to auto turn on when a sound level is detected that is higher than the set level. The screen will turn off after 50 seconds of no sound detection.    Low Medium High
		Camera Volume  • Adjusts Baby Unit speaker volume.
		Other • Time settings (Time Display on Live View; Daylight Saving Time; 24 Hour Format; Time Zone) (available only after pairing the Baby Monitor with the LeapFrog Baby Care+ app.) • Reset settings • Software update.

Alert settings


	 Adjust the alert tone volume level.
	 Motion Detect - Turn the motion detection alert on/off. - Adjust Motion Sensitivity level for waking the Parent Unit screen.    Low Medium High
	 Temperature - Turn the temperature alert on/off. - Select the temperature alert maximum and minimum temperature limits.
	 Humidity - Turn the humidity alert on/off. - Select the humidity alert maximum and minimum humidity limits.
	 Low battery Turn on/off low battery alert.
	 Lost link Turn on/off no link alert.

Help and info

	 Help Support Information
	 How-to Video Support video
	 System Info System Information

Alert Icons

	The Parent unit's battery is low and needs charging.
	The Parent unit is connected to AC power.
	Displays when motion exceeding the set sensitivity level is detected at a Baby Unit.
	Displays when Baby Unit detected temperature reaches or exceeds the set maximum.
	Displays when Baby Unit detected temperature at or lower than the set minimum.

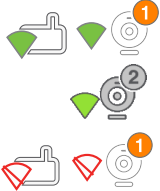 Status icon	
	Direct Connect Mode Parent unit, baby unit 1 and baby unit 2 (For LF3925HD-2 only) are connected to each others directly.Signal strength is indicated by the signal icon(s) on the right. The red bar(s) indicates no connection.
	App Connect Mode The signal icon(s) on the left indicate the baby unit is connected to a home Wi-Fi network. The red icon(s) indicates no connection.
	Baby unit 1 and 2 are being viewed in Patrol mode (For LF3925HD-2 only).
	Baby unit 1 and 2 are being viewed in Split mode (For LF3925HD-2 only).
	Black-and-white night vision is turned on.
	Colour night vision is turned on.
	Zoom 2x, 4x, 8x
	Motion detection alert is turned on.
	Melodies and soothing sounds are playing.
	Night light is turned on.
	Auto night light brightness is activated.
	Temperature alert is turned on.
	Humidity alert is turned on.
	Parent Unit is muted.
	Humidity measured at Baby Unit.
	Temperature measured at Baby Unit.
	Time display (available only after pairing the Baby Monitor with the LeapFrog Baby Care+ app.)
	Low battery indicator
	Battery level indicator

 
Connect, Charge, and Power On the Baby Monitor

1. Connect the Baby Monitor

Connect the Parent unit and Baby Unit to a power supply with the included power adaptors.

Notes:

- The rechargeable battery in the Parent unit is built-in.
- Use only the power adaptors supplied with this product.
- Connect the power adaptors in a vertical or floor mount position only. The adaptor prongs are not designed to hold the weight of the Parent unit and the Baby Unit, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adaptors may not properly connect to the outlets.
- Make sure the Parent unit, the Baby Unit and the power adaptor cords are out of reach of children.

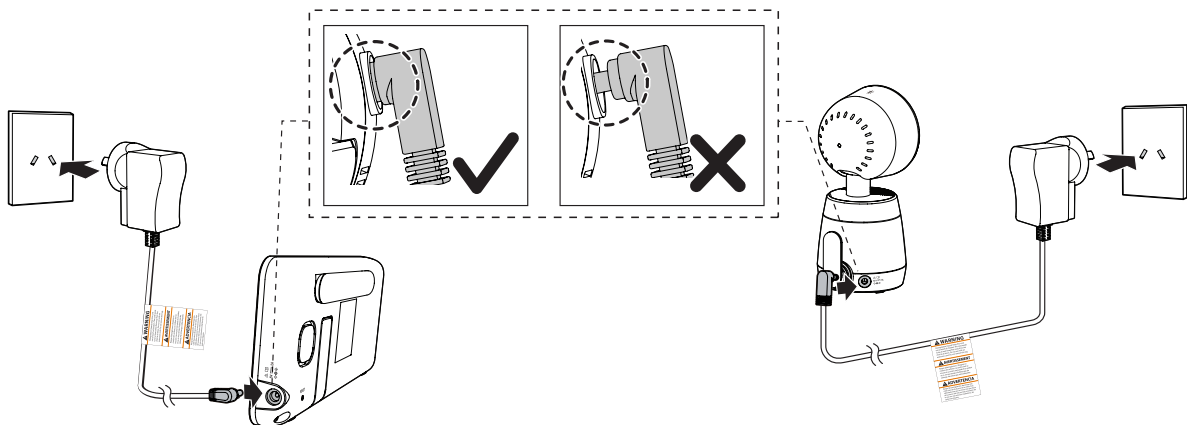

2. Charge the Parent unit Battery

The Parent unit runs on a rechargeable battery or AC power. To continuously monitor your baby, keep the Parent unit connected to AC power.

The Parent unit turns on automatically after it connects to the power socket, and its battery will charge at the same time.

Notes:


- Before using the baby monitor for the first time, charge the Parent unit battery for 12 hours. When the Parent unit battery is fully charged, the battery icon becomes solid .
- The standby time varies depending on your actual use.

The battery icon on the screen indicates the battery status (see the following table).

Battery Indicators	Battery Status	Action
 and  are displayed on the Parent unit screen; the red  LED flashing.	The battery has very little charge and may only be used for a short time.	Charge without interruption (about 30 minutes).
The battery icon segments are solid  .	The battery is fully charged.	To keep the battery charged, connect it to AC power when in use.





3. Power On or Off the Baby Monitor

 1. Slide the On/Off switch to **ON** to power on your Baby Unit.

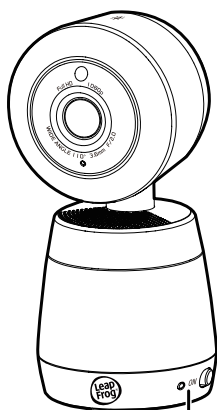

Note:

    - The status LED is set to off by default. You can turn it on using the app.

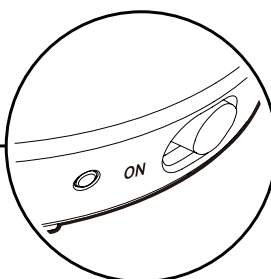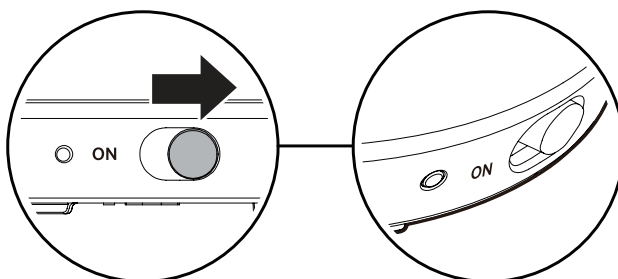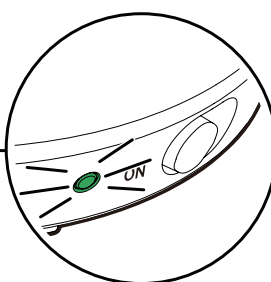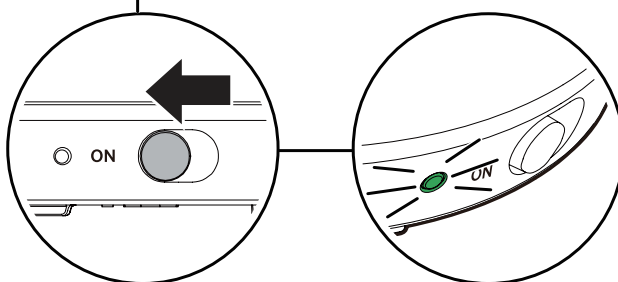

2. The Parent unit turns on automatically after connecting to the power socket, and the welcome screen appears. Then, the green  LINK LED light flashes and turns on steady when connected.

You can press and hold  to turn it on or off.



 
4. Status Check

Once your Baby Unit and Parent unit are successfully connected, your Parent unit displays video from the Baby Unit, and the green  LINK LED remains on.

5. Positioning the Baby Monitor


Caution: Keep the Baby Unit out of the reach of your baby. Never place or mount the Baby Unit inside the baby's cot or playpen.

Place the Baby Unit more than 1m away from your baby.

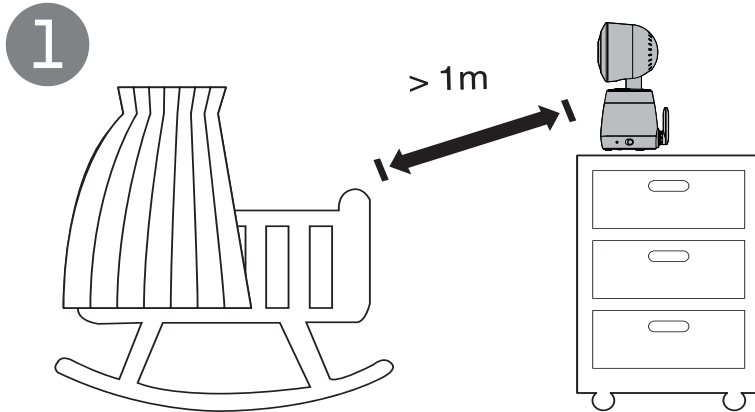


Cautions:

 - The default volume of your Parent unit is level 3, and the maximum volume is level 5. If you experience feedback noise from your baby monitor while positioning:
 - Make sure your Baby Unit and Parent unit are more than 3 metres apart; **OR**
 - Lower the volume of your Parent unit.

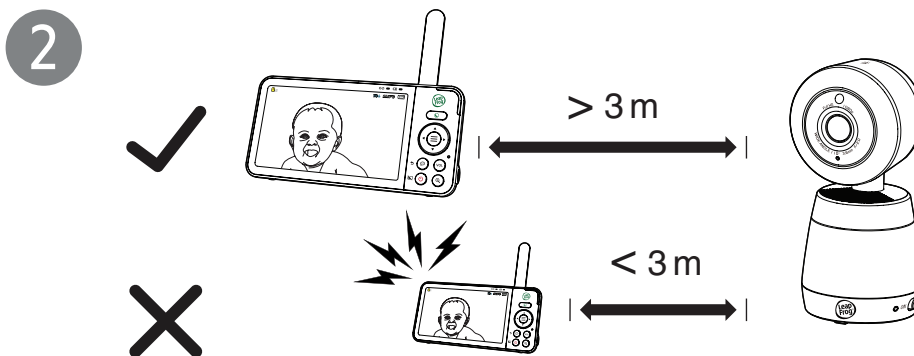

 - To avoid interference from other electronic devices, place your baby monitor at least 1 metre away from devices such as wireless routers, microwave ovens, mobile phones and computers.

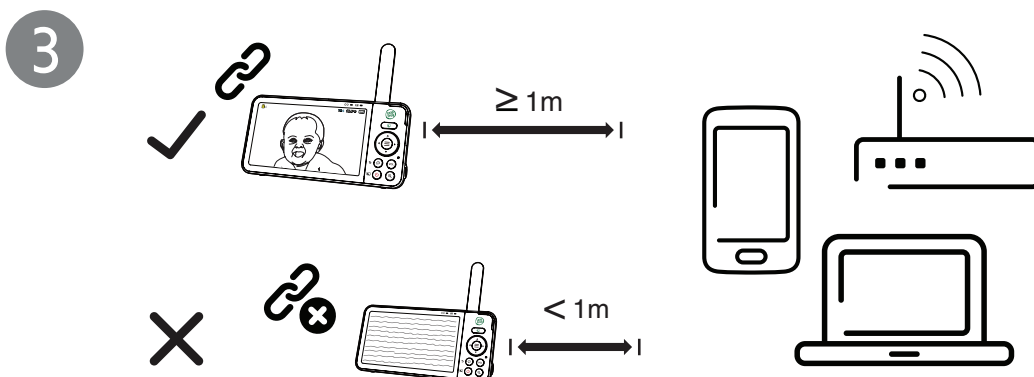


Two Ways to Connect Your Baby Monitor

TIP: To receive product firmware updates, this baby monitor requires connecting to a 2.4GHz home Wi-Fi network..

Direct Connect Mode

 Your baby monitor Parent Unit and Baby Unit connect to each other in **Direct Connect Mode** by default, which allows you to immediately stream video out of the box.

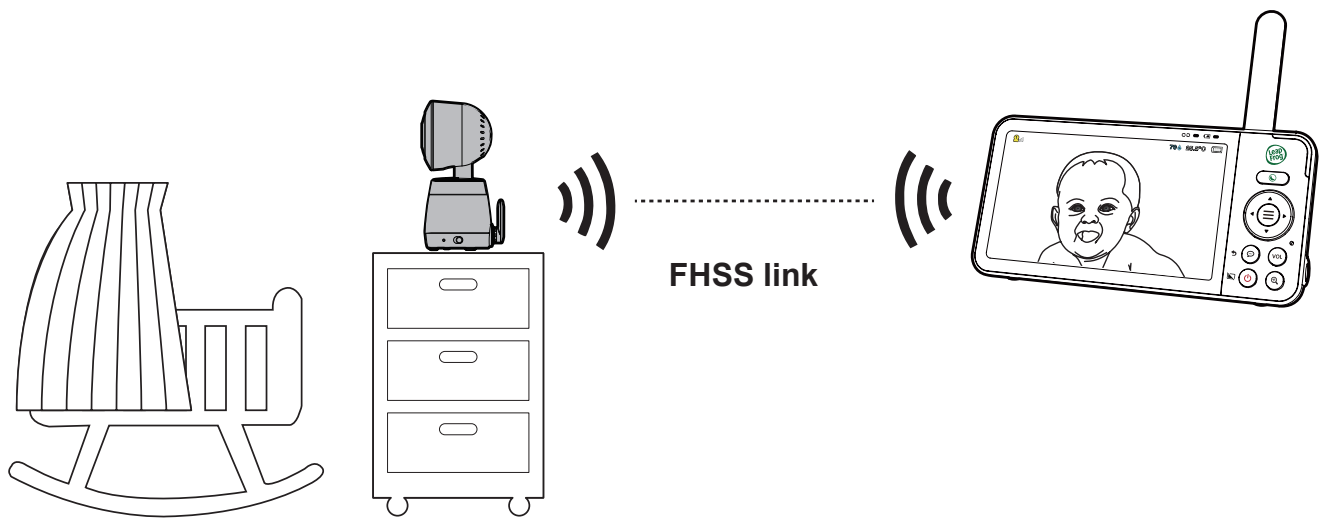


App Connect Mode

To enhance your experience and enjoy seamless live video streaming via your mobile app, and to receive product software updates (when available), we highly recommend setting up your monitor's Wi-Fi connection.

It uses your 2.4GHz home Wi-Fi network to connect your video monitor and supports live video streaming through the mobile app.

 To stream live video remotely with your mobile device, download and install the **LeapFrog Baby Care+** mobile app. With the mobile app, your Wi-Fi router (not included) provides Internet connectivity to your HD video monitor system. It serves as a communication channel between your Baby Unit and mobile device, allowing you to monitor and/or control your Baby Unit wherever you are.

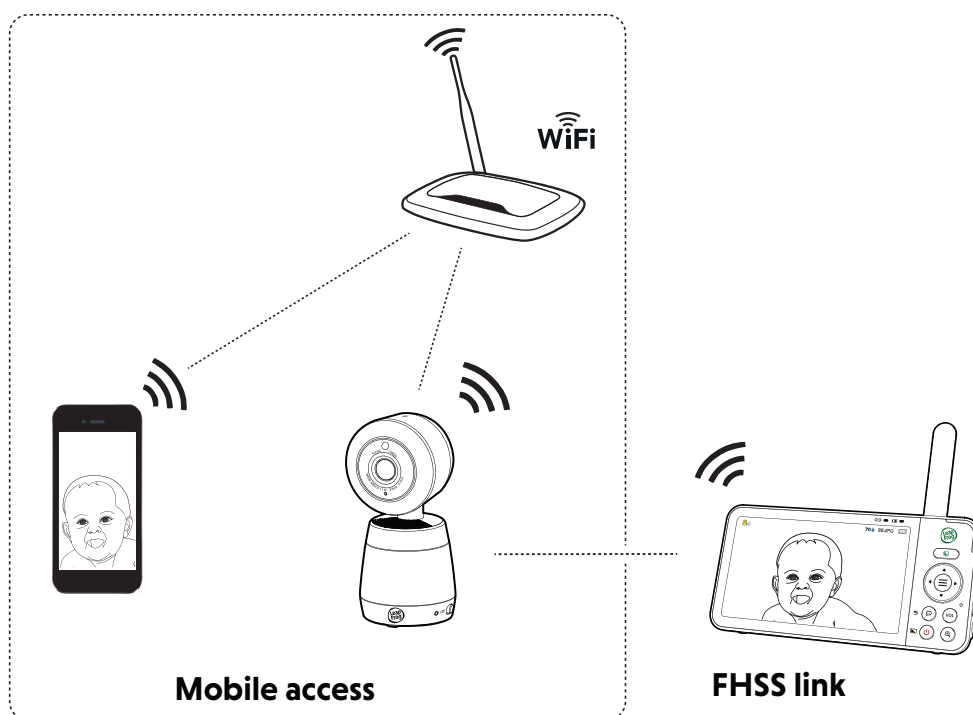

Wi-Fi and Mobile App Set-up

Use the **Leapfrog Baby Care +** on your mobile device to monitor your baby remotely. Follow the instructions below to set up and pair your baby monitor with the app.



1. Scan the QR code to download the free **Leapfrog Baby Care +** mobile app, or search “Leapfrog Baby Care +” on App Store or Google Play Store. If you have previously installed the app, ensure that you have the latest version.

NOTE

- Make sure your mobile device meets the minimum requirement for the mobile app.

Minimum requirement

The mobile app is compatible with:

- Android™ 9.0 or later; and
- iOS 15 or later.



2. Tap  to launch the mobile app on your device and create an account.
3. We recommend that you use common webmail services, such as Google Gmail, to register your user account. Check your email (including the Spam folder) and activate your new account by entering the email verification code. Then, sign in to your account.
4. Ensure that you are connected to a **2.4GHz Wi-Fi network** and have enabled **Bluetooth** and **Location Service** on your device.
5. After signing in to the app, select **Camera(s) with Parent unit** and scan the QR code displayed on the parent unit. To find the QR code, press  button and go to  >  **Connect to Mobile App**.
6. Input the Wi-Fi password.
7. Press and hold the pair key on the baby unit for 3 seconds until you hear the beep sound to enter pairing mode.
8. Select the camera model that appears in the app and wait for the camera to connect. Once connected, it will display a live view preview.
9. Select “**Continue**” and create a profile for your baby (Optional). Now you can start monitoring! (For models with 2 cameras, a pop-up will ask if you wish connect another camera. Repeat steps 7-9 for the second camera.)

Tips:

 
Use **Camera Sharing** to instantly share access to the camera. Follow these steps:

1. Go to **Menu** and select **Camera Sharing**.
2. Choose “**Invite People**” and enter the name and email address of the family member’s app account.
3. The family member will receive a pop-up notification in the app and can accept the invitation to access the camera(s).

Test the Best Location for the Baby Unit

If you plan to install your baby unit in a designated location, and use your home Wi-Fi network to connect your video monitor, you need to test which of your selected monitoring areas within the house have good Wi-Fi signal strength. After you have powered on your parent unit, you can use your parent unit’s **App Connect Mode signal icon(s)** to assist in checking. Once you have identified the suitable location, you can install your baby unit. Adjust the distance between your baby unit and the Wi-Fi router if needed.

Note: Surroundings and obstructing factors, such as large metallic objects, filing cabinets, long distances, electrical appliances, and internal walls, may reduce Wi-Fi signal.

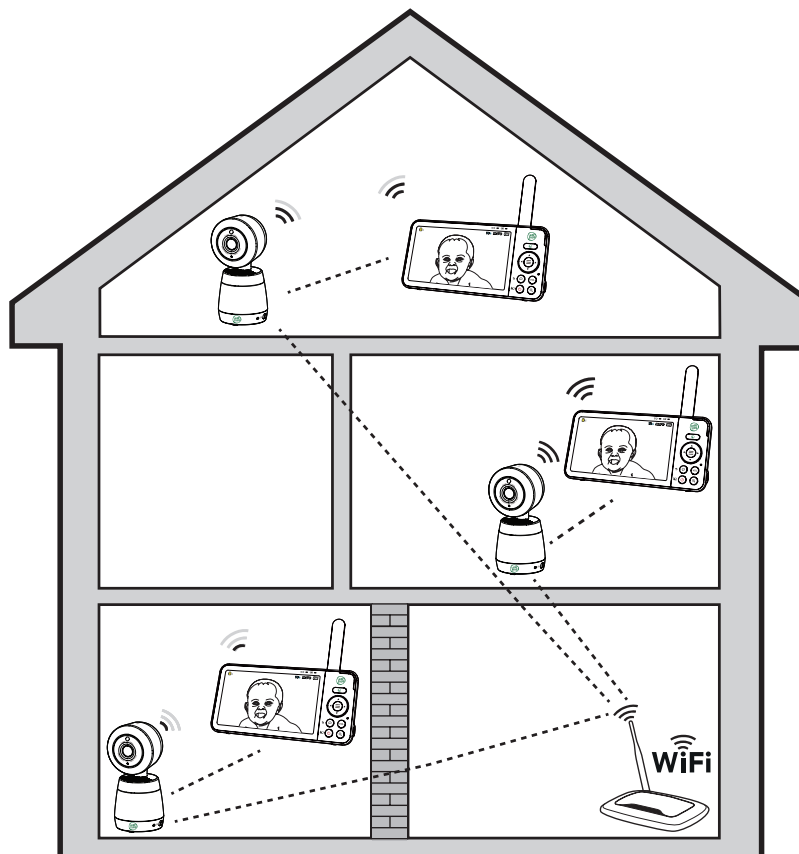

Protect Your Privacy and Online Security

LeapFrog cares about your privacy and peace of mind. That's why we've put together a list of industry-recommended best practices to help keep your wireless connection private and your devices protected when online.

Ensure your wireless connection is secure

- Before installing a device, ensure your router's wireless signal is encrypted by selecting the "WPA2-PSK with AES" setting in your router's wireless security menu.

Change default settings

- Change your wireless router's default wireless network name (SSID) to something unique.
- Change default passwords to unique, strong passwords. A strong password:
 - Is at least 10 characters long.
 - Does not contain dictionary words or personal information.
 - Contains a mix of uppercase letters, lowercase letters, special characters and numbers.

Keep your devices up to date

- Download security patches from manufacturers as soon as they become available. This will ensure you always have the latest security updates.
- If the feature is available, enable automatic updates for future releases.

Disable Universal Plug and Play (UPnP) on your router

- UPnP enabled on a router can limit the effectiveness of your firewall by allowing other network devices to open inbound ports without any intervention or approval from you. A virus or other malware program could use this function to compromise security for the entire network.

For more information on wireless connections and protecting your data, please review the following resources from industry experts:

1. Federal Communications Commission: Wireless Connections and Bluetooth Security Tips – www.fcc.gov/consumers/guides/how-protect-yourself-online.
2. U.S. Department of Homeland Security: Before You Connect a New Computer to the Internet – www.us-cert.gov/ncas/tips/ST15-003.
3. Federal Trade Commission: Using IP Cameras Safely – <https://www.consumer.ftc.gov/articles/0382-using-ip-cameras-safely>.
4. Wi-Fi Alliance: Discover Wi-Fi Security – <http://www.wi-fi.org/discover-wi-fi/security>.

 
Basic Operation

Use the Menu

Press  on the Parent unit to enter the main menu, choose a menu item, or save a setting. You can use the parent unit menu for advanced settings or operations, such as to play or stop the Baby Unit lullaby, or adjust the Baby Unit motion sensitivity.


While in the menu:

- Press the Arrow Keys     to scroll among the menu options.
- Press  to select an item.
- Press  to return to the previous menu.

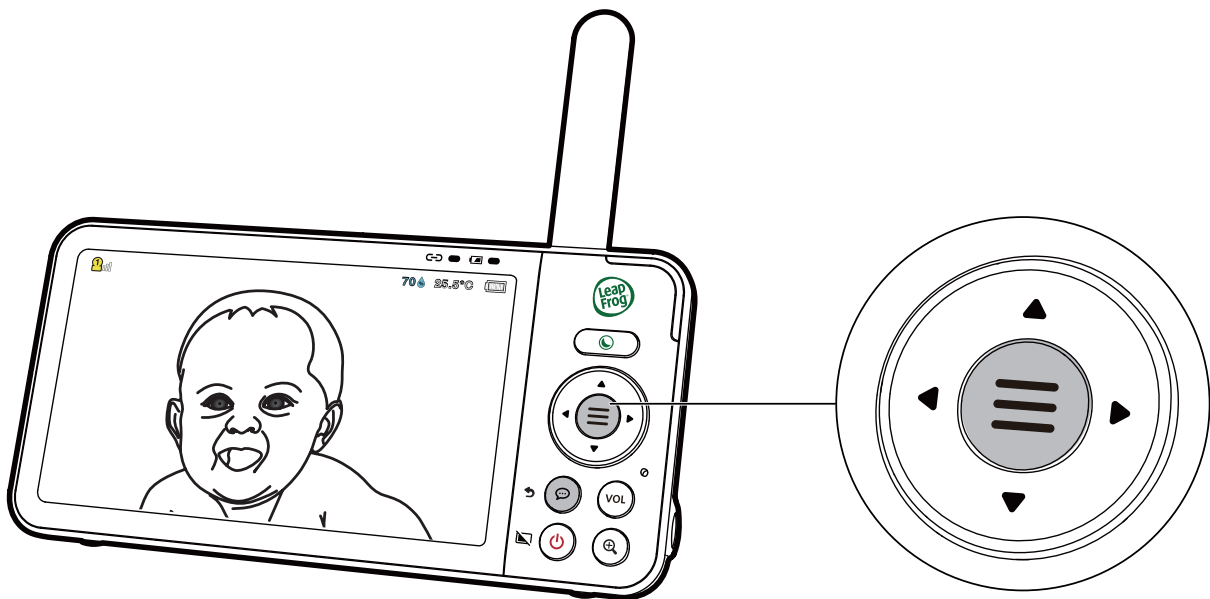

Talk to Your Baby via the Baby Unit

 
1. Press and hold  key on the Parent unit.
2. When the icon  displays on the screen, speak to your Parent unit. Your voice is transmitted to the Baby Unit.
3. When finished talking, release  to hear your baby again.

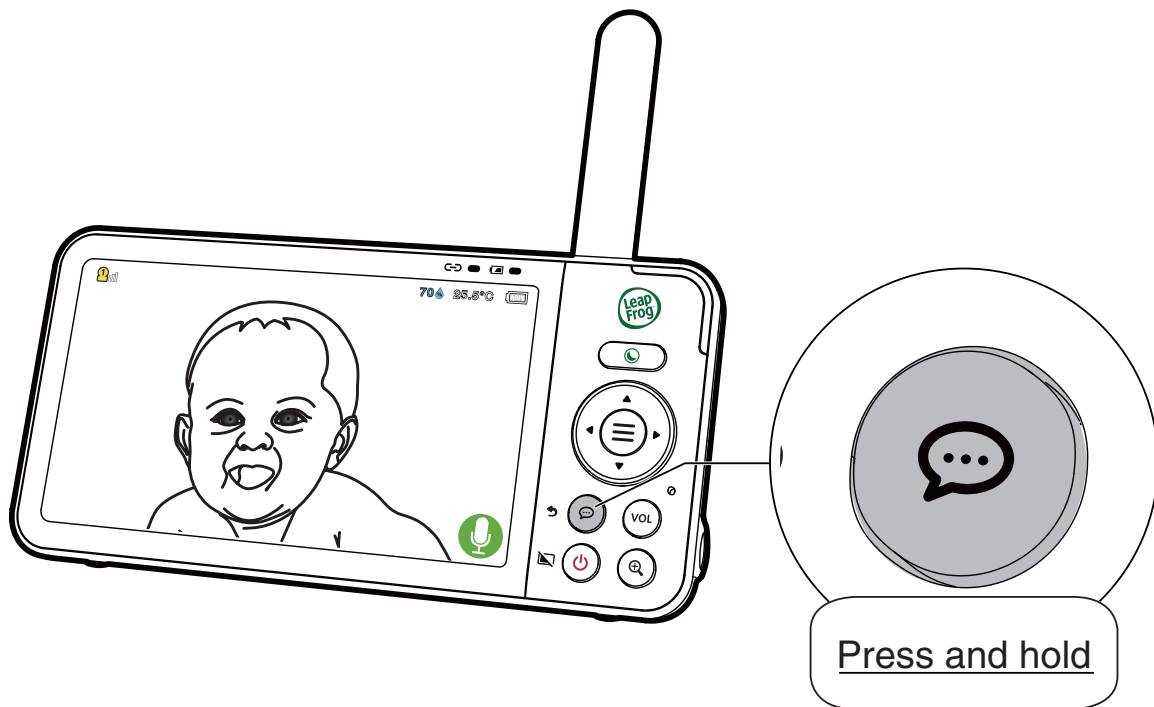

Zoom, Pan and Tilt the Camera

Zoom

 - Press  to zoom in or out. The zoom sequence is , , .

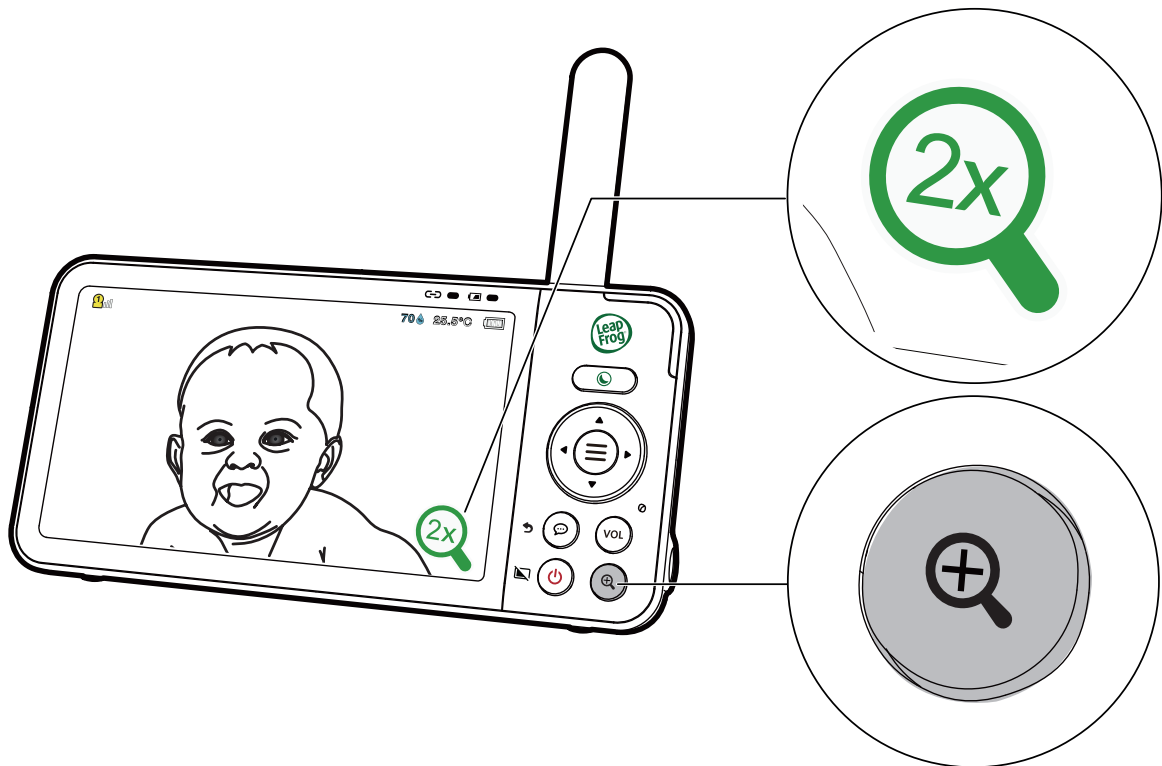


Pan and Tilt the Camera

You can use the arrow keys on the Parent unit to pan and tilt the camera.

- Press the arrow keys ▲ ▼ ◀ ▶ to move the camera upward, downward, leftward and rightward, or press and hold ▲ ▼ ◀ ▶ to move continuously.

 OR Manually tilt the camera angle up and down by pushing the lens portion upwards or downwards to aim at your baby.

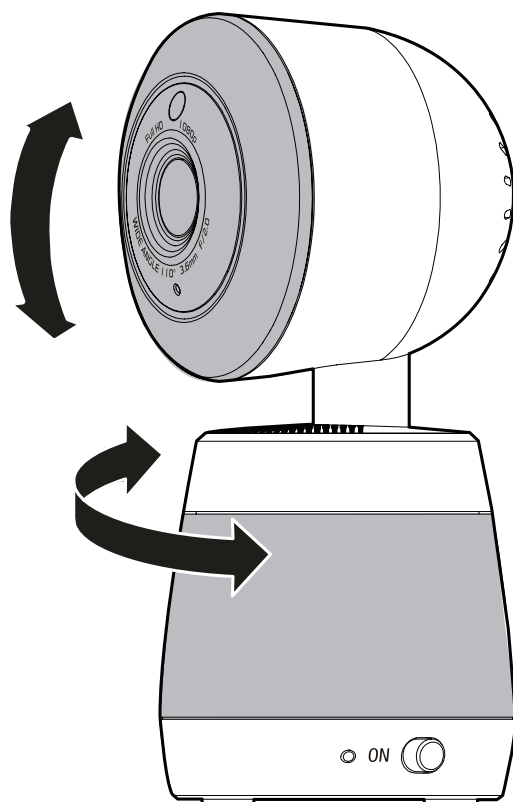

Adjust Parent unit Speaker Volume

Press **VOL** button to view the volume adjustment bar.

 
Press ▲ or ▼ to adjust the Parent unit speaker volume level

◀ [Volume Bar] ▶ (Level 1 - Lowest to Level 5 - Highest),
received from the Baby Unit.

Turn on/off the Parent unit Screen

You can turn on or turn off the Parent unit screen without powering off the Parent unit. You will still be able to hear sounds from the Baby Unit.

- Press  on the Parent unit to turn off the screen.
- Press **any key** on the Parent unit to turn on the screen again.

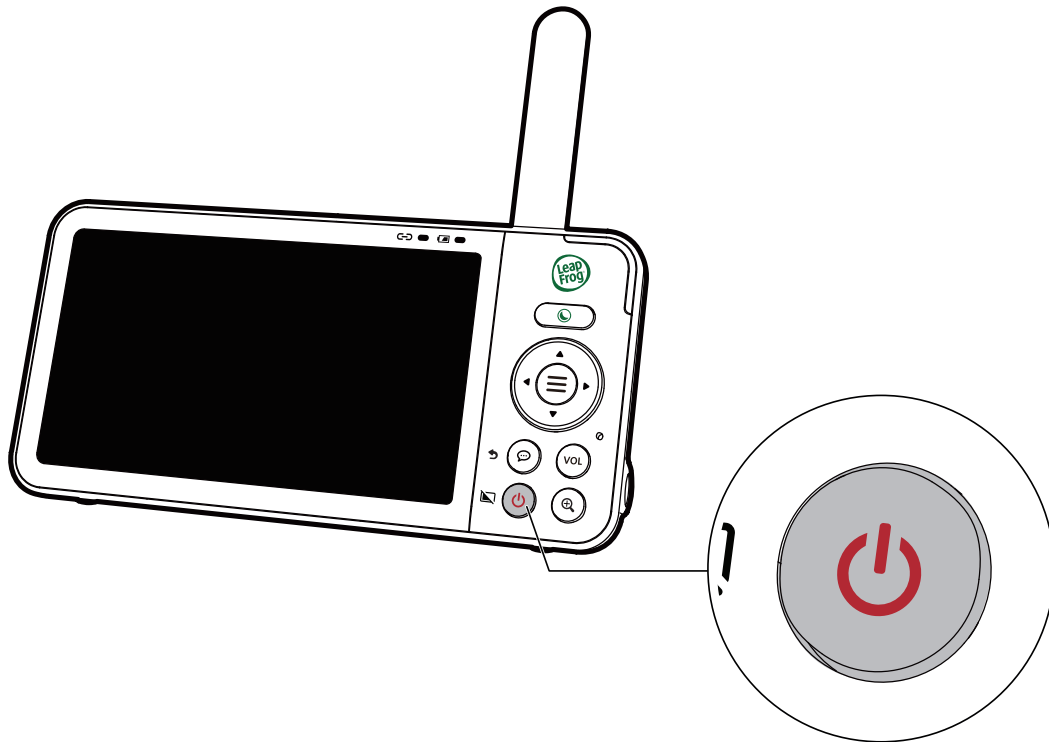

Adjust Parent unit Screen Brightness

1. Press  to enter the main menu.
2. Press ◀ or ▶ to select  **General Settings**, press .
3. Press ◀ or ▶ to select  **Screen Brightness**.
4. Press ◀ or ▶ to adjust the LCD brightness 
(Level 1 - Lowest to Level 5 - Highest)

Adjust Baby Unit Speaker Volume

1. Press **MENU/SELECT**  to enter the main menu.
2. Press ◀ or ▶ to select , press .
3. Press ▼ to scroll **Camera Volume** .
4. Press ◀ or ▶ to adjust the Baby Unit speaker volume 
(Level 1 - Lowest to Level 5 - Highest).

Advanced Operation

Monitoring Modes (LF3925HD-2 only)

When more than one baby unit is paired to the parent unit, you can choose to view different baby units in three monitoring modes. Learn more about each below:

Single Mode		The screen displays images only from the selected baby unit in full screen.
Split Mode		The screen displays images from all paired baby units at the same time in split view.
Patrol Mode		The screen displays a single cam view that transitions to a different baby unit every 10 seconds.

Change the Monitoring Mode

1. Press  when the parent unit is idle.
2. Press  or  to enter  **Monitoring Mode** menu.
3. Press  or  to choose between **Single**  , **Split**  , and **Patrol**  monitoring mode options. Press  to confirm.

Night Vision

The Baby Unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the Baby Unit being viewed detects low light levels, the infrared LEDs switch on automatically. When **Black-and-White Night Vision** mode is activated,  appears on the screen. When **Colour Night Vision** mode is activated,  appears on the screen.

Night Vision Mode	Description
	B&W Night Vision • Suitable for extremely dark or low light environments. • Images will be in black-and-white.
	Colour Night Vision • Suitable for dim environments. • This feature must be used with a supplementary light source. • You can turn the baby unit night light on or use other light sources. • Images will be in colour.

Change your viewing mode

1. Press the Night Mode quick set key  to turn on night mode,  displays.
2. Press ◀ or ▶ to select  or  to select black-and-white or colour night mode.

Turn on night light in colour night vision mode

3. Press ▲ to turn on the white night light for 30s  (when selected colour night mode).
4. Press ▲ or ▼ to adjust the night light brightness .

Notes:

- With insufficient supplementary lighting, the colour night vision image will appear dark.
- It is **normal** to see a short white glare on your Parent unit screen as the Baby Unit adapts to the dark environment.
- If you adjust the night vision mode while night vision is not activated, the new settings will be saved and applied the **next time** activates.

Tip:

- The video quality may vary depending on the surrounding environment and interfering factors like lighting, objects, colour and backgrounds. Adjust the Baby Unit angle or place the Baby Unit at a higher elevation to prevent glare and a blurry display.

Night Light

On the Baby Unit

Turn on or turn off the night light

- Press the **Night light touch control**  located on the top of the Baby Unit to turn on or turn off the night light.

Adjust the brightness

- Press and hold the **Night light touch control**  to adjust the night light brightness.

On the Parent unit

Turn on the night light

1. Press  to enter the main menu.
2. Press  again to enter  **Night Light Menu**.
3. Press  or  to select **On** , press .

Turn off the night light

1. Press  to enter the main menu.
2. Press  again to enter  **Night Light Menu**.
3. Press  or  to select **Off** , press **MENU/SELECT** .

Adjust the night light colour

1. Press  to enter the main menu.
2. Press  again to enter .
3. Press  or  to select  **Colour**, press .
4. Choose your desired colour.
5. (**Red, Orange, Yellow, Green, Pink, White, Blue, Rainbow, Warm color or Cool color**), then press .

Tip:

- **Customized color** is available if your Baby Unit is paired with **LeapFrog Baby Care+** App.

Adjust the night light brightness

1. Press  to enter the main menu.
Press  again to enter .
2. Press  or  to select  **Brightness**, press .
3. Choose your desired brightness level       (**Auto - Set the brightness to Auto adaptive ambience, Level 1 - dimmest, Level 2, Level 3, Level 4, Level 5 - brightest**), then press .

Note:

If **Auto Brightness** has been pre-selected, any adjustment in night light brightness (either on the Baby Unit or the Parent unit) will automatically turn off and switch to the fixed level of brightness.

Set the night light timer

1. Press  to enter the main menu.
2. Press  again to enter .
3. Press  or  to select  **Timer**, press .
4. Choose your desired timer (**15 mins, 30 mins, 60 mins or OFF**) to turn the night light off, or always remain on, then press .

Lullaby

On the Parent unit

Play/Stop melodies or sounds

1. Press  to enter the main menu.
2. Press  or  to select  **Lullaby** ,
press .
3. Press  or  to select **Play/STOP** , press .

Select melodies or sounds

1. Press  to enter the main menu.
2. Press  or  to select  , press .
3. Press  or  to select  **Libray** , press .
4. Press  or  to select to play all melodies, or play one of the 5 melodies and 5 soothing sounds, then press .

Note:

- The Library includes 5 different melodies and 5 soothing sounds.
- Melodies can be played in sequence repeatedly by selecting .

Set melodies or sounds timer

1. Press  to enter the main menu.
2. Press  or  to select , press .
3. Press  or  to select  **Timer**, press .
4. Press  or  to choose your desired timer (**15 mins, 30 mins, 60 mins, OFF**), to stop the lullaby, or play non-stop, then press .

Adjust the volume

1. Press  to enter the main menu.
2. Press  or  to select , press .
3. Press  or  to select  **Camera Volume**, press .
4. Press  or  to adjust the volume level  (**Level 1- Lowest to Level 5- Highest**).

Set Screen off Timer

You can set a specific time interval, if no keys have been pressed on the Parent Viewer, the screen will turn off (goes to sleep) to save power. You can still hear sounds from the Baby Unit when the screen turns off.

If you select **Auto**, the Parent unit screen stays off when the Baby Unit detects no sound. Once the Baby Unit detects sounds that are louder than the selected **Sound Sensitivity Level**, the Parent unit screen turn on automatically. The Parent unit will then turn off again after no sound has been detected for a while.

1. Press  to enter the main menu.
2. Press  or  to select , press .
3. Press  or  to go to  **Screen Off Timer**, then press .
4. Press  or  to select a screen off time, or always remain on (**1 min, 3 min, 5 min, Auto or OFF**), then press .
5. If you select **Auto**, press , then press  or  to adjust the 
Sound Sensitivity Level. Press  to confirm.

Notes:

- If you have muted the Parent unit speaker, only the Parent unit screen will turn on when a sound is detected.

Sound Sensitivity Level	Level 3 (Highest)	Level 2 (Medium)	Level 1 (Lowest)
			
Description	The parent unit screen turns on for quiet sounds, (including background noises) from your baby's room.	The parent unit screen turns on for loud babbling and louder sounds from your baby. It remains off when your baby makes soft sounds.	The parent unit screen turns on for loud crying or screeching sounds from your baby. It remains off when your baby makes soft sounds.

Motion Detection

You can turn on **Motion Alert** and adjust the Baby Unit's **Motion Sensitivity** to only detect your desired level of movement. When the Baby Unit detects movements that exceed the selected level, the Parent unit screen turns on if it has been switched off or dimmed, and the Baby Unit displays the live video feed. You will immediately be able to see your baby.

If you have turned on **Motion Alert**, the Parent unit beeps when the Baby Unit detects movements.

Motion Sensitivity Level	Level 3 (Highest) 	Level 2 (Medium) 	Level 1 (Lowest) 
Description	The Parent unit screen turn on for small movements, such as yawning or stretching.	The Parent unit screen turn on for normal daily movements, such as people walking around the house.	The Parent unit screen turn on for large movements, such as children running or jumping around.

Turn on or turn off motion alert

1. Press  to enter the main menu.
2. Press  or  to select  **Alert Settings**, press .
3. Press  or  to go to  **Motion Detect**, press  or  to select Motion Detect On/off.
4. Press  to turn on or turn off **Motion Alert**.

Adjust motion sensitivity

1. Press  to enter the main menu.
2. Press  or  to select , press .
3. Press  or  to go to **Motion Sensitivity**.
4. Press  or  to adjust the Sensitivity (**Level 1-Level 3**).

Comfort Zone for Your Baby

Babies need to stay in the comfort zone

- LeapFrog Baby Monitors help you keep track of your baby's room temperature and humidity in order to ensure that your baby stays in the comfort zone at all times. With temperature and humidity sensor, the relevant data will be shown on the status bar when you powered on your units.
- Extreme dryness, wetness, hotness or coldness might impose negative impact on your baby.
- Recommendation of the ideal room temperature is 20 - 24 °C and ideal room humidity for babies is between 30-60%.

Temperature and Humidity

Turn on or turn off the temperature alert

1. Press  to enter the main menu.
2. Press  or  to select , press .
3. Press  or  to go to  **Temperature** menu, press  or  to select Alert On/off.
4. Press  to turn on or turn off the **Temperature Alert**.

Set minimum/maximum temperature

1. Press  to enter the main menu.
2. Press  or  to select , press .
3. Press  or  to go to .
4. Press  or  to select Maximum Temp.  or Minimum Temp. .
5. Press  or  to adjust within the range.

Select temperature format

1. Press  to enter the main menu.
2. Press  or  to select , press .
3. Press  to select  **Temperature Fomat**, press .
4. Press  or  to select either °F or °C.

Turn on or turn off the humidity alert

1. Go to  **Humidity** menu, press ◀ or ▶ to select Alert On/off.
2. Press ≡ to turn on or turn off the **Temperature Alert**.

Set minimum/maximum temperature

3. Go to .
4. Press ▲ or ▼ to select Maximum or Minimum Humidity.
5. Press ◀ or ▶ to adjust within the range.

Alert Tone Settings

Adjust the alerts volume

1. Press ≡ to enter the main menu.
2. Press ◀ or ▶ to select , press ≡.
3. Press ◀ or ▶ to turn off the alerts tone or adjust the alerts tone volume.

Turn on/off Low Battery alert

1. Press ≡ to enter the main menu.
2. Press ◀ or ▶ to select the , press ≡.
3. Press ◀ or ▶ to select  **Low Battery**.
4. Press ≡ to turn on/off the **Low Battery** alert.

Turn on/off No Link alert

1. Press ≡ to enter the main menu.
2. Press ◀ or ▶ to select the , press ≡.
3. Press ▲ or ▼ to select  **No Link** alert.
4. Press ≡ to turn the **No Link** on/off.

RESET

To restore to the default settings or reset the Wi-Fi connection, you can reset the Parent unit by pressing the **RESET** key at the back of the unit.

Insert a pin into the **RESET** hole on the back of the Parent unit, and then gently press the button inside.

OR

1. Press  to enter the main menu.
2. Press  or  to go , and press .
3. Press  or  to select , then press  to enter.
4. Select **Reset settings**.

Help & Info

Product Info & Support

1. Press  to enter the main menu.
2. Press  or  to go the  **Help & Info** page, and press .
3. Press  or  to select  **Help**, then press  to get the **product support website**.

How to set up Wi-Fi connection

1. Press  to enter the main menu.
2. Press  or  to select **Help & Info** page.
3. Press  or  to select  **How-to Video**, then press  to watch the **video on Wi-Fi setup** procedure.

System Information

 
1. Press  to enter the main menu.
2. Press  or  to select **Help & Info** page.
3. Press  or  to select  **System Info** to check the Parent unit and Baby Unit software version.

Wall Mount (Optional)


Notes:

- Check for reception strength and the Baby Unit's viewing angle before drilling the holes.
- The types of screws and wall plugs you need depend on the composition of the wall. You may need to purchase the screws and wall plugs separately to mount your Baby Units.


1. Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown. Remove the wall mount bracket and drill two holes in the wall 5.5 mm drill bit.

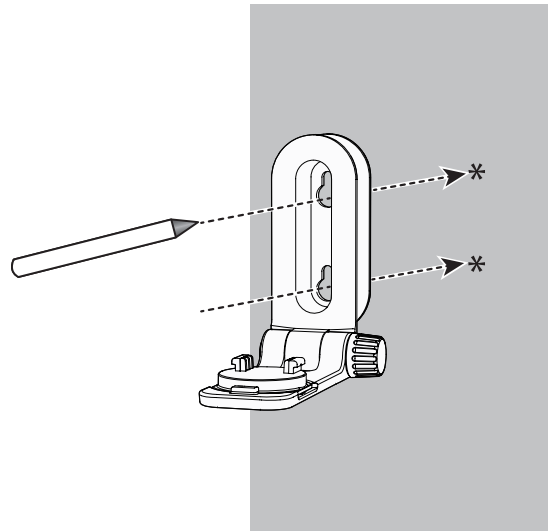

 
2. If you drill the holes into a stud, go to step 3.
 - If you drill the holes into an object other than a stud, insert the wall plugs into the holes. Tap gently on the ends with a hammer until the wall plugs are flush with the wall.

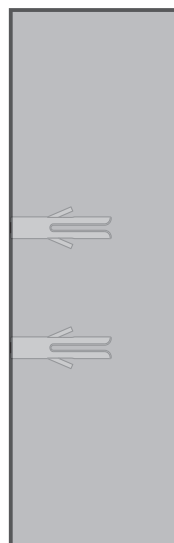

 
3. Insert the screws into the holes and tighten the screws until only 6.5 mm of the screws are exposed.

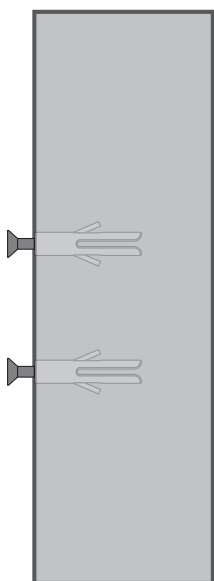

 4. Place the Baby Unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the Baby Unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.

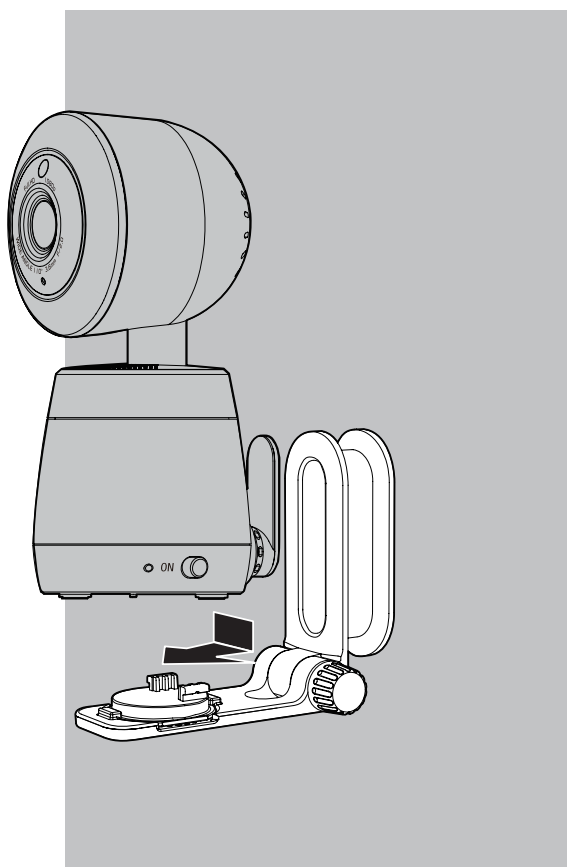

 5. You can maximize your Baby Unit's viewing angles by tilting the wall mount bracket. Hold the Baby Unit, and then rotate the knob in an anti-clockwise direction. This will loosen the joint of the wall mount bracket. Tilt your Baby Unit up or down to adjust to your preferred angle. Then, rotate the knob in a clockwise direction to tighten the joint and secure the angle.

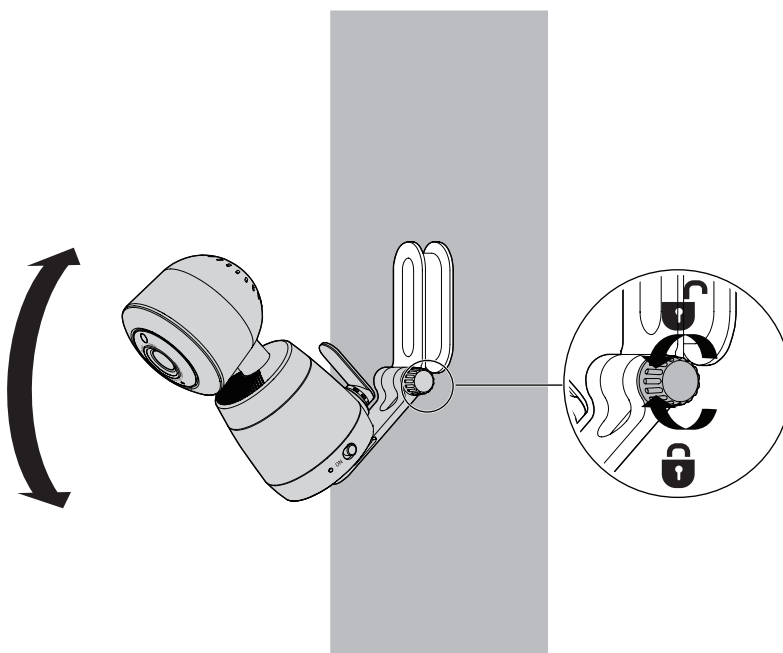

Additional Information

General Product Care

To keep this product working well and looking good, follow these guidelines:

- Avoid placing near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- Clean with a soft damp cloth.
- DO NOT immerse the parent unit or the baby unit in water and do not clean under running water.
- DO NOT use solvents, household cleaning sprays, or liquid cleaners.
- Make sure the Parent unit and the Baby Unit are dry before reconnecting to the mains supply..

Storage

When you are not going to use the baby monitor for some time, store the Parent unit, the Baby Unit and the adaptors in a cool, dry place.

Adult Supervision

- This baby monitor should be used as an aid and proper adult supervision is required.
- Do not place the Baby Unit inside the crib or playpen.
- As for children's safety, touch or play with the baby monitor and all the accessories are not allowed. THIS IS NOT A TOY.

Technical Specifications

Technology	Wi-Fi 2.4GHz 802.11 b/g/n
Internet connection	Minimum Requirement: 1.5 Mbps @ 720p or 2.5 Mbps @1080p upload bandwidth per Baby Unit
LCD	5" Colour LCD (IPS 1280x720 pixels)
Nominal effective range	Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Baby Unit power adaptor: Output: 5V DC @ 1.5A Parent unit power adaptor: Output: 5V DC @ 2A Parent Unit: 3.7V 5000mAh Lithium-ion battery OR: 3.85V 4900mAh, 18.87Wh Li-ion Polymer Battery

Customer service and product warranty

IMPORTANT

Please retain this booklet with your sales receipt as proof of the date of purchase.

Customer Service

If you require assistance in operating this product, please call the TechHelp Information Line on 1300 369 193 or contact VTech by e-mail at: tcpsupport_au@vtech.com.

Voluntary Product Enquiry

In addition to your Statutory Rights and subject to the conditions below, VTech warrants that this product will be free from any defect in materials or workmanship under conditions of normal use for a period of 24 months from date of purchase.

VTech does not warrant that the product will be free from defects if defects are caused by an accident, misuse, abuse, improper installation or operation, vermin infestations, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by VTech; or where the product has been damaged by lightning or a mains power surge. To make a claim under this Voluntary Product Warranty you must call the TechHelp Information Line on 1300 369 193 or contact VTech by e-mail at: tcpsupport_au@vtech.com where a Customer Service Representative will inform you of the product return process. You will need to ensure that:

- You provide proof of purchase;
- Your product is suitably packaged (original packaging is not required); and
- You have included all components from the original purchase.

For your records

Date of purchase:

Place of purchase:

Serial number:

For Voluntary Product Warranty purposes, proof of purchase is required so please keep your receipt.

The benefits conferred by this Voluntary Product Warranty are in addition to other rights and remedies that are available to you under law, which cannot be excluded. The processes for this Voluntary Product Warranty in no way limit your rights which arise as a result of your Statutory Rights.

This Voluntary Product Warranty is given by:

VTech Telecommunications (Australia) Pty Ltd ABN 70 136 672 627

Address: 24 Gilby Road, Mount Waverley 3149

IMPORTANT NOTE: THIS IS NOT A PRODUCT RETURN OR SERVICE ADDRESS – PLEASE CONTACT TECHHELP BY PHONE OR EMAIL FOR PRODUCT AND WARRANTY SUPPORT. NO LIABILITY WILL BE ACCEPTED BY VTECH FOR PRODUCTS RETURNED TO THIS ADDRESS UNDER THIS VOLUNTARY PRODUCT WARRANTY.

Phone number: 1300 369 193

Email address: tcpsupport_au@vtech.com

Statutory Rights

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

Android™ and Google Play™ are trademarks of Google Inc.

App Store is a trademark of Apple Inc., registered in the U.S. and other countries.

iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.