



Learning Baby Tad™



A daytime-nighttime friend!

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Learning Skills

Letter Recognition

The *Alphabet Song* introduces letter names.

Early Number Concepts

Songs and activities explore numbers 1 through 5.

Motor Skills and Movement

Squeezing, clapping and dancing develop coordination and fine motor skills.

Body Parts Recognition

Learning BABY TAD helps babies recognize hands, feet, and belly.

There's more to love and learn from LeapFrog!

Each spin of the wheel introduces letters, animals, sounds and songs.

The Spin and Sing Alphabet Zoo™

6+ months



Collect the whole Learn & Groove™ band for bilingual learning through music and movement!

Learn and Groove Counting Maracas

6+ months



Learn and Groove Musical Table

6+ months

Sold separately. All items may not be available in all markets. Actual product may vary.



See the Learning.

Learning experiences are never one-size-fits-all.

That's why we created a customizable online LeapFrog® Learning Path that lets you celebrate and shape each child's unique learning journey.

Connect and see what they're learning, how they're growing and, most importantly, who they're becoming.

leapfrog.com/learningpath


Register your product online!

You can also sign up to receive email updates with special offers, educational insights and the latest in learning from LeapFrog.

leapfrog.com

Don't have web access? See the reverse side for instructions on how to register by mail.

Instructions for Play

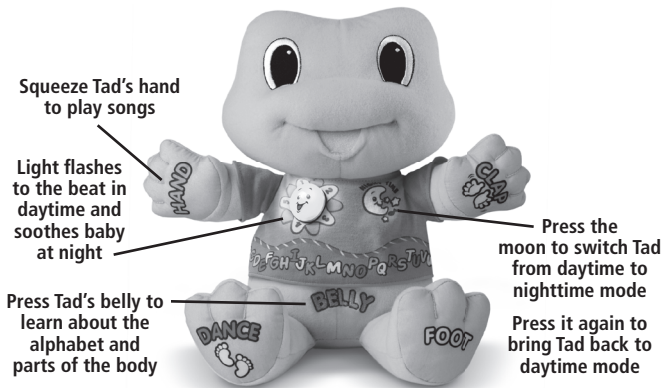

Getting Started

To turn on/off Learning BABY TAD™, use the switch on the battery pack through the back of Learning BABY TAD's shirt. Note: In Daytime Mode, Learning BABY TAD will automatically turn off after 30 seconds of inactivity. You can wake him up by pressing any of Learning BABY TAD's six touch points: his hands, feet, belly, or the moon on his shirt.

Function/Game Modes

Daytime Mode: Squeeze Learning BABY TAD's hands, feet or belly to learn and play all day! Dance, clap and sing to 10 happy songs, including *Itsy Bitsy Spider*, *Alphabet Song*, *If You're Happy and You Know It* and more! Introduce ABCs, counting, and parts of the body through fun activities and songs.

Watch the sun on Learning BABY TAD's shirt flash to the beat during activities and music!

Nighttime Mode: Nod off to 10 minutes of soothing bedtime lullabies. Press the moon on Learning BABY TAD's shirt to enter Nighttime Mode, and then squeeze one of his hands to hear five minutes of classical music. To add five more minutes of music, squeeze one of his hands again for up to ten minutes of soothing melodies. Note: Pressing the moon switch again will bring Tad back to daytime mode.

Melodies include:

Twinkle, Twinkle Little Star • *Adieu* • *Air* • *Fur Elise* • *Liebestraum Nocturne* • *Romanze* • *Traumerai* • *Weber's Waltz* • *Wiegenlied*

Instructions For Care

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken part, remove toy from use.

ATTENTION : Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3AA (called LR6 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.
DO NOT dispose of batteries in fire, as batteries may explode or leak.
DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).
DO NOT use rechargeable batteries.
DO NOT recharge non-rechargeable batteries.
DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille et peut constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.
NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.
NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
NE PAS utiliser des piles rechargeables.
NE PAS recharger des piles non rechargeables.
NE PAS court-circuiter les terminaux d'alimentation.

CAUTION: This is not intended as a crib toy. To prevent entanglement injury, NEVER add strings, ties or other products to this item.

ATTENTION : Ce jouet n'est pas conçu pour les berceaux et les lits d'enfants à barreaux. Pour éviter tout danger d'enchevêtrement, ne jamais rajouter de fi celles, rubans ou toute autre attache à ce jouet.

Troubleshooting

Symptom

Toy does not turn on or does not respond

Try This

- Make sure the Volume Control/OFF switch is not in the OFF position.
- Make sure batteries are correctly installed.
- Make sure battery cover is securely attached.
- Remove batteries and put them back in.
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth.
- Install new batteries.

Toy makes strange sounds or behaves erratically

- Follow the above instructions to clean battery contacts.
- Install new batteries.

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at <http://www.leapfrog.com/support> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at <http://lfcanada.custhelp.com> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

UK Consumer Service Contact: Visit our UK Consumer Support website at <http://leapfroguk.custhelp.com> 24 hours a day, or call 0800 169 5435, or Eire +44 (0)1702 200244, during normal business hours.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au or free-call 1800 244 543 during normal business hours.

IMPORTANT: If you have a problem with this product, return it to the retailer where the product was purchased for exchange. If the retailer is unable to assist you for any reason, contact LeapFrog Consumer Services. If our service representative is unable to help you resolve the problem, you will be given instructions on how to replace the product and an authorization number. Returns must have a Return Merchandise Authorization (RMA) number to be accepted at our warehouse. If you need replacement parts for this product, please contact LeapFrog Consumer Services.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Please call Consumer Support at the number listed above or see our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Soumis à une garantie limitée de trois (3) mois. Veuillez s'il vous plaît communiquer avec notre service à la clientèle au (800) 701-LEAP (5327) ou voir notre site Internet à www.leapfrog.com pour tous les renseignements. LeapFrog ne pourra être tenu responsable de tout dommage accessoire ou indirect découlant de la violation de toute garantie reliée à ce produit. Certaines juridictions ne permettent pas l'exclusion ou la limitation de dommages accessoires ou indirects, ou la limitation de la durée d'une garantie implicite, par conséquent, les limites ou exclusions précédentes peuvent ne pas s'appliquer à tous.

PRODUCT REGISTRATION: Register your product online at leapfrog.com or just mail us the following information:

- First and last name
- Street address, city, state, zip code
- Age of purchaser
- Email address
- Child's birth date (optional)
- The LeapFrog product that you purchased
- Yes, sign me up for email news from LeapFrog (optional)

PRIVACY POLICY: To view LeapFrog's privacy statement, go to leapfrog.com.

U.S. Residents

Mail your information to:
LeapFrog
ATTN: Product Registration
P.O. Box 981123
El Paso, TX 79998-1123

UK Residents

Mail your information to:
LeapFrog Toys (UK) Limited
36 Windsor Street, Uxbridge
Middlesex, UB8 1AB
UNITED KINGDOM

Canadian Residents

Mail your information to:
LeapFrog Canada
466 Speers Rd., 3rd Floor
Oakville, Ontario
L6K 3W9
CANADA

Residents of Australia and New Zealand

Mail your information to:
Funtastic Limited
635 Waverley Road
Glen Waverley
Victoria 3150
AUSTRALIA

Registration of your product is not required for your warranty or your use of your product.

LEAPFROG, the LeapFrog Baby Logo, the LeapFrog logo, BABY TAD, LEARN & GROOVE, and SPIN & SING ALPHABET ZOO are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2007 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 6 months and up. / Convient aux enfants à partir de 6 mois.
Part number 605-11285-A