



LetterCrazy!

PHONICS GAME



Bop around!
Learn letters and letter sounds.

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Learning Skills

Think Fast!

Match all 26 letters to sounds and words.

Phonics Skills

The LETTER CRAZY!™ game helps develop phonics skills by challenging children to identify letters through letter sounds and initial word sounds. Developing phonics skills is an important step in building a foundation for reading.

Motor Skills

The LETTER CRAZY! game develops hand-eye coordination by encouraging children to respond quickly to verbal cues.

Learning Levels

The LETTER CRAZY! game features three challenge levels, which allows children to progress to more challenging curriculum as they acquire new skills and confidence.

Expand the learning fun! Collect them all.

Listen, remember and match!
3 in a row wins.



MATCH UP!™
Concentration Game

3-6 years

Twist and spin!
Get the sequence right to win.



FIX THE MIX!™
Sequencing Game

3-6 years

Bop around!
Learn letters and letter sounds.



LETTER CRAZY!™
Phonics Game

3-6 years

Games sold separately. All items may not be available in all markets. Actual product may vary.



See the Learning.™

Learning experiences are never one-size-fits-all. That's why we created an online Learning Path that can be custom-tailored to shape and inspire each child's unique learning journey. Connect and see what they're learning, how they're growing and, most importantly, who they're becoming.

leapfrog.com/learningpath



Register your product online!

You can also sign up to receive email updates with special offers, educational insights and the latest in learning from LeapFrog.

leapfrog.com

Don't have web access? See the reverse side for instructions on how to register by mail.

Instructions for Play



Getting Started

To turn on the LETTER CRAZY!™ game, slide the switch from the OFF position to one of the 3 level positions. Turn it off by returning the switch to the OFF position.

Note: The LETTER CRAZY! game will automatically turn off after 1 minute of inactivity. You can turn it on again by sliding either of the switches or pressing the Start button.

Function/Game Modes

The LETTER CRAZY! game features 3 levels of play. To play a level, move the switch from the OFF position to the level you want to play (1, 2 or 3). The LETTER CRAZY! game shows a target letter on the screen. When one of the critters lights up, listen for the clue. If it matches the target letter, bop the critter before the light goes out! The LETTER CRAZY! game will announce a score at the end of each round.

Level 1: In the first level, all the word clues begin with the target letter shown on the screen. There are no incorrect answers in this level and the pace is set for beginners.

Level 2: In this level, your child matches letter names to the target letter. They need to listen carefully—some of the letters they hear won't match the target letter! The target letter changes throughout the game, and the pace quickens as your child makes correct matches.

Level 3: In this level, your child must listen for the target letter name and words that begin with the target letter. The target letter changes throughout the game, and the pace quickens as your child makes correct matches.

One- and 2-Player Modes: All three challenge levels can be played in 1- or 2-player mode. In 2-player mode, each player completes one round. The player with the highest score wins.

Instructions For Care

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT** incinerate used batteries.
- DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- DO NOT** mix old and new batteries or types of batteries (i.e., alkaline/standard).
- DO NOT** use rechargeable batteries.
- DO NOT** recharge non-rechargeable batteries.
- DO NOT** short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- NE PAS** incinérer les piles usagées.
- NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.
- NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- NE PAS** utiliser des piles rechargeables.
- NE PAS** recharger des piles non rechargeables.
- NE PAS** court-circuiter les terminaux d'alimentation.

 **CAUTION:** To prevent entanglement injury, NEVER add strings, ties or other products to this item.

 **ATTENTION :** Pour éviter tout danger d'accrochage, ne jamais rajouter de ficelles, rubans ou tout autre produit à ce jouet.

Troubleshooting

Symptom

Toy does not turn on or does not respond

Try This

- Make sure the OFF/Levels switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at <http://www.leapfrog.com/support> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at <http://lfcanada.custhelp.com> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

U.K. Consumer Service Contact: Visit our U.K. Consumer Support website at <http://leapfroguk.custhelp.com> 24 hours a day, or call 0800 169 5435, or Eire +44 (0)1702 200244, during normal business hours.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au or free-call 1800 244 543 during normal business hours.

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc. could void the user's authority to operate the equipment. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IMPORTANT: If you have a problem with this product, return it to the retailer where the product was purchased for exchange. If the retailer is unable to assist you for any reason, contact LeapFrog Consumer Services. If our service representative is unable to help you resolve the problem, you will be given instructions on how to replace the product and an authorization number. Returns must have a Return Merchandise Authorization (RMA) number to be accepted at our warehouse. If you need replacement parts for this product, please contact LeapFrog Consumer Services.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Please call Consumer Support at the number listed to the left or see our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Soumis à une garantie limitée de trois (3) mois. Veuillez s'il vous plaît communiquer avec notre service à la clientèle au (800) 701-LEAP (5327) ou voir notre site internet à www.leapfrog.com pour tous les renseignements. LeapFrog ne pourra être tenu responsable de tout dommage accessoire ou indirect découlant de la violation de toute garantie reliée à ce produit. Certaines juridictions ne permettent pas l'exclusion ou la limitation de dommages accessoires ou indirects, ou la limitation de la durée d'une garantie implicite, par conséquent, les limites ou exclusions précédentes peuvent ne pas s'appliquer à tous.

Product Registration

Register your product online at leapfrog.com or just mail us the following information:

- First and last name
- Street address, city, state, zip code
- Age of purchaser
- Email address
- Child's birth date (optional)
- The LeapFrog product that you purchased
- Yes, sign me up for email news from LeapFrog (optional)

Privacy Policy: To view LeapFrog's privacy statement, go to leapfrog.com.

U.S. Residents

Mail your information to:
LeapFrog
ATTN: Product Registration
P.O. Box 981123
El Paso, TX 79998-1123

U.K. Residents

Mail your information to:
LeapFrog Toys (U.K.) Limited
36 Windsor Street, Uxbridge
Middlesex, UB8 1AB
UNITED KINGDOM

Canadian Residents

Mail your information to:
LeapFrog Canada
466 Speers Rd., 3rd Floor
Oakville, Ontario
L6K 3W9
CANADA

Residents of Australia and New Zealand

Mail your information to:
Funtastic Limited
635 Waverley Road
Glen Waverley
Victoria 3150
AUSTRALIA

Registration of your product is not required for your warranty to be in effect or to use your product.

LEAPFROG, the LeapFrog logo, SEE THE LEARNING, LETTER CRAZY!, FIX THE MIX!, MATCH UP! and the LeapFrog Learning Path logo are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2007 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 3-6 years.
Convient aux enfants de 3 à 6 ans.

Part number: 605-11201-A