

To be there every step of the way.

It's a hope you have for your child and one that LeapFrog shares. From pretend play to gameplay, toys like My Own Leaptop let children use their imaginations to develop skills they'll use in real life. Get more ideas to support your child's learning at: leapfrog.com/learningpath



My Own Leaptop™
2+ years



Text & Learn* • 3+ years



Leapster2 Learning Game System*
4-8 years



My Own Leaptop™

Quick Connect Guide and Parent Instructions



Learning with a personal touch!

This guide contains important information. Please keep it for future reference.



See your child's play and learning online exclusively with the Learning Path!

QUICK CONNECTION GUIDE

My Own Leaptop™

Customize/customise in three simple steps!

Please read CAUTIONS & WARNINGS before proceeding.
Veuillez lire les instructions de sécurité avant de commencer.



BEFORE you plug in the USB cable: Go to leapfrog.com/myownleaptop and download the LEAPFROG® Connect Application for MY OWN LEAPTAP. Follow the installation steps to set up your child's Leaptop.




Turn the Leaptop toy on. Connect the Leaptop to your computer with the included USB cord. (The USB port is located on the left side of the Leaptop screen.)



Personalize/personalise with your child's name, 3 emails from family or friends and the music playlist that you choose! Save to your child's Leaptop and start the learning fun!

DETAILED CONNECTION GUIDE: GETTING STARTED

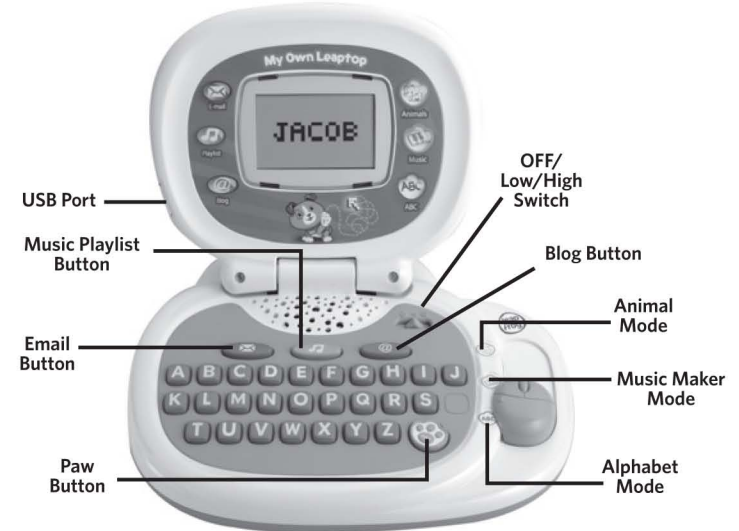

CUSTOMIZING/CUSTOMISING YOUR CHILD'S LEAPTAP!

Remove the plastic demo pull tab from the back before you connect the Leaptop to your computer or your child plays with the Leaptop.

I. Install the LEAPFROG® Connect Application*

The LEAPFROG Connect Application enables you to download the spelling and audio for your child's name, choose emails to "send" and who they're from and select fun and familiar melodies for your child's Leaptop. You can also create a personal LEAPFROG® Learning Path for your child online to see the skills your child is exploring, get learning ideas that are tailored to your child and more. Please read CAUTIONS & WARNINGS before proceeding.

To install:

1. Open a Web browser on your computer and go to leapfrog.com/myownleaptop.
2. Click the link to download the LEAPFROG Connect Application for MY OWN LEAPTAP™ to your PC or Mac® computer.
3. Download and run the installation program. On-screen instructions will guide you through the full installation process.

*If you already have the LEAPFROG Connect Application installed for another LeapFrog Connected toy, you will still need to download and install the application to access the MY OWN LEAPTAP features.

II. Download personalized/personalised content and choose the music!

Once you have installed the LEAPFROG® Connect Application and set up a LeapFrog parent account, you can download personalized/personalised audio quickly and easily:

1. Slide the small door over the USB port to the side and plug the included USB cord into the port. (The USB port is on the left side of the Leaptop lid.) Turn on the Leaptop.



Please read Safety Instructions before proceeding.

2. Connecting the MY OWN LEAPTROP to the computer should automatically launch the LEAPFROG Connect Application. If it does not launch, simply find the LEAPFROG Connect Application on your desktop and double-click the icon. Make sure you are connected to the Internet.



3. Follow the on-screen directions to set up a LeapFrog parent account and enter your child's information.



4. From the LeapFrog Connect Home page, click on your child's name to enter the MY OWN LEAPTROP view. You can select the items you would like to personalize/personalise from the menu on the left-hand side of the screen. MY OWN LEAPTROP can store 5 melodies and 1 lyrical song, 3 customized/customised emails with different senders and a child's name (spoken and spelled).
5. Save your selections to the Leaptop. Once the transfer is complete, eject the Leaptop from your computer and remove the USB cable. (Note: MY OWN LEAPTROP will not function during download.)

HOW TO PLAY

MY OWN LEAPTROP™ has 3 function buttons and 3 modes of play.



Email Button

Press the Email button to see and hear emails from Scout or Violet in addition to the 3 personalized/personalised emails you downloaded to your child's Leaptop.



Music Playlist Button

Press the Music Playlist button to hear all the music—instrumental and lyrical—that you chose and downloaded to the Leaptop. Watch Scout dance along on-screen!



Scout or Violet's Blog Button

Press the Blog button to hear Scout or Violet's latest blog entries. Once you have downloaded a child's name to the Leaptop, the puppy will address your child by name after each entry.



Alphabet Mode

Slide the Mouse switch to the Alphabet mode to introduce letters and phonics. Press a letter to hear the letter name and sound—and see an animal that starts with the letter.



Music Maker Mode

Slide the Mouse switch to the Music Maker mode to turn the keyboard into a music station! Press the Paw button to start the background beat. The top row of keys adds silly sound effects, the middle row of keys adds percussion sounds and the bottom row of keys adds piano key sounds.



Animal Mode

Slide the Mouse switch to the Animal mode to learn about animals for each letter of the alphabet. Push a letter button to see or hear a clue about an animal whose name starts with that letter. Then push the Paw button to reveal what animal it is.

OFF/Low/High Switch


Slide the orange switch to turn on the Leaptop and choose the volume level. Slide it to the OFF position to turn off the Leaptop.

Note: MY OWN LEAPTROP will automatically turn off after a period of inactivity. You can wake it up again by pressing any button.

The LEAPFROG® Connect Application

The LEAPFROG® Connect Application, available for download at leapfrog.com/myownleaptop, allows you to:

- Personalize/personalise MY OWN LEAPTOP™ with your child's name
- Choose personal emails for your child from family members or friends
- Download customized/customised melodies and songs for MY OWN LEAPTOP
- Print coloring/colouring and activity pages featuring your puppy friends
- Connect to your child's unique LEAPFROG® Learning Path

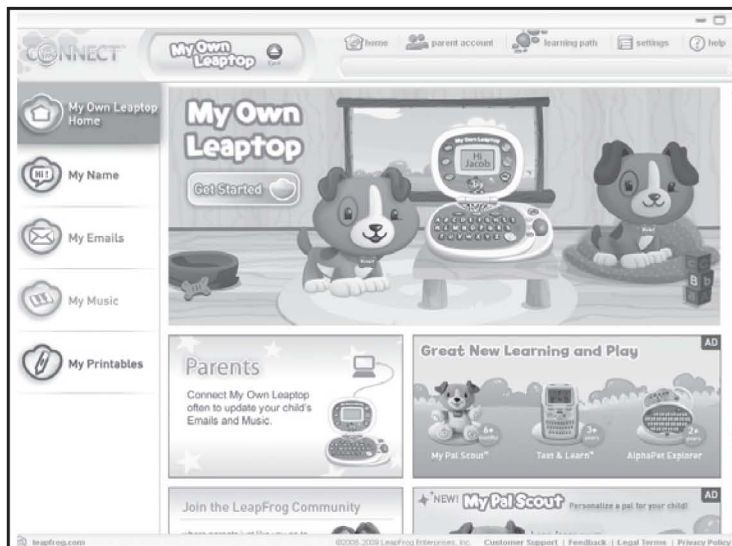

INSTRUCTIONS FOR CARE AND USE

Caring for MY OWN LEAPTOP™

For indoor, dry-location use only. Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the product. Never try to dismantle it.

Prendre soin de MY OWN LEAPTOP

Utiliser uniquement en intérieur, dans des lieux secs. Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser un liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Éviter une exposition prolongée aux températures extrêmes et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.

Cleaning MY OWN LEAPTOP

Disconnect MY OWN LEAPTOP from USB cable before cleaning. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the product in water. Allow to dry before reuse.

Nettoyer MY OWN LEAPTOP

Déconnecter le cordon USB avant de procéder au nettoyage. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). Ne pas utiliser de savon ou de produit détergent. Ne jamais immerger le produit dans l'eau. Bien sécher avant de réutiliser.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Informations sur les piles

Nécessite 3 piles alcalines AA (aussi appelées LR6 dans certains pays). Les piles incluses sont destinées à la démonstration en magasin et doivent être remplacées pour l'utilisation à la maison.

Battery Removal and Installation Instructions

1. To remove the battery cover, turn the Leaptop over to view the battery box.
2. Open the battery door with a Phillips screwdriver.
3. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Insert new batteries as shown in the polarity (+/-) diagram inside the battery compartment (positive sides "up"). Note: Do not allow child access to the product while the battery cover is off.
5. Replace battery door securely and tighten the screw.

Instructions de retrait et d'installation des piles

1. Retourner My Own Leaptop pour voir le couvercle du compartiment des piles.
2. Si des piles usagées sont présentes, veuillez les enlever de la boîte en tirant sur l'une des extrémités de chaque pile.
3. Enlever le couvercle de la boîte à piles avec un tournevis Phillips.
4. Installer les nouvelles piles comme indiqué sur le schéma de polarité (+/-) reproduit à l'intérieur du compartiment à piles. Note: Les enfants ne devraient pas avoir accès au produit tant que le couvercle n'est pas correctement remis en place.
5. Bien refermer le couvercle du compartiment des piles.

SAFETY INSTRUCTIONS

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the product. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).

DO NOT recharge non-rechargeable batteries.

DO NOT use rechargeable batteries. The product may not operate properly and may not function at all.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS recharger des piles non rechargeables. Les piles rechargeables ne doivent être chargées que sous la supervision d'un adulte.

NE PAS utiliser de piles rechargeables. Le produit pourrait ne pas fonctionner correctement ou NE PAS fonctionner du tout.

NE PAS court-circuiter les terminaux d'alimentation.

USB Cable

Use only the USB cable provided by LeapFrog Enterprises, Inc. Using any other cable may exceed FCC and other regulatory emissions limits. The product must be used only with the recommended USB connection. The USB cable is not a toy. Disconnect the product from the USB connection before cleaning. USB connectors and cable used with the product must be regularly examined for damage to the cord, plug and other parts and, in the event of such damage, the cable must not be used until the damage has been repaired. Cable provided is a shorter model to provide additional protection against strangulation. Only adults should connect the product to this cable.


Câble USB


Utilisez exclusivement le câble USB fourni par LeapFrog Enterprises, Inc. L'utilisation d'un autre câble peut dépasser les limites de la FCC (Commission fédérale américaine des communications) et les autres limites réglementaires en matière d'émission. Le câble USB n'est pas un jouet. Déconnectez le jouet du port USB avant d'entamer toute opération de nettoyage. La prise et le câble USB utilisés avec le produit doivent être régulièrement vérifiés (la prise, la corde ou toute autre partie). Si un ou plusieurs éléments sont abîmés, le câble ne doit pas être utilisé avant qu'une réparation n'ait été effectuée. Le câble fourni est un modèle plus court afin de renforcer la protection contre l'étranglement. Seuls les adultes devraient connecter le produit à ce câble.

CAUTIONS & WARNINGS

 **CAUTION:** Adult supervision is required at all times while child is using this product. Only an adult should open product to install batteries or connect USB cable.

 **ATTENTION :** La supervision d'un adulte est requise lorsque l'enfant joue avec ce produit. Seul un adulte doit ouvrir le produit pour installer les piles ou le connecter au câble USB.


 **WARNING:** The USB cord could be a strangulation hazard. Keep out of reach of children under 3 years of age. Children pulling on the USB cable could cause the computer monitor, TV or other equipment to which the device is connected to fall with the possibility of property damage, serious personal injury or death. Child should only play with product when USB cable is disconnected and battery cover is securely in place.


 **AVERTISSEMENT :** Le câble USB peuvent représenter un risque d'étranglement. Tenez-les hors de portée des enfants de moins de 3 ans. En tirant sur le câble USB, un enfant peut causer la chute de l'écran de l'ordinateur, de la télévision ou d'un autre appareil connecté à ce dispositif et provoquer des risques de dommages matériels, de blessures graves, voire même la mort. L'enfant ne devrait jouer avec le produit que lorsque le câble USB est débranché et que le couvercle du compartiment des piles est bien en place.


 **CAUTION:** Routinely check this product for proper and safe condition. If there is any damage or broken parts, remove product from use.

 **ATTENTION :** Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

 **CAUTION:** If for any reason the screen (display) is fractured or cracked, immediately remove this product from use and contact LeapFrog Consumer Services for replacement if under warranty.

 **ATTENTION :** Si pour quelque raison que ce soit, l'écran (d'affichage) est brisé ou fendu, mettez immédiatement ce produit hors de portée des enfants. Contactez ensuite le Service clientèle de LeapFrog pour qu'il soit remplacé (si ce produit est sous garantie).

 **WARNING:** It is rare but possible for seizures to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, play/watch in a well-lit room and take 10- to 15-minute breaks every hour.

 **AVERTISSEMENT:** Il peut arriver que certaines personnes soient sujettes à une attaque sous l'effet d'une lumière vive ou d'un jeu de lumières provenant de l'écran d'un téléviseur ou d'un ordinateur. Pour réduire ce risque, utilisez dans une pièce suffisamment éclairée, et faites une pause toutes les heures, pendant 10 à 15 minutes.

TROUBLESHOOTING

Symptom	Try This
MY OWN LEAPTOP™ does not turn on or does not respond	<ul style="list-style-type: none">• Make sure Off/Low/High switch is in the Low or High position• Make sure batteries are correctly installed• Make sure battery cover is securely attached• Remove batteries and put them back in• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth• Install new batteries• If USB cable is connected, remove it
MY OWN LEAPTOP operates erratically or makes loud noises	<ul style="list-style-type: none">• Turn Leaptop off and install new batteries

For a more detailed list of troubleshooting hints and other helpful information, go to leapfrog.com/support.

PC Requirements:

Internet connection (high-speed connection recommended)
Pentium® 4 or equivalent (1 GHz processor or faster recommended)
Windows® XP, Windows Vista® or Windows® 7 operating system
Monitor resolution of 1024 x 768
Available USB port
512 MB of RAM (1 GB recommended)
300 MB free disk space
Latest version of Adobe® Flash® Player

Mac® Computer Requirements:

Internet connection (high-speed connection recommended)
PowerPC™ G4 or any Intel®-based Apple® computer (1 GHz processor or faster recommended)
Mac OS® X 10.4.11+ operating system software (10.5+ recommended)
Monitor resolution of 1024 x 768
Available USB port
512 MB of RAM (1 GB recommended)
300 MB free disk space
Latest version of Adobe® Flash® Player

CONSUMER SUPPORT

U.S. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au.

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

Canada:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the adult to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'adulte doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, MY OWN LEAPTOP, LEAPSTER and the LEAPSTER2 logo are trademarks or registered trademarks of LeapFrog Enterprises, Inc. © 2010 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com



Model Numbers: 19150 & 19167

LeapFrog Enterprises, Inc., 6401 Hollis Street, Emeryville, CA 94608 USA
(800) 701-LEAP (5327)

For ages 2+ years. / Convient aux enfants de 2+ ans.

Part number: 605-11559-A

Item Number: 19150 & 19167