



My Pal Scout™



Quick Start Guide

A cuddly, customizable puppy pal



My Pal Violet™

6+ months

Parent's Guide

Please keep this parent's guide as it contains important information.

GET STARTED

Step 1

Before you play with or connect your puppy, remove the plastic pull tab from the back and discard.

Go to leapfrog.com/MyPals2 on your device (smartphone, tablet or computer). For a list of supported browsers, see **System Requirements** on the opposite side of this guide.

Create or sign into your LeapFrog account. Follow the instructions to set up your child's profile. Then select your child's name and favorites.



Step 2

Open the hook-and-loop fastener on the back of your puppy to access the **Battery Box**, slide open the **Battery Box** door to reveal the **Cable**. (Note: Your puppy's **Power/Volume Switch** must be in the **On** position to successfully connect to your device.)

Connect the puppy's **Cable** from the **Battery Box** to your device's 3.5mm headphone jack (or adapter) on your smartphone, tablet or computer. (Do not plug the **Cable** into peripheral or external accessories, such as speakers, docks, etc.)

Follow the webpage instructions to turn your device's audio volume all the way up and to begin the download.




Step 3

Once you see the **Collar** light up and hear your puppy say, "I'm ready to play now," please disconnect the **Cable** from your device and tuck it back into the **Battery Box**. Close the **Battery Box** door and make sure that it is securely closed. Close the hook-and-loop fastener over the **Battery Box**.

I'm ready to play now!



INTRODUCTION

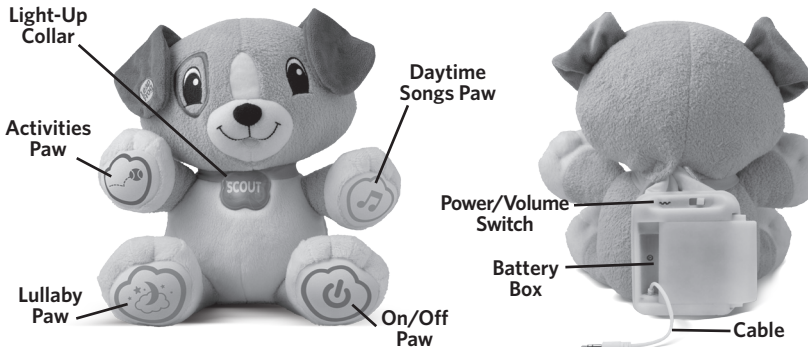

HOW TO PLAY



Press the **Daytime Songs Paw** to play an assortment of learning songs, personalized songs and melodies just for your baby.



Press the **Activities Paw** to hear your puppy talk about your child's favorite things, count hiccups, pretend to be other animals and talk about feelings.



The **Lullaby Paw** plays soothing lullaby music. Squeeze once to hear five minutes of music. Squeeze twice to hear 10 minutes of music. Squeeze a third time to hear 15 minutes of music.



To turn off your puppy, press the **On/Off Paw**. When your child is ready to play again, press any paw to resume play mode.

To turn off your puppy completely, use the **Power/Volume Switch** located on the **Battery Box**.

INSTRUCTIONS FOR CARE AND USE

Caring for Your Puppy

For indoor, dry-location use only. Keep food and beverages away from the product. Do not spill liquid of any kind on this product as it may render it inoperative. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the product. Never try to dismantle it.

Cleaning Your Puppy

Disconnect cable from your device before cleaning. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the product in water. Allow to dry before reuse.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery cover.
5. Replace the battery cover and tighten the screw to secure.

Informations sur les piles

Les piles incluses sont destinées à la démonstration en magasin et doivent être remplacées pour améliorer les performances du produit à la maison. Nécessite 3 piles alcalines AA (aussi appelées LR6 dans certains pays).

Retrait et installation des piles

1. Ouvrir le compartiment des piles à l'aide d'un tournevis.
2. S'il y a des piles usagées ou à plat, les retirer du compartiment en tirant sur l'une des extrémités de chaque pile.
3. Installer les nouvelles piles comme indiqué sur le schéma de polarité (+/-) reproduit à l'intérieur du compartiment de piles.
4. Bien refermer le couvercle du compartiment de piles.

IMPORTANT INFORMATION

SAFETY INSTRUCTIONS

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove used batteries from the product. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type (as recommended) are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).


NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

les accumulateurs doivent être chargés uniquement sous le contrôle d'un adulte. les accumulateurs doivent être enlevés du jouet avant d'être chargés.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery cover.
5. Replace the battery cover and tighten the screw to secure.

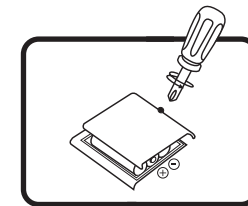

CAUTION: As packaged, a cable for adult’s use in transferring data is accessible via an opened battery door. After data transfer and battery installation has been completed by an adult, the battery door is to be secured by the adult using a Phillips screwdriver. To prevent access to the cable, DO NOT allow child to play with the toy if the battery door is not secured.

ATTENTION : Comme emballé, un câble pour l’utilisation de l’adulte dans le transfert de données est accessible via une porte de batterie ouvert. Après le transfert des données et l’installation de la batterie a été complété par un adulte, la porte de la batterie doit être fixée par l’adulte à l’aide d’un tournevis cruciforme. Pour empêcher l’accès au câble, NE PAS permettre à l’enfant de jouer avec le jouet si la porte de la batterie n’est pas fixée.

CAUTION: Plug the puppy’s cord directly into the 3.5mm headphone jack (or adapter) on your smartphone, tablet or computer. Do not plug the cord into peripheral or external accessories, such as speakers, docks, etc.

ATTENTION : Le câble Jack 3.5mm doit être branché uniquement à un smartphone, une tablette ou un ordinateur. Ne pas Connecter le câble à d’autres périphériques externes comme des enceintes, dock, chaînes stéréo,etc.

CAUTION: Routinely check this product for proper and safe condition. If there is any damage or broken parts, remove product from use.

ATTENTION : Vérifier régulièrement l’état et le fonctionnement de ce jouet afin d’en garantir la sécurité. S’il est cassé ou endommagé, meme partiellement, ranger ce jouet hors de portée de votre enfant.

CAUTION: This is not intended as a crib toy. To prevent entanglement injury NEVER add strings, ties or other products to this item.

ATTENTION : Ce jouet n’est pas conçu pour les berceaux et les lits d’enfants à barreaux. Pour éviter tout danger d’enchevêtrement, ne JAMAIS rajouter de ficelles, rubans ou toute autre attache à ce jouet.

TROUBLESHOOTING	
Symptom	Try This
Your puppy does not turn on or does not respond	- Make sure the Power/Volume Switch is in the On position - Make sure batteries are correctly installed - Make sure battery cover is securely attached - Remove batteries and put them back in - Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth - Install new batteries
Your puppy operates erratically or makes loud noises	- Follow the above instructions to clean battery contacts - Turn your puppy off and install new batteries
Your puppy does not detect your device even though the cable is connected to your device's headphone jack	- Check to see if the Cable is pushed all the way into the headphone jack - Disconnect and reconnect the Cable to your device. It might take a moment to recognize the toy - Increase your device's media volume level to high. (Smartphone users: Be sure to change media volume, not ringer volume.) - Ensure your browser meets the Minimum System Requirements. Try using a different browser - Try connecting the toy to a different device that meets the Minimum System Requirements - Use the included Cable attached to the battery box

For a more detailed list of troubleshooting hints and other helpful information, go to leapfrog.com/support

CAUTION: To be used under the direct supervision of an adult.

ATTENTION : Doit être utilisé sous la présence directe d’un adulte.

SYSTEM REQUIREMENTS

Minimum System Requirements
Internet connection (high-speed connection recommended)
Smartphone, tablet or computer with a 3.5mm headphone jack (or adapter)

Internet browser requirements:

PC:
Microsoft Edge (latest version), Chrome™ browser (latest version), or Mozilla Firefox (latest version)

Mac Computer:
Safari® browser (latest version), Chrome™ browser (latest version), or Mozilla Firefox (latest version)

iOS:
iOS version 10 or higher with Safari® browser (latest version) or Chrome™ browser (latest version)

Android™:
Android version 7.0 or higher with Chrome™ browser (latest version)

Microsoft Edge is a trademark of Microsoft Corporation; Android and Chrome are trademarks of Google LLC; Safari and Mac are trademarks of Apple, Inc.; and Mozilla and Firefox are trademarks of Mozilla Corporation. All trademarks, service marks, and company names are the property of their respective owners.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user’s authority to operate the equipment.

Canada:
CAN ICES-3 (B) / NMB-3 (B)

- Environmental Phenomena**
- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
 - In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the adult to reset the device by removing and reinstalling the batteries.

- Impact de l'environnement**
- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
 - Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'adulte doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name:	LeapFrog®
Model:	19156, 19190/19157, 19191
Product Name:	My Pal Scout™/My Pal Violet™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	6401 Hollis Street, Suite 100, Emeryville, CA 94608
Website:	www.leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE

CONSUMER SUPPORT

U.S. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.ca/support 24 hours a day.

For information on how this product might be recycled, visit www.leapfrog.com/recycle or call (800) 701-5327.

TM & © 2014 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com



Model Number 19156 for Scout and Model Number 19157 for Violet.

For ages 6+months./Convient aux enfants de 6+ mois.



*Visit our website for more
information about our products,
downloads, resources and more.*

***leapfrog.com**
leapfrog.ca*

*Read our complete warranty
policy online at
leapfrog.com/legal*

LeapFrog Enterprises, Inc.,
a subsidiary of VTech Holdings Limited.
TM & © 2014 LeapFrog Enterprises, Inc.
All rights reserved.
91-003882-002