

LeapFrog
epic™



Parent Guide


This guide contains important information. Please keep it for future reference. Ce guide contient des informations importantes. Veuillez le conserver pour toute référence future.

**Need help? Visit: leapfrog.com/support/leapfrogepic
Vous avez besoin d'aide ? Visitez le site : leapfrog.fr/support/leapfrogepic**

Get Started

- 1 Power Up** LeapFrog Epic™ tablet with the AC adapter/adaptor. Save time: set up while charging.
- 2 Set Up** Wi-Fi by following onscreen prompts. It's the easiest way to access the App Center/Centre.
- 3 Register** your device by creating a LeapFrog parent account. It's super quick and easy!
- 4 Download** your included apps. Wi-Fi, parent account and device set up required to access all included apps.
- 5 Create & Play!** You're all set for an awesome experience that's truly EPIC!

Features

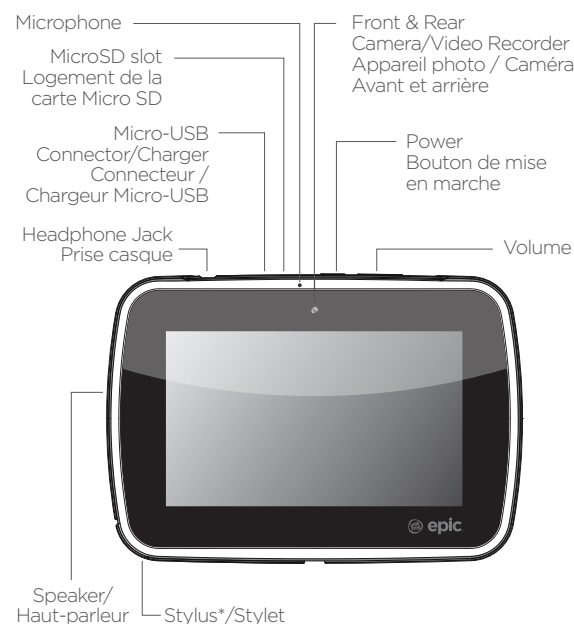

Parent Settings

Control your child's play with these interactive LeapFrog Epic™ features:

- Wireless settings** — Control connection setup and access to online experiences.
- Child profile** — Easily manage permissions and profile information or add a new profile.
- Peer-to-peer settings** — Control how your child plays with other children when two wireless LeapFrog Epic tablets are in close proximity to one another via local ad hoc Wi-Fi network. (See Local Communications below for more information.)
- App Center/Centre** — Parents can purchase digital content directly from the tablet with a Parent Account password. Control your child's access to the App Center/Centre, where they can watch trailers and create a wish list. Parents can choose whether children may view pricing and buy buttons.
- App Manager** — Control your child's access to included and downloaded apps.
- Time Controls** — Manage the amount of time your child spends on the tablet by total time, hours of the day and by app category.
- LeapSearch™ Controls** — Manage the web pages and websites your child explores in the LeapSearch Parent Portal.
- Tablet Settings** — Manage settings like language, time, date and more.

Access to Parent Settings is protected by a 4-digit parent lock code that must be established during initial setup. Parent Settings can be accessed from the Sign In screen by pressing the Parent Settings icon to log in with your parent lock. Alternatively, you can log in via the Parent Settings icon on the upper right hand corner of the child's Home Screen.

Forgetting or resetting your Parent Lock

If you have forgotten your 4-digit parent lock code you can look it up in the leapfrog.com Parent Account you created during device setup and registration. If you need to reset your parent lock, you can do it from the device or reference the FAQ section at leapfrog.com/support/leapfrogepic for more information.

Operating Instructions

- WARNING:** Please read all the Important Safety Instructions prior to using the LEAPFROG™ tablet. Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the LEAPFROG tablet or other property.
- WARNING:** Please read all safety instructions for any accessories or other products before using with the LEAPFROG tablet. LeapFrog is not responsible for the operation of third-party accessories or their compliance with safety and regulatory standards.

Wi-Fi connection support. If you experience any difficulty with Wi-Fi connectivity, troubleshooting suggestions are available at leapfrog.com/support

For indoor, dry-location use only. Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. In case the unit does get wet, unplug all cables and turn it OFF. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source. Do not re-connect to the AC outlet if wet or damaged.

Handle with care. To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product. Clean your hands before handling the product if they have been exposed to suntan lotions or other chemicals. Use the included bumper to help minimize damage from typical use and drops.

Avoid prolonged exposure to extreme temperatures and direct sunlight. Operate in places with temperatures ranging from 5°C (40°F) to 38°C (100°F). Do not leave the product in your car as the temperatures in parked cars can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

Battery Charging (BC)

The LEAPFROG™ tablet is equipped with a rechargeable lithium-polymer battery. It will require about 5 hours of charging using the included AC power adapter/adaptor prior to use. The tablet may also be charged via USB connection; however, this charging method will take much longer.

If the battery is charging when the device is off, a battery meter icon will light up on the dark screen. When the battery meter icon is full, the battery is fully charged. If it is charging when the device is on, the battery meter at the top of the screen will show the charging status and the charge level.

Charge the device in a well-ventilated area only. While charging the device do not cover it with anything such as a blanket, pillow or your child's body. Never allow your child to sleep with or on the device while it is charging. For power or battery issues, please contact LeapFrog Consumer Support.

Cleaning. Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Using connectors and ports. Never force a USB or other connector into a port on the device. If the connector does not fit into the port, double check the connector and port to ensure they match up and are positioned correctly, and make sure nothing is obstructing the port.

Environmental phenomena. The LEAPFROG tablet may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power OFF and then back ON. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by turning the power OFF and then back ON.

Static electricity and headphones. In certain dry environments, static electricity can build up in headphones and cause a small quick static discharge when plugging the headphones into a device. To avoid this static discharge from occurring, do not use in extremely dry environments or touch a grounded unpainted metal object to discharge static electricity before connecting the headphones to the device.

Do not connect to the AC wall outlet if wet or damaged.

Important Safety Instructions

- WARNING: CHOKING HAZARD** - Small Parts. Not for children under 3 yrs.
- WARNING:** The AC Adapter or USB cords could be a strangulation hazard. Not for children under 3 years.
- CAUTION:** Routinely check this tablet for proper and safe condition. If there is any damage or broken parts, such as a fractured or cracked screen (display), immediately remove the tablet from use.
- CAUTION: DO NOT GET WET.** Do not use the tablet and its accessories in the rain, near sinks or in other wet or highly humid locations. Ensure food or liquid is not spilled on the tablet or its accessories.
- CAUTION:** Do not attempt to dry the LEAPFROG™ tablet or its accessories with an external heat source, such as a microwave or hair dryer.
- CAUTION:** Do not store or carry the tablet and its accessories along with liquids, punctured, or subjected to a severe impact or fall. Do not expose to fire, explosion, or other hazard.
- CAUTION: DO NOT REPAIR OR MODIFY.** The LEAPFROG™ tablet does not contain any user-serviceable parts. Service should only be provided by LeapFrog Enterprises, Inc. If the product has been in contact with liquids, punctured, or subjected to a severe impact or fall, immediately remove this product from use and contact LeapFrog Consumer Services.
- WARNING:** It is rare but possible for seizures to be triggered by light accessories or patterns. Play/watch in a well-lit room and take 10 to 15 minute breaks every hour.
- PROTECT YOUR EYESIGHT.** Use the tablet in a well-lit room; take a 20-second break every 20 minutes and look at something far away; take 10 to 15 minute breaks every hour; and do not hold the screen too close to your eyes. If you experience any vision problems, such as blurred vision or eye pain, stop using the tablet and have your eyes checked.
- PROTECT YOUR HEARING.** Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss. When using headphones or ear buds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set

the volume while in a quiet environment; turn the volume down if you cannot hear people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

- PROTECT YOUR BODY. ERGONOMIC CONSIDERATIONS:** When using a tablet device, it is possible that repetition of certain motions or remaining in certain positions over for long periods of time may cause discomfort in the hands, neck, shoulders, or other parts of the body. Reduce risk of discomfort and repetitive motion injuries by using the tablet in a comfortable position and taking a 10 to 15 minute break every hour. If you experience any injury or ongoing discomfort, stop use and see a physician.

- CAUTION:** Keep the device at least 6" (15cm) away from pacemakers and other similar medical devices that may be sensitive to devices that contain magnets and emit electromagnetic fields.

Battery (BC) and AC Adapter/Adaptor

- WARNING:** A minimum separation distance of 0 cm must be maintained between the user's body and the device, including the antenna during body-worn operation to comply with the RF exposure requirements in Europe.
- WARNING:** The lithium rechargeable battery cannot be removed from the product. For your safety, never try to remove the battery. For power or battery issues, please contact LeapFrog Consumer Services.
- CAUTION:** The battery is only to be charged by adults or children 8+ years of age under the full supervision of an adult.
- CAUTION:** Use only the AC adapter/adaptor provided with the product.
- WARNING:** Not suitable for children under 3 years. Misuse of transformer (AC Adapter/ adaptor) can cause electric shock. (Note: The word "transformer" is sometimes substituted for the word "adapter.") Use only the included AC power adapter/adaptor.
- Connection of the transformer to the wall outlet should be performed only by an adult or child 8+ years of age.
- The transformer is not intended to be used as a toy, and the use of the transformer shall be under the full supervision of parents.
- As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.
- The power adapter/adaptor may become warm during normal use. Always allow adequate ventilation and use care when handling the power adapter/adaptor.
- Charge the device in a well-ventilated area only. While charging the

device do not cover it with anything such as a blanket, pillow or your child's body. Never allow your child to sleep with or on the device while it is charging.

- Do not prolong body contact with USB/AC cables while connected to a computer or AC outlet to avoid injury. Do not sit or sleep on cables while in use.
- Do not connect or disconnect with wet hands.
- The transformer should be periodically examined for conditions that may result in the risk of fire, electrical shock or injury to persons, such as damage to the cord, plug, blades, housing or other parts. If any such conditions are present, the transformer must not be used. Dispose of a damaged or faulty transformer in accordance with your local electrical product recycling regulations.
- The USB charging unit varies by country or region.

AC Adapter/Adaptor Electrical Ratings: Input: - 120VAC, 60Hz (for US); - 230VAC, 50Hz (for UK or EU); - 240VAC, 50Hz (for AS/NZL) Output: DCSV, 15A, 75VA

Regulatory Information

FCC Compliance Statement: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications to this unit not expressly approved by LeapFrog could void the EMC and wireless compliance and void the user's authority to operate the equipment. This product demonstrated EMC compliance using compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

