

Next steps for learning fun!

For indoor, dry-location use only.

Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

SOIN ET ENTRETIEN

Utiliser uniquement en intérieur, dans des lieux secs.

Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser un liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). N'utilisez pas de savon, de lessive, ou d'autres produits chimiques. Ne jamais immerger le produit dans l'eau. Éviter une exposition prolongée aux températures extrêmes et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.

Recycle. Find out how to recycle this product at leapfrog.com/recycle or call (800) 701-5327. For UK consumers, visit leapfrog.co.uk/recycle.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

ATTENTION: Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 yrs.

AVERTISSEMENT: RISQUE D'ETOUFFEMENT - Petits éléments risquant d'être ingérés. Ne convient pas aux enfants de moins de 3 ans.

For safety, please do not place any objects other than the letters provided on the toy.



Melody the Musical Turtle™
2+ years



My Own Leaptop™
2+ years



Musical Rainbow Tea Party
12+ months

CUSTOMER SUPPORT

U.S...... leapfrog.com/support
U.K...... leapfrog.co.uk/support

Canada..... leapfrog.ca/support
Australia..... info@funtastic.com.au

WARRANTY INFORMATION

Limited warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country.

Garantie limitée period. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays.

TM & © 2016 LeapFrog Enterprises, Inc. All rights reserved. leapfrog.com

For ages 3 to 6 years. Convient aux enfants de 3 à 6 ans .
Item number 19322/ Part number 605-12372-B

Products sold separately and may not be available in all countries. Actual products may vary.



Leaping Letters™



 
Parent Guide

This guide contains important information.
Please keep it for future reference.




Find out more at leapfrog.com

Features

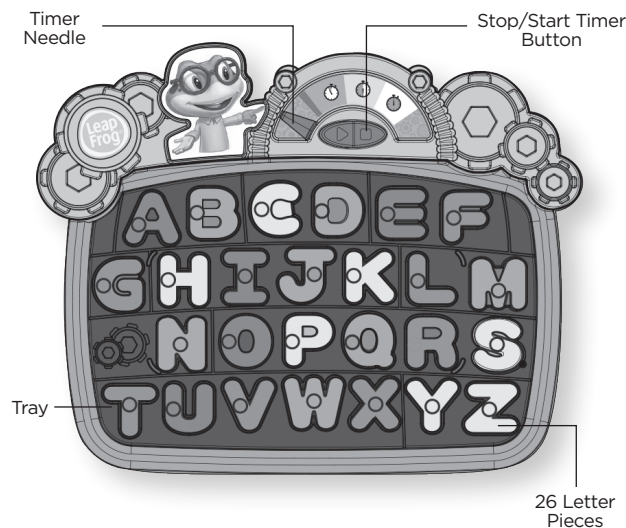

Word Building Card

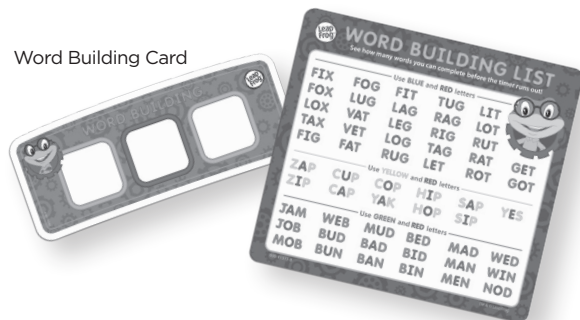 

Word Building List

Get Started

- 1 Remove the Letter Pieces and place them near the base so their grip handles are facing up.



- 2 Set the Stop/Start Timer Button to the Stop position.



- 3 Move the Timer Needle to the right to select the challenge level.

 


Challenge Level

Set the timer for different lengths of time.

- Great Challenge.** Try with any two colors of letters.
- Good Challenge.** Try with any three colors of letters.
- Fun Challenge.** Try with all the letters.

- 4 Push down the Tray until it locks into place.

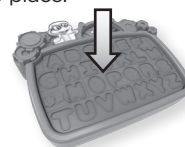

How to Play

Press Start on the Timer Button to start the timer, and then put the Letter Pieces in their spot as quickly as you can! If you finish before the timer runs out, press Stop on the Timer Button. Otherwise, the Letter Pieces will go pop.



Bonus Game - Word Builder

- 1 Set the Word Building Card into the spot provided on the Tray.
- 2 Place the Letter Pieces on the Word Building Card to spell words from the Word Building List.
- 3 Set the Timer Needle and time yourself to make it more challenging.