



Chat & Count

Smart Phone



Call on Scout and Violet for counting fun!

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.



Share the Learning

Visit leapfrog.com/learningpath to see the skills your child is exploring during play.



Share your special learning moments!
Like us at facebook.com/LeapfrogCanada

The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning progress updates, articles, product news and special offers from LeapFrog.

leapfrog.com

Fun next steps on your child's path to learning!

From pretend play...



I can learn
your name!

My Pal Scout*

6-36 months



Chat & Count

18+ months

To be there every step of the way.

It's a hope you have for your child and one that LeapFrog shares. As children explore early preschool skills, toys like the Chat & Count Smart Phone make learning part of the play, inspiring imaginations and encouraging new discoveries.



Tag™ Junior*

1-4 years

Get more ideas to support
your child's learning at:
leapfrog.com/learningpath

...to getting ready to read!

*Sold separately. Products may vary, and may not be available in all countries.

Learning Stones

Fun learning in a smart little phone!

Early Number Sense

Fun animations and a counting song introduce numbers and counting 1 to 10.

Pretend Play


25+ learning activities encourage imaginative play.

Social Skills

Children can learn conversational skills such as saying *hello*, *how are you*, *nice to talk to you* and *goodbye*.



Instructions for Play

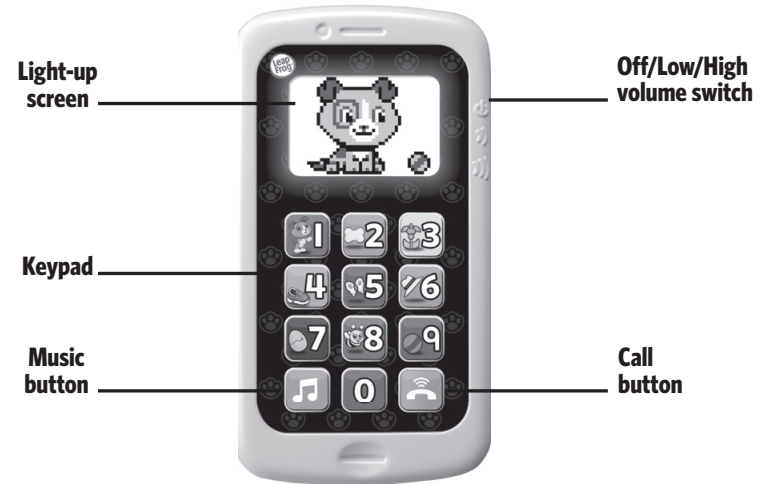

Getting Started

To turn on Chat & Count, slide the volume switch on the side to the desired volume setting. To turn it off, slide the switch to OFF.

Note: Chat & Count will turn off automatically after a period of inactivity. You can wake it up again by sliding the switch or by pressing any button.

Three Ways to Play!

Blending learning with pretend play, Chat & Count offers three engaging modes for children to explore with their puppy pal Scout or Violet.



Number Buttons

Press any number to see a funny animation about it. For example, if your child pushes the number 2, two puppy biscuits will fall from the sky and Scout or Violet will run in and eat them!



Call Button

Push the call button for fun pretend play activities. Children can call their puppy pal, make plans, listen to "voicemails" and more!



Music Button

Push the music button to hear a song about counting to 10, a phone manners song or instrumental tunes.

Instructions for Care

FOR INDOOR, DRY-LOCATION USE ONLY.

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.



CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.



ATTENTION : Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.



CAUTION: To be used under the direct supervision of an adult.



ATTENTION : Doit être utilisé sous la présence directe d'un adulte.



CAUTION: This toy is not intended for crib/bassinet use.



ATTENTION : Ce jouet n'est pas destiné aux lits pour bébé ni aux landeaux.



CAUTION: Using this device at loud volumes for long periods of time can permanently damage user's hearing.



ATTENTION : À pleine puissance, l'utilisation prolongée de cet appareil peut endommager de façon permanente l'oreille de l'utilisateur.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AAA (called LR03 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser des piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

Troubleshooting

Symptom	Try This
Toy does not turn on or does not respond	<ul style="list-style-type: none">• Make sure the Off/Low/High volume switch is not in the OFF position.• Make sure batteries are correctly installed.• Make sure battery cover is securely attached.• Remove batteries and put them back in.• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth.• Install new batteries.
Toy makes improper responses	<ul style="list-style-type: none">• Follow the above instructions to clean battery contacts.• Install new batteries.

FCC Notice:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CONSUMER SUPPORT

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our U.K. Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

For information on how this product might be recycled, visit www.leapfrog.com/recycle or call (800) 701-5327.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

TM & © 2013 LeapFrog Enterprises, Inc. All rights reserved.

For ages 18 months and up.

Convient aux enfants à partir de 18 mois.

Item number: 19145 and 19186

Part number: 605-11944-A