

Creativity Camera Protective Case & App



Creativity Camera

PROTECTIVE CASE & APP



Turns your iPhone®
or iPod touch® into a
kid-friendly camera!



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Free Creativity Camera app can be downloaded from the App Store.
Works with iPhone 4/4S/5 and iPod touch (4th & 5th generations).



Learning Path™

Discover your custom learning roadmap!

- Learning solutions to help kids reach their potential.
- Activities and printables for every age and stage.
- Educational insights for parents and kids.



Visit leapfrog.com/learningpath

The LeapFrog® Learning Path is not available in all countries.

Fun next steps on your child's path to learning!



Learn to Write with Mr. Pencil™ Stylus & App

3+ years



Read With Me Scout

2+ years



Scribble & Write

3+ years

Get more ideas to support
your child's learning at:
leapfrog.com/learningpath

Products sold separately, and may not be available in all countries. Actual products may vary.

Learning Skills

Unlock creativity app with 6 modes that focus on art, creativity, self-expression, matching and emotions.

Art & Creativity

Camera play and editing features encourage kids to develop their creativity while fostering a child's natural curiosity and sense of adventure.

Self-Expression


Kids can become inspired to create masterpieces of their own from the world around them.

Matching & Emotions

Games and activities provide kids with a whimsical way to learn.



Instructions for Play

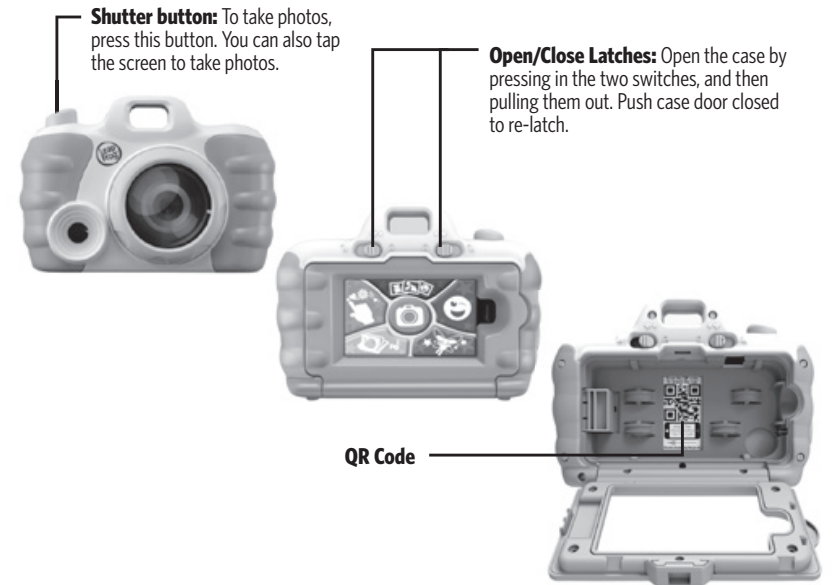

Getting Started



1. Download and launch the free LeapFrog Creativity Camera learning app from the App Store (no purchase necessary) for creative photo fun!
2. Locate the QR code printed on the inside of the Creativity Camera Protective Case.
3. The Creativity Camera app will prompt you to snap a picture of the QR code with your iPhone or iPod touch to unlock the full version.
4. Make sure to remove your device from any other case to insert it into the Creativity Camera Protective Case. The app must be running when you place it in the case. Place the device so that the "Home" button is on the left and facing toward you when the Creativity Camera Protective Case door is open.
5. Close the case. Make sure that your iPod touch or iPhone is properly inserted and locked in the toy.



Unlimited camera creativity for kids with games, activities and learning!



Camera

Take photos of your friends, family, pets and more. Press the shutter button or touch anywhere on the screen to take pictures.



Gallery

View your pictures. The Gallery displays photos you took in order of most recent to oldest. Scroll up and down to see more pictures. View a picture full screen by touching it. Tap the 'x' to delete the picture.



Edit

Add creative editing to pictures in your gallery. Tap 'Gallery' to choose a different picture. Tap different tools to edit your picture. When you press the home button, your photo is automatically saved to your Gallery. The unedited version of your photo also stays in your Gallery.



Photobooks

Take pictures that match the letters, shapes, colors/colours and emotions shown on the left side of the page to create your own photobooks.



PeekABug Catch

Move the camera to see the PeekABugs flying around you. Take a picture to catch the PeekABug when it is in the circle. When you catch the PeekABug, drag and drop on the matching space.



Silly Faces

Start by taking a picture of yourself or a friend in the silhouette. Tap on the highlighted areas of the photo to place silly accessories on the picture. Tap the 'Back' icon to take a new picture.



Parental Settings

From the app home screen adjust volume level and other settings.

Consumer Information

Adult download of App is required • Adult setup is required • Periodically check this toy and your device for damage or cracks. Do not use if either is damaged or broken. Follow your device's instructions for use, care and cleaning.

Instructions for Care: FOR DRY, INDOOR-LOCATION USE ONLY

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.



CAUTION: Product should only be assembled by an adult. Remove protective case from the iPhone or iPod touch device prior to assembly. This product only works with iPhone 4/4S/5 and iPod touch (4th & 5th generations). iPhone and iPod touch devices are not included.



ATTENTION : Ce produit doit être assemblé par un adulte. Enlevez la coque de protection de votre iPhone ou iPod touch avant l'assemblage. Ce produit fonctionne uniquement avec iPhone 4/4S/5 et iPod touch 4ème et 5ème générations. iPhone ou iPod touch ne sont pas inclus dans ce produit.



CAUTION: This case may not protect the iPhone and iPod touch devices from damage. Please exercise caution.



ATTENTION : Cette coque ne protégé pas les appareils iPhone et iPod touch. Cette pochette n'est pas étanche. Utilisez-la avec précaution.



CAUTION: To be used under the direct supervision of an adult.



ATTENTION : Doit être utilisé sous la présence directe d'un adulte.



WARNING: This toy is not intended for children under 3 years old.



ATTENTION : Ce jouet ne convient pas aux enfants de moins de 3 ans.



NOTICE: Device glass could break if camera is dropped on a hard surface or receives a substantial impact. If the device glass chips or cracks, remove the product from child use. Device damage due to abuse is not covered under the warranty.



NOTE: L'écran en verre peut se casser si l'appareil photo tombe sur une surface dure ou un autre impact important. Si l'écran se fend ou craque, ne laissez pas votre enfant utiliser le produit. Si le produit est endommagé à cause d'une utilisation inadaptée, il ne sera pas couvert par la garantie.

Troubleshooting

Symptom	Try This
Camera is not taking photos.	<ul style="list-style-type: none"> Make sure the device is turned on Make sure device is properly charged Make sure device is properly installed into toy Make sure the app is correctly downloaded. Access the Support section on App Store for additional help.
Not able to access all the games/modes.	<ul style="list-style-type: none"> Use the app's home icon on the device screen to return to the main menu.
Device doesn't fit correctly in case	<ul style="list-style-type: none"> Follow compatibility guide to be sure you are using a compatible device (iPhone 4/4S/5, iPod touch 4G/5G/6G, and iOS 5 and above. For the compatible devices, the smaller versions may seem loose when inserted into camera, but the internal mechanism will tighten to hold device securely in place when closed.

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our U.K. Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funstastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE: Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

Apple, iPad, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc. TM & © 2013 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

Recommended for children 3+ years. Convient aux enfants à partir de 3 ans. Item number: 19234/19236 Part number: 605-12004-B