



Read With Me Scout or Violet

Make reading fun with
5 interactive stories.



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.



Share the Learning

Visit leapfrog.com/learningpath
to see the skills your child is exploring
during play.



Share your special learning moments!
Like us at facebook.com/leapfrog

The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning
progress updates, articles, product news and
special offers from LeapFrog.

leapfrog.com

More Great Learning Toys



My Pal Scout
6-36 months



LeapReader™
4-8 years



LeapReader™ Junior
1-4 years

Get more ideas to support
your child's learning at:
leapfrog.com/learningpath

Products sold separately and may not be available in all countries. Actual products may vary.

Learning Skills

Make reading fun with 5 interactive stories.

Listening Comprehension


Listen and follow along with Scout/Violet as he/she reads one of the five books. Scout/Violet asks questions to engage young readers, foster comprehension skills and build personal connection with stories.

Early Vocabulary

Each of the five books includes vocabulary terms from colors/colours to animal names. Press the Music Paw to trigger songs that reinforce word learning.

Books & Print

Pay attention to Scout's/Violet's signal to practice turning pages. Listen to Scout/Violet and learn about the relationship between the print on a page and the story that Scout/Violet tells.

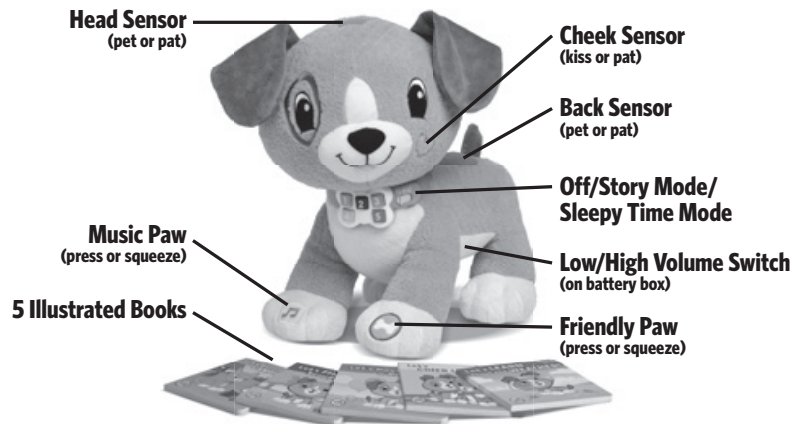

Get to Know Scout /Violet

Getting Started

To turn on Read With Me Scout/Violet, slide the Mode Selector to Story or Sleepy Time.



To turn it off, slide the switch to Off.

Note: Read With Me Scout/Violet will turn off after a period of inactivity. You can wake it up again by sliding the switch to another mode, pressing one of the five buttons on the collar, or pressing one of the front paws.

Learning Modes



Story Mode

Activates a sequence of interactive reading prompts designed by our Learning Team Experts to help develop reading comprehension skills. To activate Story Mode, slide the mode selector to Story Mode, then select one of 5 books using the buttons on Scout's/Violet's collar. The number on the collar corresponds to a book with the same color/colour and number on the cover.

Each reading experience consists of Scout/Violet reading the text on the page, and then asking your child a question to foster comprehension and build personal connection.

As you begin the story, Scout/Violet will ask if you have the book with you. If you have the book, Scout's/Violet's questions will include references to the book's art and text. If you do not have the book, the questions will focus only on what your child has heard.



Sleepy Time Mode

Allows a more relaxed nap or bedtime listening experience that does not require the books. Back, head and cheek sensors are de-activated in Sleepy Time Mode to allow for cuddling without unintended audio responses. Squeeze the music paw for lullabies. Once the story is complete, Scout/Violet will go to sleep unless prompted by the child for an additional story.

To activate Sleepy Time Mode, slide the Mode Selector to Sleepy Time.

Instructions for Care

For indoor, dry-location use only.

Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

SOIN ET ENTRETIEN

Utiliser uniquement en intérieur, dans des lieux secs.

Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser de liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). N'utilisez pas de savon, de lessive, ou d'autres produits chimiques. Ne jamais immerger le produit dans l'eau. Éviter une exposition prolongée aux températures chaudes et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.



CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.




ATTENTION : Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.



CAUTION: Using this device at loud volumes for long periods of time can permanently damage user's hearing.



ATTENTION : À pleine puissance, l'utilisation prolongée de cet appareil peut endommager de façon permanente l'oreille de l'utilisateur.

 **CAUTION:** This toy is not intended for crib/bassinets use.

 **ATTENTION :** Ce jouet n'est pas destiné à être utilisé dans des landeaux ou lits pour bébé.

 **WARNING:** Keep toy away from infant's face.

 **ATTENTION :** Ce jouet doit être gardé à distance du visage de l'enfant.

 **CAUTION:** To be used under the direct supervision of an adult.

 **ATTENTION :** Doit être utilisé sous la supervision directe d'un adulte.

Battery Information

Requires 3 AA (LR6 in some countries) alkaline batteries. Batteries included are for in-store demonstration and should be replaced for home use.

Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver, coin or other household tool.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Use only batteries of the same or equivalent type as recommended.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser des piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

Troubleshooting

Symptom	Try This
Toy does not turn on or does not respond	<ul style="list-style-type: none">• Make sure the mode switch is not in the OFF position• Make sure batteries are correctly installed• Make sure battery cover is securely attached• Remove batteries, wait 10 seconds and put them back in• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth• Install new batteries
Toy makes improper responses	<ul style="list-style-type: none">• Follow the above instructions to clean battery contacts• Install new batteries

FCC NOTICE:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at

www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at

www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our U.K. Consumer Support website at

www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

RECYCLE INFORMATION : For information on how this product might be recycled, visit www.leapfrog.com/recycle or call (800) 701-5327.

TM & © 2013 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

Recommended for children ages 2-5 years. Convient aux enfants à partir de 2-5 ans.

Item number: 19232 & 19238 Part number: 605-11988-A