



Touch  
Magic

# Ocean Music School™

Create musical fun with every touch!



## Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.



## Share the Learning

Visit [leapfrog.com/learningpath](http://leapfrog.com/learningpath)  
to see the skills your child is exploring  
during play.



Share your special learning moments!  
Like us at [facebook.com/leapfrog](https://facebook.com/leapfrog)

The LeapFrog® Learning Path is not available in all countries.

**Register your product online!**

You can also sign up to receive learning  
progress updates, articles, product news and  
special offers from LeapFrog.

**leapfrog.com**

## More Great Learning Toys



**My Own Laptop™**

2+ years



**Read With Me Scout**

2+ years



**Scribble & Write**

3+ years

Get more ideas to support  
your child's learning at:

**[leapfrog.com/learningpath](http://leapfrog.com/learningpath)**

Products sold separately and may not be available  
in all countries. Actual products may vary.

## Core Learning Skills

### Create musical fun with every touch!

#### Music & Creativity

Explore music in an open-ended way and play along with ocean animal musicians. Rub, tap, and slide across touch-sensitive instruments including a keyboard, a guitar, drums, a trombone, and a harp. Multiple modes of musical play foster creativity and exploration.

#### Colors/Colours

Game activities and exploratory music play help children learn to identify colors/colours and their names.

#### Early Vocabulary

Learn the names of different musical instruments, ocean animals, and colors/colours. Play game activities to reinforce vocabulary skills.

## Instructions for Play



#### Getting Started

To turn on the OCEAN MUSIC SCHOOL™ toy, slide the volume switch to the desired volume setting. Then press the Wake-Up Button. To turn off, slide the switch to Off.

**Note:** The OCEAN MUSIC SCHOOL toy will turn off automatically after a period of inactivity. You can wake it up again by pressing the Wake-Up Button.

#### Learning Modes

##### COMPOSE MODE

First, touch the Compose Mode Button. Then touch the large Trombone, Drums, and Guitar to arrange layers of music to your liking. The star-lights blink when these instrument layers are activated.

Next, touch the 6 underwater ocean animals to add more music and compose your own musical creation. Play along with the harp and keyboard!

**Hint:** Spinning your finger in a circle makes the tempo faster or slower (depending on direction).

##### PLAY MODE

First, touch the Play Mode Button. Then, touch an ocean animal to begin one of 6 different songs and melodies, including "Happy and You Know It." Play along using the 5 musical instruments. Make the song slower or faster using the Tempo Spinner.

##### GAME MODE

Touch the Game Mode button to hear a question to build vocabulary skills. Use your knowledge of the names of animals, colors/colours and musical instruments to find the answer!

#### Instructions for Care

##### FOR DRY, INDOOR USE ONLY

Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

#### SOIN ET ENTRETIEN

##### UTILISER UNIQUEMENT EN INTÉRIEUR, DANS DES LIEUX SECS

Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser un liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). N'utilisez pas de savon, de lessive, ou d'autres produits chimiques. Ne jamais immerger le produit dans l'eau. Éviter une exposition prolongée aux températures extrêmes et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.

**CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

**ATTENTION:** Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

## Battery Information

Requires 3 AAA (LR03 in some countries) alkaline batteries. Batteries included are for in-store demonstration, and should be replaced for home use.

### Battery Removal and Installation Instructions

1. Open battery door with a screwdriver, coin or other household tool.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

## Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (e.g., alkaline/standard).

**DO NOT** use rechargeable batteries.

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** short-circuit the supply terminals.

## Sécurité relative aux piles

Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** utiliser des piles rechargeables.

**NE PAS** recharger des piles non rechargeables.

**NE PAS** court-circuiter les terminaux d'alimentation.

## TROUBLESHOOTING

Symptom	Try This
Toy does not turn on or does not respond	<ul style="list-style-type: none"><li>• Make sure the Off/Low/High switch is not in Off position</li><li>• Make sure batteries are correctly installed</li><li>• Make sure the battery cover is securely attached</li><li>• Remove batteries and put them back in</li><li>• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth</li><li>• Install new batteries</li></ul>
Toy makes improper responses	<ul style="list-style-type: none"><li>• Follow the above instructions to clean battery contacts</li><li>• Install new batteries</li></ul>

### FCC NOTICE:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### ENVIRONMENTAL PHENOMENA

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### IMPACT DE L'ENVIRONNEMENT

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

### CONSUMER SUPPORT

#### U.S. Consumer Service Contact:

Visit our U.S. Consumer Support website at [www.leapfrog.com/support](http://www.leapfrog.com/support) 24 hours a day.

#### Canada Consumer Service Contact:

Visit our Canada Consumer Support website at [www.leapfrog.ca/support](http://www.leapfrog.ca/support) 24 hours a day.

#### U.K. Consumer Service Contact:

Visit our U.K. Consumer Support website at [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support) 24 hours a day.

#### Australia Consumer Service Contact:

Please submit questions to our support staff via email [info@funtastic.com.au](mailto:info@funtastic.com.au)

**LIMITED WARRANTY:** Subject to a limited three (3) month warranty. Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

**GARANTIE LIMITÉE:** Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse [www.leapfrog.com](http://www.leapfrog.com) pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisant pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

**For information on how this product might be recycled, visit [www.leapfrog.com/recycle](http://www.leapfrog.com/recycle) or call (800) 701-5327.**

TM & © 2013 LeapFrog Enterprises, Inc. All rights reserved.

**leapfrog.com**

Recommended for children ages 3+ years. Convient aux enfants de 3 ans et plus.

Item number: 19229

Part number: 605-11967-A