

Leap Frog Touch Magic
Rockin' Guitar
 Little Touches. Big Learning.™




Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Fun next steps on your child's path to learning!

From exploring with Touch Magic™...

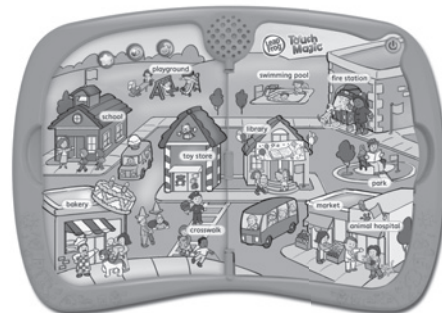

**Touch Magic™
 Discovery Town***
 2+ years

**Touch Magic™
 Learning Bus***
 2+ years



Tag™ Junior book pal*
 1-4 years

...to reading discoveries with Tag Junior!

Get more ideas to support your child's learning at:
leapfrog.com/learningpath

*Products sold separately, and may not be available in all countries. Actual products may vary.



Share the Learning

Visit leapfrog.com/learningpath
 to see the skills your child is exploring
 during play.



Share your special learning moments!
 Like us at facebook.com/leapfrog

The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning
 progress updates, articles, product news and
 special offers from LeapFrog.

leapfrog.com

Core Learning Skills

Amp up the learning fun with each and every touch!

The guitar, along with the included songs, can help your child learn a wide range of skills, including colors/colours, the alphabet and the skills listed below.

Playing Music

Strumming and experimenting with the features lets children explore different instrument sounds, rhythm and tempo.

Social Skills

Children can sing along to songs that promote important social skills, like *Having Fun Together* and *Taking Turns*. They can also play as a band or take turns playing with the guitar to reinforce these skills.


Role-Play

Playing with the guitar and acting out musical roles like in *You're a Rock Star* can foster creativity and self-expression. This helps strengthen children's understanding of the world, allows them to feel confident about themselves and inspires them to learn more.

Gross & Fine Motor Skills

Coordinating finger placement and moving with the guitar can help build motor skills as children play music with songs like *Strum, Strum, Strum*.

Instructions for Play

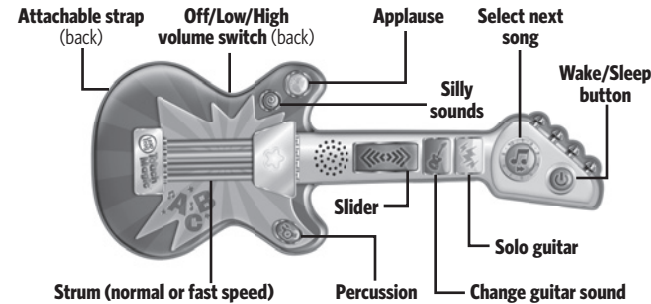

Getting Started

To turn on the Rockin' Guitar, slide the volume switch to the desired volume setting. Then press the play button. To turn it off, slide the switch to OFF.

Note: The Rockin' Guitar toy will turn off automatically after a period of inactivity. You can wake it up again by pressing the play button.

Play & Learning Songs

The Rockin' Guitar offers many ways to play and learn! Touch the Wake/Sleep or Next Song button to play a song (see list below). Strum the guitar to hear the song come alive and layer in sound effects by touching any of the other features. Create hundreds of variations for countless hours of play and learning!

The Alphabet Song
Rockin' Robin
You're a Rock Star
Rainbow
Strum, Strum, Strum
Having Fun Together
Taking Turns
If You're Happy and You Know It
Itsy-Bitsy Spider
Pop Goes the Weasel

Instructions for Care

FOR DRY, INDOOR-LOCATION USE ONLY
 The included strap must be fastened to the product by an adult and checked for secure attachment prior to use. Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

- CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.
- ATTENTION :** Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.
- WARNING:** Not suitable for children under 36 months. Long cord. Strangulation hazard.
- AVERTISSEMENT:** Ne convient pour les enfants de moins de 3 ans. Corde longue. Risque de strangulation.

Battery Information
 Batteries included are for in-store demonstration and should be replaced for home use. Requires 3AAA (called LRO3 in some countries) alkaline batteries.

- Battery Removal and Installation Instructions**
- Open the battery door with a Phillips screwdriver.
 - If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
 - Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
 - Replace battery door securely.

Battery Safety
 Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.
DO NOT incinerate used batteries.
DO NOT dispose of batteries in fire, as batteries may explode or leak.
DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).
DO NOT use rechargeable batteries.
DO NOT recharge non-rechargeable batteries.
DO NOT short-circuit the supply terminals.

Sécurité relative aux piles
 Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlever rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.
NE PAS incinérer les piles usagées.
NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.
NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
NE PAS utiliser des piles rechargeables.
NE PAS recharger des piles non rechargeables.
NE PAS court-circuiter les bornes d'alimentation.

Troubleshooting

Symptom	Try This
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure the OFF/Low/High switch is not in the OFF position • Make sure batteries are correctly installed • Make sure battery cover is securely attached • Remove batteries and put them back in • Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth • Install new batteries
Toy makes improper responses	<ul style="list-style-type: none"> • Follow the above instructions to clean battery contacts • Install new batteries

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 1) This device may not cause harmful interference, and
 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CONSUMER SUPPORT

U.S. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.com/support 24 hours a day.
Canada Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.ca/support 24 hours a day.
U.K. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.
Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au. For information on how this product might be recycled, visit www.leapfrog.com/recycle or call (800) 701-5327.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

TM & © 2012 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

Recommended for children ages 3 years and up / Convient aux enfants à partir de 3 ans
 Item number: 19202 / 19214
 Part number: 605-11828-A