



Twinkle Twinkle
Little Scout
Twinkle Twinkle
Little Violet



Drift into dreams with a
snuggly learning friend!

Parent Guide & Instructions

This guide contains important information.
Please keep it for future reference.

Fun next steps on your child's learning journey!

From bedtime...



**TWINKLE TWINKLE
LITTLE SCOUT
OR VIOLET**
Birth-36 months

To Be There Every Step Of The Way.

It's a hope you have for your child
and one that LeapFrog shares. Toys
like Twinkle Twinkle Little Scout and
Twinkle Twinkle Little Violet encourage
the excitement of early discoveries
as children grow and begin their
personal learning journeys.



**MY FIRST BOOK
GOOD NIGHT SCOUT***
6-36 months



TAG™ JUNIOR*
2-4 years

Get more ideas to support your child's learning at:
leapfrog.com/learningpath

*Products sold separately. All products may not be available in all countries. Actual products may vary.

...to book time!



See the Learning.™

See your child's play and learning with the
LeapFrog® Learning Path. With each LeapFrog toy
on your child's path, you can see the skills your
child is exploring during play, learn about what
comes next and discover creative learning ideas
that are tailored uniquely to your child.

leapfrog.com/learningpath



The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning
progress updates, articles, product news and
special offers from LeapFrog.

leapfrog.com

Learning Stones

From soothing to soft learning: a grow-with-me learning pup!

First Words

A learning lullaby and fun questions introduce children to parts of the face.

Imaginative Play

As children listen to different sounds, questions encourage older children to use their imaginations to describe what they hear.


Counting

Activities featuring starfish, sheep, fingers, toes and more help older children explore counting from 1 to 10.

Music

Children can listen to lyrical lullabies for daytime play or instrumental lullabies for winding down to sleep.

Instructions for Play

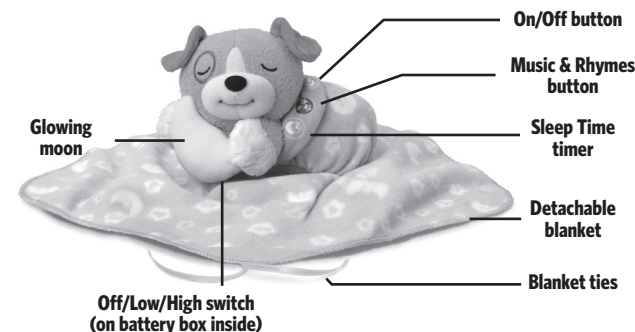

Blanket detaches! To reattach, tie the blanket ties around the puppy's arms or moon pillow.

Getting Started

To turn on Twinkle Little Scout or Violet, press any of the buttons on the puppy's collar.

To turn the puppy off, press the On/Off button.

To adjust the volume or turn off Twinkle Little Scout or Violet, open the VELCRO® fastening on the bottom of the puppy to view the battery box and slide the Off/Low/High switch.

Note: Twinkle Little Scout or Violet will turn off automatically after a period of inactivity. You can wake the puppy up again by pressing a button on the collar.

Twinkle Little Scout or Violet has three active buttons.



Music & Rhymes button

Press to hear counting rhymes, lullabies about the senses and nature sounds. Your puppy friend will ask questions designed to encourage older children to find different facial features, comment on environmental sounds and participate in imaginative play.



Sleep Time button

Press the button until you hear your preference: 10 or 20 minutes of either lullaby music or soothing environmental sounds to transition from daytime to nap time or nighttime.



On/Off button

Press the On/Off button to turn off Twinkle Little Scout or Violet. Press any button to resume play mode.

TO BE USED UNDER THE SUPERVISION OF AN ADULT/A UTILISER SOUS LA SUPERVISION D'UN ADULTE

Instructions for Care
FOR DRY, INDOOR-LOCATION USE ONLY. Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the product inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the product in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the product. Never try to dismantle it.

Blanket detaches for washing (hand wash and air dry only). Puppy is not washable (clean with a damp cloth only). La couverture se détache pour la nettoyer (Nettoyage à la main uniquement et sécher seulement à air libre). La petite peluche n'est pas lavable (A nettoyer seulement avec un chiffon humide).

CAUTION: Keep toy away from infant's face.

ATTENTION : Gardez le jouet éloigné du visage de l'enfant.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

ATTENTION : Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

CAUTION: This is not intended as a crib toy. To prevent entanglement injury, NEVER add additional strings or ties or other products to this item.

ATTENTION : Ce jouet n'est pas conçu pour les berceaux et les lits d'enfants à barreaux. Pour éviter tout danger d'enchevêtrement, ne JAMAIS rajouter de ficelles, rubans ou tout autre produit à ce jouet.

PROTECT YOUR HEARING

Long-term exposure to loud sounds may result in permanent hearing loss. Set the volume in a quiet environment; turn it down if you cannot hear people speaking near you or if putting the child to sleep.

PROTÉGEZ VOTRE OÛIE

Une exposition durable à des sonorités trop fortes peut entraîner une perte définitive de l'ouïe. Réduisez le volume sonore dans un endroit calme ; réduisez-le si vous ne pouvez pas entendre les personnes autour de vous ou si vous voulez endormir votre enfant.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 2 AAA (called LR03 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a Phillips screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille et peut constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser des piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les bornes d'alimentation.

Troubleshooting

Symptom	Try This
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure the Off/Low/High switch is not in the OFF position • Make sure batteries are correctly installed • Make sure battery cover is securely attached • Remove batteries and put them back in • Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth • Install new batteries
Toy makes improper responses	<ul style="list-style-type: none"> • Follow the above instructions to clean battery contacts • Install new batteries

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CONSUMER SUPPORT

U.S. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funstastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, TAG, the Tag Junior logo and SEE THE LEARNING are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2010 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages birth to 36 months. / Convient aux enfants de 0 à 36 mois.

Item number: 19161 and 19164

Part number: 605-11636-E