



# Spinning Lights Letter Ring™




## Instruction Manual

This manual contains important information. Please save it for future reference.

# INTRODUCTION

Thank you for purchasing the **Spinning Lights Letter Ring™**! Join Sparky the Firefly for exciting games that explore letters, phonics and spelling with lights and sounds for a new spin on early literacy.

Phonics Game  
Button

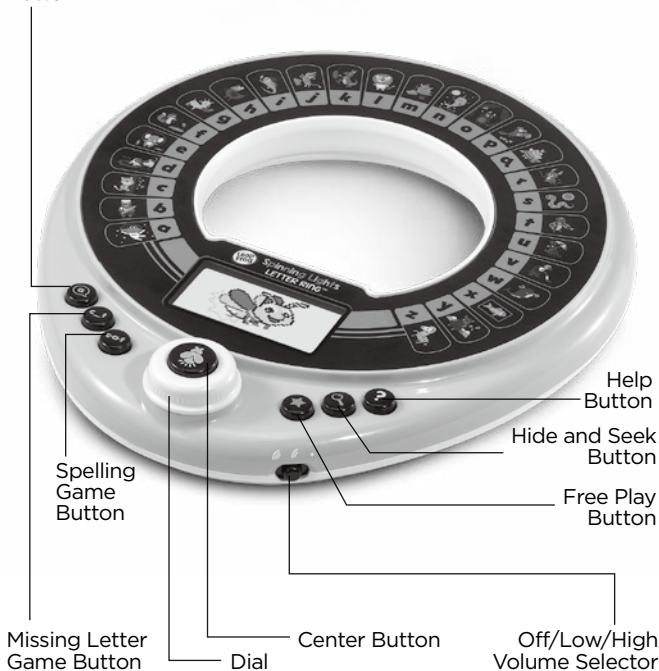

# INCLUDED IN THE PACKAGE

- One **Spinning Lights Letter Ring™**
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## ATTENTION


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

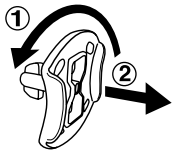

# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver or coin to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

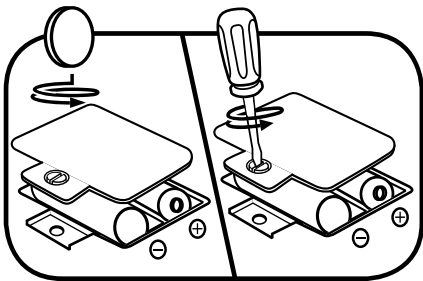



## **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



## **ATTENTION :**

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **NOTE**

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# PRODUCT FEATURES

## 1. Off/Low/High Volume Selector

Slide the **Off/Low/High Volume Selector** to **Low** (L) or **High** (H) to turn the device on and select the volume.



## 2. Dial and Center Button

Turn the **Dial** to move the light around the ring and press the **Center Button** to select a letter and answer questions.



## 3. Help Button

Press the **Help Button** to get hints in each game.



## 4. Automatic Shut-Off

To preserve battery life, the **Spinning Lights Letter Ring™** will automatically power down after approximately 2 minutes without input. The unit can be turned on again by pressing any button.

# ACTIVITIES

## 1. Phonics Game

Press the **Phonics Game Button** to play a fun letter identification game. Move the light around the ring using the **Dial** and **Center Button** to find the correct letter. There are five rounds to play.



## 2. Missing Letter Game

Press the **Missing Letter Game Button** to find the missing letter in a word shown on the screen. Move the light around the ring using the **Dial** and **Center Button** to find the correct letter. There are five rounds to play.



## 3. Spelling Game

Press the **Spelling Game Button** to find all the missing letters in a word. Move the light around the ring using the **Dial** and **Center Button** to spell whole words. There are three rounds to play.



## 4. Hide and Seek Game

Press the **Hide and Seek Button** to follow audio clues and find pictures on the ring using the **Dial** and **Center Button**. There are five rounds to play.



## 5. Catch Sparky

Each game mode above is followed by a Catch Sparky light-sequence game where the player uses the **Dial** and **Center Button** to catch the circling light to see a light-show celebration.



## 6. Free Play

Press the **Free Play Button** to explore letters and sounds. Free Play is a continuous play and learn mode with no rounds.



# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.



## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

## Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**Supplier's Declaration of Conformity**

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®  
Model: 6163  
Product Name: Spinning Lights Letter Ring™  
Responsible Party: LeapFrog Enterprises, Inc.  
Address: 2200 Powell St., Suite 500  
Emeryville, CA 94608  
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***leapfrog.com***

***leapfrog.ca***

**Read our complete warranty policy online at**

***leapfrog.com/legal***

LeapFrog Enterprises, Inc.,  
A subsidiary of VTech Holdings Limited.  
TM & © 2022 LeapFrog Enterprises, Inc.  
All rights reserved.

**IM-616300-000**

**Version:0**