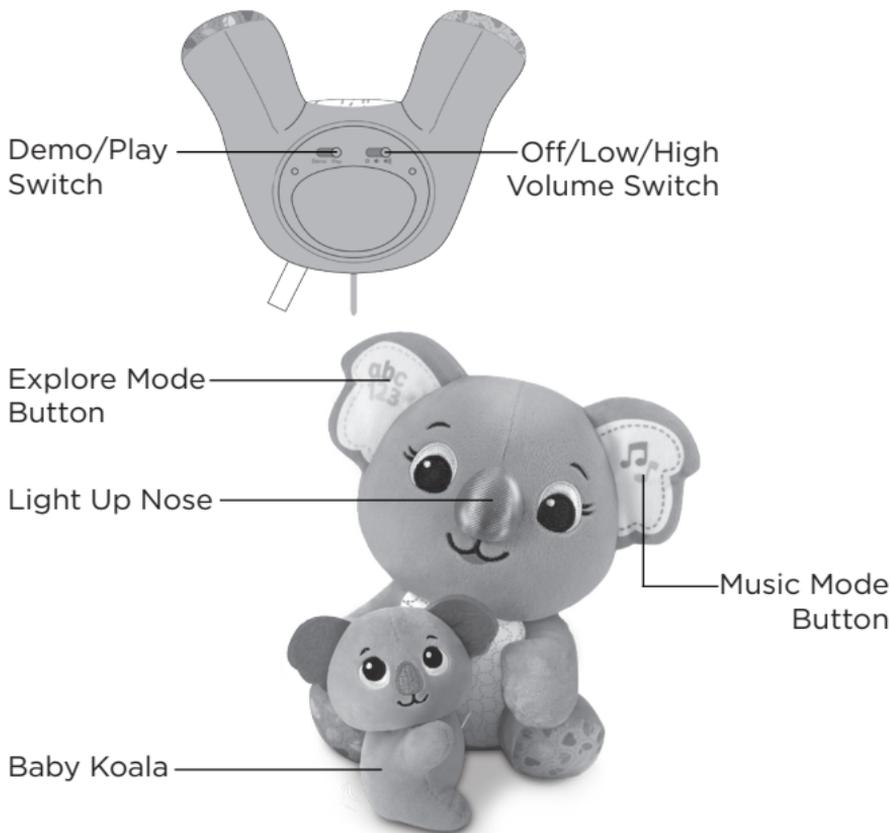# LeapFrog

Cuddle & Learn Koalas

Instruction Manual

This Manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Cuddle & Learn Koalas**!
Share a warm hug with this adorable, cuddly koala duo!
These two lovable koalas are the perfect snuggle buddies,
always ready for hugs and cuddles. Press one of mummy
koala's ear buttons to hear gentle, mindful phrases, sweet
responses, letters, and fun sounds that engage and soothe.

Demo/Play
Switch

Off/Low/High
Volume Switch

Explore Mode
Button

Light Up Nose

Music Mode
Button

Baby Koala

INCLUDED IN THE PACKAGE

- Cuddle & Learn Koalas
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.
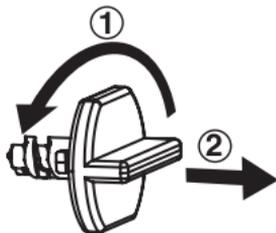
NOTE

Please save this Instruction Manual as it contains important information.

WARNING

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

Unlock the Packaging Locks:

① Turn the packaging lock anticlockwise several times.

② Pull out and discard the packaging lock.
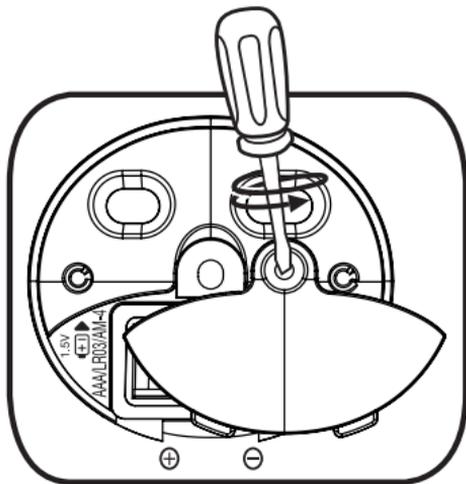
ACTIVATE STANDARD PLAY MODE

This product is in Demo mode in the packaging. To activate standard Play mode, please complete the following steps:

1. Locate the **Demo/Play Switch** on the bottom of the toy.
2. Slide the Switch from **Demo** to **Play**.

GETTING STARTED
Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

WARNING:
Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

www.leapfrog.com.au/recycle

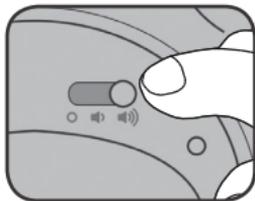* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

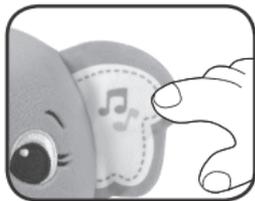### 1. Off/Low/High Volume Switch
Slide the Switch to **Low** 🔈 or **High** 🔊 to turn the unit on. Slide the Switch to the **Off** ⭕ position to turn off the unit.
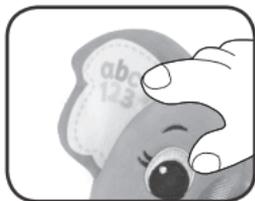

2. Music Mode Button
Listen to loving songs and soothing melodies.

3. Explore Mode Button
Discover letters and numbers through soothing phrases.

4. Light Up Nose
Mummy Koala's nose lights up with sounds, and when she speaks or sings.

6. Baby Koala

Pull Baby Koala back to hear sweet and nurturing interactions.

7. Automatic Shut Off

To preserve battery life, the toy will automatically shut off after approximately 45 seconds without input in **Play Mode**. If in **Demo Mode**, it will automatically shut off after approximately 12 seconds without input. If the toy is in **Demo Mode**, press the **Explore Mode** button to wake it up.

SONG LYRICS

Introduction Song

Come on and cosy up,
Snuggle up, squeeze in tight.
Cause you and me together,
Makes everything right.

Hug Song 1

When you give me a hug,
You fill my heart with love.
I could never get enough of your hugs!

I Love You Song

I love you!
I love you!
I love you!
I love you with all of my heart!

Calm Your Body Song

Calm your body,
Breathe with me.
Inhale, exhale,
1 – 2 – 3!

Hug Song 2

Come in for a hug,
A warm, cosy hug.
Come in for a hug,
My sweet little love.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The Cuddle & Learn Koalas are surface washable only.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

Environmental phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog**® products is accompanied by a responsibility that we at **LeapFrog**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:
Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)
Website: www. leapfrog.co.uk/support

Australian Customers:
Phone: 1800 862 155
Website: support.leapfrog.com.au

NZ Customers:
Phone: 0800 400 785
Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:
Read our complete warranty policy online at leapfrog.com/en-gb/legal.

Australian Customers:
VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES
Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.

Visit our website for more information about our products, downloads, resources and more.

www.leapfrog.com