



Parent Guide

This guide contains important information. Please keep it for future reference. Ce guide contient des informations importantes. Veuillez le conserver pour toute référence future.


Need help? Visit: leapfrog.com/support/leappadplatinum

LEAPPAD™ Platinum Quick Start Guide

Get started in 5 easy steps

- 1 Power Up** and turn on your LEAPPAD™ Platinum tablet with the included AC adapter.*
- 2 Set Up** your device by following the on-screen prompts to connect to Wi-Fi.**
- 3 Register** your device by creating a LeapFrog Parent Account.
- 4 Download** your included app. (Only available via Wi-Fi set-up)
- 5 Play & Learn!** Your LEAPPAD™ Platinum tablet is now ready for play.†

LEAPPAD™ Platinum Features

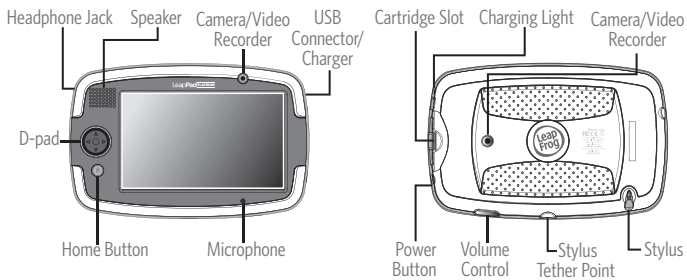

*Registration and setup can continue while charging—charging may take up to 5 hours. **For non-Wi-Fi USB setup, see end of Guide. †Full setup may take 20 minutes or longer depending on Wi-Fi speed.

Parent Settings

Control your child's play with these interactive LEAPPAD™ Platinum tablet features:

- Wireless settings — Control connection setup and access to LeapFrog-defined online experiences.
- Child profile — Easily manage permissions and profile information or add a new profile.
- Peer-to-peer settings — Control how your child plays with other children when two wireless LEAPPAD™ tablets are in close proximity to one another via local ad hoc Wi-Fi network. (See Local Communications below for more information.)
- App Center/Centre — Parents can purchase digital content directly from the device with a Parent Account password. Control your child's access to the App Center/Centre, where they can watch trailers and create a wish list. Parents can choose whether children may view pricing and buy buttons.
- Time Management — Control the amount of time your child spends on the device.
- Device Settings — Manage settings like language, time, date and more.

Access to Parent Settings is protected by a 4-digit parent lock code that must be established during initial setup. Parent Settings can be accessed from the Sign-In screen by pressing the Parent Settings icon to log in with your parent lock. Alternatively, you can log in via the Settings icon on the Home Bar of the child's Home Screen.

Forgetting or resetting your Parent Lock

If you have forgotten your 4-digit parent lock code you can look it up in the leapfrog.com Parent Account you created during device setup and registration. If you need to reset your parent lock, you can do it from the device or reference the FAQ section at leapfrog.com/support/leappadplatinum for more information.

CAUTION: The battery is only to be charged by adults or children 8+ years of age under the full supervision of parents. You can charge the battery by using either the included AC power adapter or connecting the provided USB cord to your computer. We recommend using the provided AC power adapter.

Battery Charging in Progress Indication

When the battery is charging, the charge indicator LED will be yellow. When fully charged, it will turn green. It will be OFF if not connected via USB or if not charging.

Repairing or Modifying LEAPPAD™ Platinum

Never attempt to repair or modify the LEAPPAD™ Platinum tablet. Contains no user-serviceable parts. Service should only be provided by LeapFrog Enterprises, Inc.

If the product has been in contact with liquids, punctured, or subjected to a severe impact or fall, immediately remove this product from use and contact LeapFrog Consumer Services.

For service information, go to: leapfrog.com/support

AC Adapter Safety

CAUTION: Use only the AC adapter provided with the product.

WARNING: Not suitable for children under 3 years. Misuse of transformer (AC Adapter) can cause electric shock.

(Note: The word “transformer” is sometimes substituted for the word “adapter.”)

- Connection of the transformer to the wall outlet should be performed only by an adult or child 8+ years of age.
- The transformer is not intended to be used as a toy, and the use of the transformer shall be under the full supervision of parents.
- As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.
- The power adapter may become warm during normal use. Always allow adequate ventilation and use care when handling the power adapter.

Local Communications

Peer-to-peer gameplay uses limited communication features to permit direct connections between two wireless LEAPPAD™ tablets that are in close proximity to one another, using a local Wi-Fi ad hoc network. Your child is not playing on the Internet. Instead, peer-to-peer enabled LEAPPAD tablets use local Wi-Fi connections like an antenna – allowing play between LEAPPAD tablets that are near each other (for example, within 100 feet/approx. 30 metres unobstructed or less, depending on the strength of the local network – obstructions such as walls can significantly reduce the operating range). Both users must own copies of the same game in order to play together. Some peer-to-peer games allow users to share information with and receive information from the other player. The peer-to-peer feature can be activated or disabled using the Parent Settings screen on the tablet.

Operating Instructions

Wi-Fi connection support. If you experience any difficulty with Wi-Fi connectivity, troubleshooting suggestions are available at leapfrog.com/support

For indoor, dry-location use only. Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. In case the unit does get wet, unplug all cables and turn it OFF. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source. Do not re-connect to the AC outlet if wet or damaged.

Avoid prolonged exposure to extreme temperatures and direct sunlight. Operate in places with temperatures ranging from 5°C (40°F) and 38°C (100°F). Do not leave the product in your car as the temperatures in parked cars can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

Handle with care. To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product. Clean your hands before handling the product if they have been exposed to suntan lotions or other chemicals.

Cleaning. Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Do not connect to the AC wall outlet if wet or damaged.

- Do not connect or disconnect with wet hands.
- The transformer should be periodically examined for conditions that may result in the risk of fire, electrical shock or injury to persons, such as damage to the cord, plug, blades, housing or other parts, and in the event of such conditions, the transformer must not be used until the damage is repaired. The cord of this transformer cannot be replaced; if the cord is damaged, dispose of the transformer in accordance with your local electrical product recycling regulations.

Unplug the AC Adapter (transformer) if any of the following conditions exist:

- The power cord or plug, or the USB cord has become frayed or damaged.
- The power adapter is exposed to rain, liquid, or excessive moisture.
- The power adapter enclosure has become damaged.
- You suspect the power adapter needs service or repair.

To clean AC Adapter, disconnect it from the wall and clean with a cloth dampened with water. Do not immerse in water or use soap or other chemicals. Allow to dry before reusing. Do not connect to the AC outlet if wet or damaged.

- This AC adapter can be used to recharge the single cell Li-Poly battery of the LEAPFROG® LEAPPAD™ Platinum device (3.7Vdc, 3200mAh).

WARNING: DO NOT recharge non-rechargeable batteries.

For Europe - The toy must be used with a transformer for toys.

AC Adapter Electrical Ratings: Input: ~ 120VAC, 60Hz (for US); ~ 230VAC, 50Hz (for UK or EU); ~ 240VAC, 50Hz (for AS/NZL) Output: — DC5V, 1.5A, 7.5VA

Informations importantes de sécurité :

! Veuillez lire toutes les informations importantes de sécurité avant d'utiliser le LEAPPAD™ Platinum. Ne pas appliquer ces consignes peut engendrer des risques d'incendie, d'électrocutions, autres blessures ou dommages au LEAPPAD Platinum ou autres.

ACCESSOIRES : Lisez les instructions pour les accessoires ou tout autre produit avant de les utiliser avec le LEAPPAD Platinum. LeapFrog n'est pas responsable pour les accessoires vendus par d'autres fabricants et leurs standards de sécurité.

Instructions opérationnelles

Connexion Wi-Fi. Si vous avez des difficultés à vous connecter à votre connexion Wi-Fi, des aides sont disponibles en ligne à LeapFrog.com/support

A utiliser uniquement en intérieur, dans un endroit sec. Ne pas utiliser le produit près d'un lavabo ou autres sources d'eau. Faites attention à ne pas renverser de nourriture ou tout autre sorte de liquide sur ce produit car cela pourrait le rendre inopérational et inutilisable. Si vous renversez du liquide sur le produit, débranchez tous les câbles et éteignez-le. Laissez le produit sécher complètement avant de le réutiliser. N'essayez pas de le sécher avec un sèche-cheveux ou tout autre source de chaleur. Ne pas rebrancher le produit à l'adaptateur si celui-ci est humide ou abimé.

Évitez d'exposer le produit à des températures extrêmes ou aux rayons du soleil. Utilisez le produit quand la température se trouve entre 5°C (40°F) et 38°C (100°F). Ne pas laisser le produit dans votre voiture car les voitures garées peuvent excéder les températures pour assurer le bon fonctionnement de votre produit. Exposer ce produit à des températures extrêmes peut diminuer la durée de vie des piles ou peut entraîner l'arrêt de votre produit.

A utiliser soigneusement. Pour éviter toutes blessures, dommages ou autres, évitez de le faire tomber et ne jamais le démonter, casser, trouer, mettre aux micro-ondes, brûler, incérer un objet ou peindre le produit. Lavez vos mains avant de manipuler le produit si celles-ci ont été en contact avec de la crème solaire ou autres produits chimiques.

Pour nettoyer. Débranchez le produit de tous ces câbles. Nettoyez le produit avec un chiffon légèrement humide (eau froide). N'utilisez pas de savon, de lessive ou autres produits chimiques. Ne jamais immerger le produit dans l'eau.

Ne pas brancher à une prise si le produit est humide ou endommagé.

Important Safety Instructions:

! Please read all the Important Safety Instructions prior to using LEAPPAD™ Platinum. Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to LEAPPAD Platinum tablet or other property.

ACCESSORIES: Please read all safety instructions for any accessories or other products before using with the LEAPPAD™ Platinum tablet. LeapFrog is not responsible for the operation of third-party accessories or their compliance with safety and regulatory standards.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

WARNING: The AC Adapter or USB cords could be a strangulation hazard. Not for children under 3 years.

CAUTION: If for any reason the screen (display) is fractured or cracked, immediately remove this product from use.

PROTECT YOUR HEARING: Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss. When using headphones or ear buds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

WARNING: It is rare but possible for seizures to be triggered by light flashes or patterns. Play/watch in a well-lit room and take 10- to 15-minute breaks every hour.

Battery Replacement

WARNING: The lithium rechargeable battery cannot be removed from the product. For your safety, never try to remove the battery. For power or battery issues, please contact LeapFrog customer support. Contact information for your local support is available at leapfrog.com/support

BC Battery Charging

The LEAPPAD Platinum tablet is equipped with a rechargeable lithium-polymer battery. It will require about 5 hours of charging using the included AC power adapter prior to use. Attempting to charge via connection to the computer will take much longer.

⚠ ATTENTION : Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

⚠ ATTENTION : L'adaptateur ou le câble USB peuvent provoquer un risque d'étranglement. Ne convient pas aux enfants de moins de 3 ans.

⚠ ATTENTION : Si pour quelque raison que ce soit, l'écran (d'affichage) est brisé ou fendu, mettez immédiatement ce produit hors de portée des enfants.

⚠ PROTÉGEZ VOTRE OÛÏE : Une exposition durable à des sonorités trop fortes peut entraîner une perte définitive de l'ouïe. Lorsque vous utilisez le casque ou les écouteurs bouton, il est conseillé de baisser le volume et réduire le temps d'écoute. Réglez le son lorsque vous êtes dans un endroit calme et baissez-le si vous n'entendez pas les personnes qui parlent autour de vous. Limitez le temps d'écoute à 90 minutes, puis accordez-vous un moment de tranquillité. Plus le volume est élevé, plus il y a de chances que votre ouïe soit rapidement touchée. En cas de bourdonnement dans les oreilles ou si vous entendez des voix sourdes, arrêtez immédiatement d'écouter ce produit et faites contrôler votre ouïe dans les plus brefs délais.

⚠ ATTENTION : Il est rare mais possible que les lumières clignotantes ou les formes provoquent des crises d'épilepsies. Jouez/regardez dans une pièce bien éclairée et prenez des poses de 10 à 15 minutes toutes les heures.

Remplacement des piles

⚠ ATTENTION : La pile rechargeable lithium ne peut être retirée de ce produit. Pour votre sécurité, n'essayez jamais de retirer la pile. Si vous avez des problèmes concernant la pile ou la batterie de votre produit, veuillez contacter le service client LeapFrog. Les coordonnées sont disponibles à leapfrog.com/support

Recharger les piles

LEAPPAD™ Platinum est équipé d'une pile lithium-polymère. Branchez-le avec l'adaptateur pendant 4 heures avant de l'utiliser. Le recharger avec un ordinateur prendra plus de temps.

⚠ ATTENTION : L'adaptateur et le cordon USB peuvent constituer un risque d'étranglement. Ils ne doivent pas être utilisé par les enfants de moins de 3 ans

USB Cable

The USB cable provided with this product complies with FCC and other regulatory Emission limits. If using other than the provided USB cable, please note that in order not to exceed FCC and other regulatory emissions limits, a shielded cable must be used.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Canadian Compliance

This Class B digital apparatus complies with Canadian ICES-003. The IC term stands for "Industry Canada" followed by the certification number and all the "IC: 4810A-33200" signifies is that the equipment meet the Radio Standard Specification RSS-210. The IC certification number is located on the back of the enclosure. CAN ICES-3(B)/NMB-3(B)

Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada. Le terme IC signifie "Industrie Canada" et est suivi du numéro de les certification "IC: 4810A-33200" ce qui signifit que l'équipement répond aux spécifications de la norme Radio RSS-210. Le numéro de certification IC est situé à l'arrière de l'enceinte.

European Community Compliance Statement

The equipment complies with the RF Exposure Requirement 1999/519/EC, Council Recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0-300 GHz).

This wireless device complies with the R&TTE Directive.

⚠ ATTENTION : Ne convient pas aux enfants de moins de 36 mois. L'utilisation inadaptée de l'adaptateur peut causer une électrocution.

⚠ ATTENTION : La pile ne doit être chargée que par un adulte ou enfants de plus de 8 ans sous la supervision d'un parent exclusivement. Vous pouvez recharger la pile en utilisant l'adaptateur ou en connectant le produit à votre ordinateur avec le câble USB fournis. Nous recommandons l'utilisation de ceux inclus.

Indication de chargement de la pile

Quand la pile se recharge, l'indicateur LED est jaune. Quand la pile est totalement chargée, l'indicateur devient vert. L'indicateur ne fonctionnera pas si le produit n'est pas connecté au câble USB ou s'il ne charge pas.

Réparer ou modifier LEAPPAD™ Platinum

N'essayez jamais de réparer ou modifier le LEAPPAD Platinum – car celui-ci ne contient aucune pièce qui peut être réparée individuellement. Toute aide doit être faite par LeapFrog Enterprises, Inc.

Si le produit a été en contact avec du liquide, troué, ou victime d'un impact fort ou est tombé, arrêter son utilisation immédiatement et contactez le service client LeapFrog.

Informations de sécurité pour l'adaptateur

⚠ ATTENTION : Utilisez uniquement l'adaptateur recommandé (transformateur) pour recharger la pile. (Note : le mot transformateur est, des fois, remplacé par le mot adaptateur.) Utilisez uniquement l'adaptateur fourni.

⚠ ATTENTION : Ne convient pas aux enfants de moins de 3 ans. Une utilisation inappropriée du transformateur (adaptateur) peut causer un risque d'électrocution.

- L'adaptateur doit être branché à la prise murale par un adulte ou un enfant de plus de 8 ans uniquement.

- Ce transformateur n'est pas un jouet, et son utilisation doit être faite uniquement sous la présence d'un adulte.

- Comme avec tous produits électriques, des précautions doivent être utilisées pour éviter des électrocutions.

EU Declaration of Conformity

LeapFrog Enterprises, Inc., hereby declares that this Wi-Fi device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

LeapFrog Enterprises, Inc, déclare que ce produit Wi-Fi est conforme aux règles essentielles requises et autres provisions de la Directive 1999/5/EC.

Certification and Compliance		
U.S. Model: 31565		Contains FCC ID: QDX33500
Canada Model: 31565 Meets CAN ICES-3(B)/NMB-3(B)		Contains IC: 4810A-31500
E.U.		 0700 NB Number

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power OFF and then back ON.

In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by turning the power OFF and then back ON.

Recycling

For information on how this product might be recycled, visit leapfrog.com/recycle or call (800) 701-5327.
UK Consumer Support: +44 (0)1702 200244.
<http://www.leapfrog.com/en-gb/support/ewaste>

Copyrighted Software

Certain software included in this product contains copyrighted software that is

- Le transformateur peut chauffer pendant son utilisation normale. Vérifiez que la ventilation est adaptée et faites attention quand vous utilisez ce produit.

- Ne branchez ou débranchez pas le produit avec des mains mouillées.

- Le transformateur doit être vérifié régulièrement (les lames, la prise, la prise murale et tout autre pièce) car si celui-ci est endommagé, il peut être un risque d'incendie, d'électrocution ou autres blessures. Si celui-ci est abimé, arrêtez de l'utiliser immédiatement et attendez que celui-ci soit réparé avant de le réutiliser. Le câble de cet adaptateur ne peut pas être remplacé, si le câble est abimé, jetez le transformateur en suivant les règles de recyclage de votre région.

Débranchez l'adaptateur (transformateur) si l'une de ces conditions existe :

- Le câble, la prise ou le câble USB est abimé ou cassé.
- Le câble, la prise ou le câble USB sont exposés à la pluie, à du liquide ou une humidité excessive.
- La boite de protection de l'adaptateur est abimée.
- Si vous pensez que l'adaptateur a besoin d'être réparé.

- Débranchez le LEAPPAD™ Platinum** de l'adaptateur avant de le nettoyer.
- Pour nettoyer l'adaptateur, débranchez-le de la prise murale et nettoyez-le avec un chiffon légèrement humide. Ne l'immergez pas dans l'eau, n'utilisez pas de savon ou autres produits chimiques. Laissez le produit sécher avant de le réutiliser. Ne pas brancher l'adaptateur si celui-ci est mouillé ou abimé.

- Ce jouet doit être utilisé avec un adaptateur pour jouets. Cet adaptateur doit exclusivement être utilisé pour recharger la pile Li-Poly de la tablette LEAPPAD Platinum LeapFrog (3.7Vdc, 4000mAh).

⚠ ATTENTION : NE PAS RECHARGER des piles non rechargeables.

Pour l'Europe, ce jouet doit être utilisé avec un adaptateur pour jouets.
Caractéristiques électriques de l'adaptateur secteur : Voltage d'entrée 120 VAC, 60 Hz (pour les États-Unis et Canada); 230 VAC, 50 Hz (Pour le Royaume-Uni et l'Europe); 240 VAC, 50Hz (pour l'Australie et la Nouvelle Zélande). Voltage de sortie : DC5V, 1.5A, 7.5VA.

Exposure to Radio Frequency Energy

LEAPPAD Platinum contains a radio transmitter and receiver. When powered ON, the LEAPPAD Platinum tablet sends and receives radio frequency (RF)

licensed under the General Public License (GPL). A copy of that license is included at <http://www.leapfrog.com/en-us/legal/open-source.html>

Anyone may obtain from us the complete corresponding source code for the software covered by the GPL for a period of three years after our last shipment of this product by contacting LeapFrog customer service at support@leapfrog.com.

Please write "GPL source code for LEAPPAD Platinum" in the subject line of your email. We reserve the right to charge a reasonable fee to cover the costs of shipping and the physical media on which the source code is loaded.

TM & © 2015 LeapFrog Enterprises, Inc. All rights reserved.
leapfrog.com/leappad

Recommended for children ages 3-9 years.
Convient aux enfants de 3 à 9 ans.

LEAPPAD™ Platinum
Model: 31565

LeapFrog Enterprises, Inc.

6401 Hollis Street, Suite 100
Emeryville, CA 94608
(800) 701-LEAP (5327)

Item numbers: 31565
Part Number: 605-12262-A

**For non-Wi-Fi setup, use the included USB cable and install the LeapFrog Connect Application onto your computer. Go to leapfrog.com/connect to download.

energy through its internal antenna. The exposure requirements use units of measurement termed SAR (specific absorption rate). The LEAPPAD™ Platinum tablet has been tested and found to meet the SAR exposure requirements for Wi-Fi operation as established by FCC, IC, and European Union guidelines. The LEAPPAD Platinum tablet has been tested when positioned at 0 mm from the body, without any metal parts in the vicinity of the LEAPPAD Platinum tablet and when properly used with an appropriate LEAPFROG™ Accessory.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications to this unit not expressly approved by LeapFrog could void the EMC and wireless compliance and void the user's authority to operate the equipment. This product demonstrated EMC compliance using compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables to reduce the possibility of causing interference to radios, televisions, and other electronic devices.