



Clear Play Area / Zone de jeu dégagée

Clear enough space for your child to play safely. See Play Area Precautions for more guidance.

Laissez la place nécessaire pour que votre enfant puisse jouer en toute sécurité. Lire les précautions de jeu pour plus d'informations.

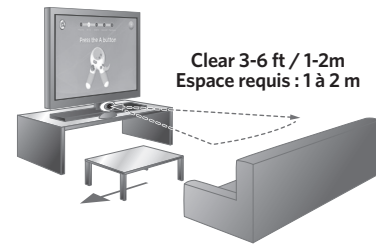

Transforming Controller / Manette de jeu modulable

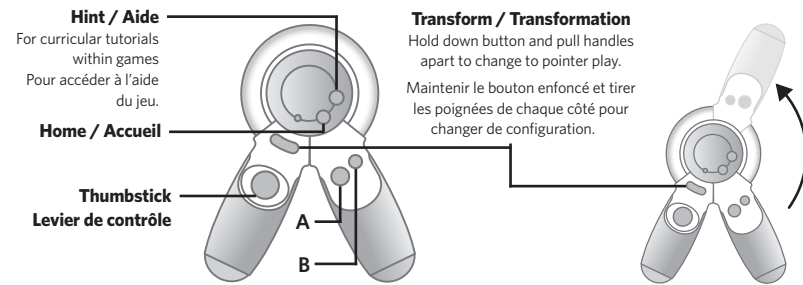

Using Your System / Utilisation de la console

Play Area Precautions

To avoid injury or damage to property, make sure your child has enough space to move freely while playing. Be mindful of other people and clear the play area of obstructions such as pets, furniture and other objects. Check overhead to ensure that fans and light fixtures will not interfere with gameplay.

Ensure LEAPTV™ system cords will not pose a tripping hazard and are out of children's reach at all times.

Children should play at least 3-6 feet or 1-2 meters/metres from the television.

Children should wear clothing appropriate for physical activity, including footwear that provides sufficient traction (for example, avoid socks on hardwood floors).

Précautions de jeu

Afin d'éviter des blessures ou des dommages, assurez-vous que votre enfant ait assez d'espace pour jouer. Faites attention à ce que d'autres personnes, ainsi que les animaux, les meubles ou autres objets soient hors de portée de vos mouvements. Assurez-vous qu'aucun luminaire ou ventilateur puisse gêner vos mouvements lors du jeu.

Assurez-vous que les câbles de la système LEAPTV ne constituent pas un risque de trébucher et sont hors de portée des enfants.

L'enfant doit jouer à une distance d'au moins 1 à 2 mètres de la télévision.

L'enfant doit porter des vêtements appropriés à une activité physique, ainsi que des chaussures pour assurer une bonne adhérence (éviter les chaussettes sur le parquet).

Parent Settings

Parent Settings allow you to control your system settings, including managing child profiles, removing or downloading games and videos you have purchased, changing wireless settings, and setting parental controls. Access to Parent Settings is protected by a 4-digit parent lock code that must be established during initial setup.

Contrôle Parental

Le contrôle parental vous permet de contrôler les paramètres du système de la console. Vous pouvez gérer les profils des enfants, ainsi que le téléchargement et la suppression des jeux et des vidéos que vous avez achetés, modifier les paramètres du réseau wifi et configurer les contrôles parentaux. L'accès au Contrôle Parental est protégé par un code secret à 4 chiffres, qui doit être enregistré lors de la première installation.

Forgetting or Resetting Your Parent Lock

If you have forgotten your 4-digit parent lock code, you can look it up in the leapfrog.com Parent Account you created during system setup and registration. If you need to reset your parent lock, you can do it in Parent Settings or go to leapfrog.com/support/leaptv

Oubli ou ré-initialisation du code parental

Si vous avez oublié votre code secret, vous pouvez le retrouver sur votre Compte Parent sur leapfrog.com, que vous avez créé lors de l'installation et de l'enregistrement de votre console. Si vous souhaitez réinitialiser votre code secret, vous pouvez le faire dans le menu du Contrôle Parental ou aller sur le site leapfrog.com/support/leaptv

Operating Instructions

Wi-Fi connection support. If you experience any difficulty with Wi-Fi connectivity, troubleshooting suggestions are available online at leapfrog.com/support/leaptv

For indoor, dry location use only. Take care not to spill food or liquid of any kind on this product as it may render it inoperable and not serviceable.

Cleaning: Clean your hands before handling the product. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Use the wrist strap: Ensure your child uses the wrist strap during controller gameplay to avoid injury to others or damage to property. Tighten the strap securely but comfortably and instruct your child to maintain a firm grip on the controller at all times.

Pausing gameplay: Some televisions may be damaged when a stationary image appears on the screen for an extended period of time. If you or your child pauses the game, turn the television off until your child is ready to resume play.

Repairing or modifying: Never attempt to repair or modify the LEAPTV™ Transforming Controller as it does not contain any user-serviceable parts. Service should only be provided by LeapFrog Enterprises, Inc. If the product has been in contact with liquids, punctured, or subjected to a severe impact or fall, immediately remove this product from use.

For service information, go to: leapfrog.com/support/leaptv

Instructions Operationnelles

Connexion Wi-Fi : Si vous avez des difficultés à vous connecter à votre connexion Wi-fi, des aides sont disponibles en ligne à leapfrog.com/support/leaptv

A utiliser uniquement en intérieur, dans un endroit sec : Faites attention à ne pas renverser de nourriture ou tout autre sorte de liquide sur ce produit car cela pourrait le rendre inopérable et inutilisable.

Pour nettoyer : Lavez vos mains avant de manipuler le produit. Nettoyez le produit avec un chiffon légèrement humide (eau froide). N'utilisez pas de savon, de lessive ou autres produits chimiques. Ne jamais immerger le produit dans l'eau.


Utilisation de la dragonne : Assurez-vous que votre enfant porte la dragonne pour éviter de blesser autrui ou abimer les objets qui vous appartiennent. Assurez-vous que la dragonne est correctement serrée et que votre enfant tient la manette fermement et dites-lui de ne jamais la lâcher même si la dragonne est attachée.

Mode pause : Certains téléviseurs ou écrans peuvent être endommagés si une image fixe est affichée trop longtemps à l'écran. Si vous ou votre enfant mettez le jeu sur pause, éteignez le téléviseur jusqu'à ce que vous soyez prêt(e) à reprendre votre partie.


Réparer ou modifier la manette LEAPTV™ : N'essayez jamais de réparer ou modifier la manette LEAPTV - car celui-ci ne contient aucune pièce qui peut être réparée individuellement. Toute aide doit être faite par LeapFrog Enterprises, Inc. Si le produit a été en contact avec du liquide, troué, ou victime d'un impact fort ou est tombé, arrêter son utilisation immédiatement.


Pour toute information, visitez leapfrog.com/support/leaptv


Important Safety Instructions:


 Please read all the Important Safety Instructions prior to using LEAPTV Transforming Controller. Failure to follow these safety instructions could result in injury or damage to LEAPTV Transforming Controller, LEAPTV System or other property.


 **WARNING: CHOKING HAZARD** - Small parts. Not suitable for children under 3 years.

 **WARNING:** Repetitive motion and playing video games may cause eye or muscle strain. Have the child take a 10- to 15-minute break every hour.

 **CAUTION:** Adult supervision is required at all times while children are playing with this product. Parents of children with injuries or other limitations should consult a doctor before use.

 **CAUTION:** To allow adequate space for your child to move, ensure that the play area is a safe distance away from walls, windows, furniture or other objects.

 **CAUTION:** To avoid choking, do not allow your child to eat or drink during play.

 **CAUTION:** Routinely check this product for proper and safe condition. If there is any damage or broken parts, remove product from use.

Battery Information

The Transforming Controller requires 2AA alkaline batteries (called LR6 in some countries), not included.

Battery Removal and Installation Instructions


1. Open the battery door.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of the visible battery.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

Battery Safety


Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries to avoid leaking. Dispose of used batteries properly. Remove batteries during prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.


- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries or types of batteries (i.e. alkaline/standard).
- **DO NOT** short circuit supply terminals.
- **DO NOT** charge non-rechargeable batteries.
 - Rechargeable batteries are only to be charged under adult supervision.
 - AA or LR6-size rechargeable batteries must be removed from the product before being charged.


Informations Importantes de sécurité :


 Veuillez lire toutes les informations importantes de sécurité avant d'utiliser la manette LEAPTV™. Ne pas appliquer ces consignes peut engendrer des risques d'incendie, d'électrocutions, autres blessures ou dommages à la manette LEAPTV, au système LEAPTV ou à d'autres composants.


 **AVERTISSEMENT :** Ne convient pas aux enfants de moins de 3 ans. RISQUE D'ETOUFFEMENT : Petits éléments risquant d'être ingérés.

 **AVERTISSEMENT :** Jouer à des jeux vidéo et des mouvements répétitifs peuvent causer une fatigue oculaire ou la fatigue musculaire. Demandez à l'enfant de prendre une pause de 10 à 15 minutes toutes les heures.

 **ATTENTION :** La supervision d'un adulte est requise lorsque l'enfant joue avec ce produit. Les parents d'enfants handicapés devraient consulter un médecin avant l'utilisation de ce produit.

 **ATTENTION :** Pour laisser suffisamment d'espace aux mouvements du corps, assurez-vous que l'aire de jeu est à une distance sécuritaire des murs, des fenêtres, des meubles ou d'autres objets.

 **ATTENTION :** Ne pas laisser un enfant manger ou boire pendant qu'il joue avec ce produit, afin d'éviter les risques d'étouffement.

 **ATTENTION :** Régulièrement vérifier que ce jouet est en bon état et qu'il ne pose pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+ / -) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent. Les piles incluses dans les produits lors de l'achat sont uniquement destinées aux démonstrations en magasin et doivent être remplacées pour améliorer les performances du produit.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS court-circuiter les terminaux d'alimentation.

NE PAS recharger des piles non rechargeables.

- Le rechargement des piles rechargeables doit être effectué sous la supervision d'un adulte.
- Les piles rechargeables doivent être retirées du contrôleur d'être chargées.

Exposure to Radio Frequency Energy

The LEAPTV™ Transforming Controller contains a radio transmitter and receiver. When powered ON, the system sends and receives radio frequency (RF) energy through its internal antenna.

The transforming controller has been tested and found to meet the SAR exposure requirements for Wi-Fi operation as established by FCC, IC, and European Union guidelines. The controller has been tested when positioned at 0 mm from the body, without any metal parts in the vicinity and when properly used with the LEAPTV console.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications to this unit not expressly approved by LeapFrog could void the EMC and wireless compliance and void the user's authority to operate the equipment. This product demonstrated EMC compliance using compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

Canadian Compliance This Class B digital apparatus complies with Canadian ICES-003. CAN ICES-3(B)/NMB-3(B). Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada. CAN ICES-3(B)/NMB-3(B).

European Community Compliance Statement The equipment complies with the RF Exposure Requirement 1999/519/EC, Council Recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0-300 GHz). This wireless device complies with the R&TTE Directive.




EU Declaration of Conformity LeapFrog Enterprises, Inc. hereby declares that this Wi-Fi device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Environmental Phenomena The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power OFF and then back ON. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by turning the power OFF and then back ON.

Recycling For information on how this product might be recycled, visit leapfrog.com/recycle or call (800) 701-5327.

TM & © 2014 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

Certification and Compliance	
	Contains FCC ID: QDX31704 Model: 31704
CANADA:	Model 31704 Contains IC: 4810A-31704 CAN ICES-3(B)/NMB-3(B)
E.U.	 

**Recommended for children ages 3-8 years.
Convient aux enfants de 3 à 8 ans.**

Model: **LEAPTV™ Model: 31704**

LeapFrog Enterprises, Inc.
6401 Hollis Street, Suite 100
Emeryville, CA 94608
(800) 701-LEAP (5327)

Item number: 31704

Part number: 605-12218-B






Getting Started / Pour commencer


Please read all Operating and Important Safety Instructions before using the LEAPTV™ Transforming Controller. Failure to follow Safety Instructions could result in injury or damage to the LEAPTV Transforming Controller, LEAPTV System or other property.

Veuillez lire le Mode d'emploi ainsi que les instructions de sécurité avant d'utiliser la manette de jeu modulable LEAPTV. Le non-respect des instructions de sécurité peut entraîner des dommages à la manette LEAPTV, au système LEAPTV ou à d'autres composants.

What's Included / Inclus : Controller, Wrist Strap / La manette de jeu et la dragonne.

Add an Additional Controller / Ajouter une manette de jeu supplémentaire

- Insert two AA batteries (not included). When the batteries are inserted, the light on the end of the controller will glow green in color.
- Power on your TV and the LeapTV console and wait for it to display the Home Page.
- On the controller, simultaneously press the Home & Hint buttons ( ) for three seconds.
- After the light on the end of the controller turns blue, press the SYNC button () located below the cartridge slot on the console
- When the light turns magenta in color, your controller is paired to the console.

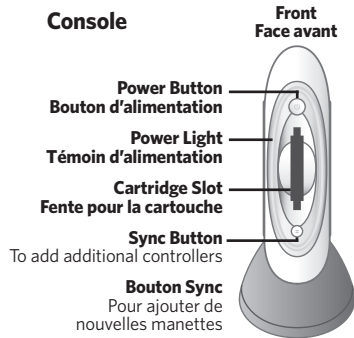

- Insérez 2 piles AA (non incluses). Quand les piles sont insérées, la lumière au bout de la manette deviendra verte.
- Allumez votre téléviseur et votre console LeapTV puis attendez de voir l'écran principal.
- Appuyez sur le bouton Écran principal et Aide en même temps pendant 3 secondes.
- Quand la lumière au bout de la manette devient bleu, appuyez sur le bouton SYNC situé en dessous de la fente pour la cartouche.
- Quand la lumière devient magenta, la manette est connectée à la console.