

## Next steps for learning fun!

**FCC Compliance Statement.** This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment. CAN ICES-3 (B) / NMB-3 (B)

**Environmental phenomena.** The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

**Impact de l'environnement.** Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

**Recycle.** Find out how to recycle this product at [leapfrog.com/recycle](http://leapfrog.com/recycle) or call (800) 701-5327. For UK consumers, visit [leapfrog.co.uk/recycle](http://leapfrog.co.uk/recycle).



**Count & Crawl Kitty**  
9+ months



**My Pal Scout/Violet™**  
6+ months



**Shapes & Sharing Picnic Basket**  
6+ months

### CONSUMER SUPPORT

**U.S.** ..... [leapfrog.com/support](http://leapfrog.com/support)  
**U.K.** ..... [leapfrog.co.uk/support](http://leapfrog.co.uk/support)

**Canada** ..... [leapfrog.ca/support](http://leapfrog.ca/support)  
**Australia** ..... [funtastic.com.au](http://funtastic.com.au)

### WARRANTY INFORMATION

**Limited warranty:** Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country.

**Garantie limitée period:** Veuillez consulter notre site Web à l'adresse [www.leapfrog.com](http://www.leapfrog.com) pour obtenir l'intégralité des informations de garantie fournies dans votre pays.

TM & © 2016 LeapFrog Enterprises, Inc. All rights reserved. LeapFrog.com

**For ages 9 months and up. Convient aux enfants à partir de 9 mois.**  
Item number 19317/ Part number 605-12309-A

Products sold separately and may not be available in all countries. Actual products may vary.



# Scout's Goodnight Light™



## Parent Guide


This guide contains important information.  
Please keep it for future reference.



Ahead.

Find out more at [leapfrog.com](http://leapfrog.com)

## Features

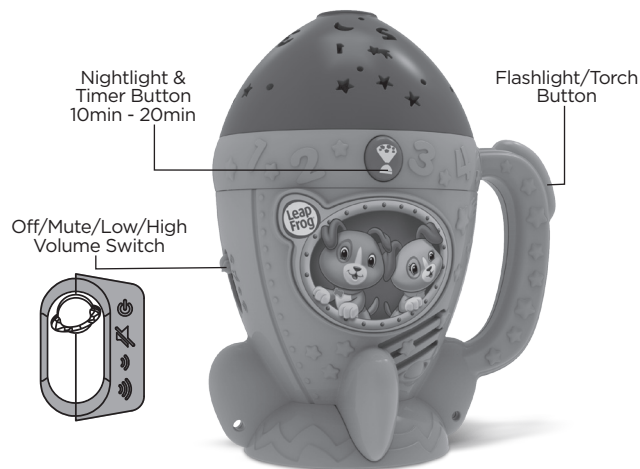

### Get Started

To turn the toy on, slide the yellow volume switch from the Off position to Low or High volume, or Mute if you want to use the flashlight/torch without audio or see the nightlight starry projection without music.

### Two Ways to Play

#### Flashlight/Torch Adventure Fun

Press the yellow flashlight/torch button to turn on the flashlight/torch and see a colorful/colorful projection of eight planets. Hear Scout count the planets and talk about their names and colors/colours.

#### Bedtime Starry Night Quiet Time

Press the red nightlight timer button to turn on the three-color/colour LED projection, and watch stars twinkle on the ceiling as your child falls asleep to counting and colors/colours lullabies,

white noise or peaceful sleep-inducing environmental sounds. The first touch of the red button will set the timer to 10 minutes, and a second touch to 20 minutes. Please note that pressing the Flashlight/Torch Button will interrupt and override the Nightlight Mode. Push the red timer button again to reset the nightmode.

**Battery Information.** Requires 3 AA (called LR6 in some countries) alkaline batteries. Nécessite 3 piles alcalines AA (appelées LR6 dans certains pays).

#### Battery removal and installation instructions

1. Open the battery door with a Phillips screwdriver.
2. If used or dead batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

**Battery Safety.** Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (e.g., alkaline/standard).

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** short-circuit the supply terminals.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

**Sécurité relative aux piles.** Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** recharger des piles non rechargeables.

**NE PAS** court-circuiter les terminaux d'alimentation.

Les accumulateurs doivent être chargés uniquement sous le contrôle d'un adulte.

Les accumulateurs doivent être enlevés du jouet avant d'être chargés.

**For indoor, dry-location use only.** Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

**Utiliser uniquement en intérieur, dans des lieux secs.** Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser un liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). N'utilisez pas de savon, de lessive, ou d'autres produits chimiques. Ne jamais immerger le produit dans l'eau. Éviter une exposition prolongée aux températures extrêmes et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.

**CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

**ATTENTION:** Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

**CAUTION:** All packing materials, including tape, plastic sheets, packaging locks and tags, are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:** Les matériaux d'emballage (y compris le ruban adhésif, le plastique de protection, le système de verrouillage et les étiquettes) ne font pas partie de ce jouet. Veuillez vous en débarrasser pour la sécurité de votre(vos) enfant(s).

**CAUTION:** To be used under the direct supervision of an adult.

**ATTENTION:** Doit être utilisé sous la présence directe d'un adulte.

**CAUTION:** This toy is not intended for crib/bassinets use.

**ATTENTION:** Ce jouet n'est pas destiné aux lits pour bébé ni aux landeaux.

**WARNING:** Keep toy away from infant's face.

**ATTENTION:** Ce jouet doit être gardé à distance du visage de l'enfant.

LED light is very bright. Do not stare at the operating light source.

**Warm Light.** Light can have different color/colour temperatures, indicated in units called Kelvin (K). Lights with a low Kelvin value produce a warm, more cosy/cosy light, while those with a higher Kelvin value produce a cool, more energizing/energising light. This light offers warm white light for a cosy/cosy atmosphere.